



Philips  
DVD player

1080p HDMI

DivX Ultra

DVP5982C1



# The best HDMI mate for any TV

With upconversion to 1080p

Be impressed with this Philips DVD player with HDMI digital video and audio connection. Step into another home entertainment arena as you immerse yourself with High Definition video (720p / 1080i/1080p).

## Brings audio and video to life

- Smart Sound optimizes audio settings
- 192kHz/24 bit audio DAC enhances analogue sound input
- High definition JPEG playback for images in true resolution
- Progressive Scan component video for optimized image quality
- 1080p HDMI upconverts to high definition for sharper images

## Plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays DivX, MP3, WMA and JPEG digital camera photos
- DivX Certified for standard playback of DivX videos


## Easy to use

- USB Direct plays photos and music from USB flash drives

**PHILIPS**  
sense and simplicity

# Highlights

## 192kHz/24 bit audio DAC

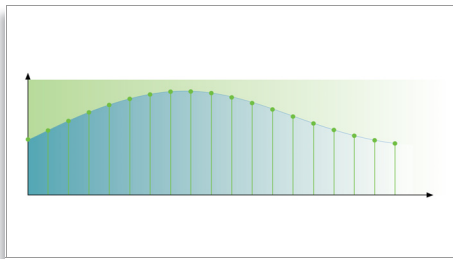


192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

## High definition JPEG playback



High definition JPEG playback lets you view your pictures on your television in resolutions as high as two megapixels. Now you can view your digital pictures in absolute clarity, without loss of quality or detail - and share them with friends and family in the comfort of your living room.

## Progressive Scan

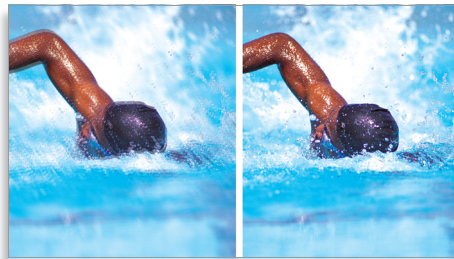

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

## 1080p HDMI



1080p HDMI upconversion delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog -


delivering perfect picture and sound quality, completely free from noise.

## DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

## Plays it all

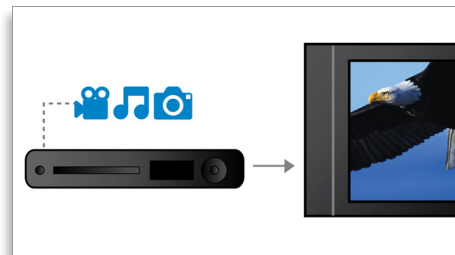

Play virtually any media format you want - whether they be DivX, MP3s, WMA or JPEGs. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system - in the comfort of your living room.



# Specifications

## Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive Scan, Smart Picture, Video upsampling, Video upscaling, High Def (720p, 1080i, 1080p)

## Sound

- D/A converter: 24 bit, 192 kHz
- Signal to noise ratio: 90
- Distortion and Noise (1kHz): 65 dB
- Crosstalk (1kHz): 70 dB
- Dynamic Range (1kHz): 80 dB
- Sound System: Dolby Digital
- Frequency response: 30-20000 Hz

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DivX, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra
- Video disc playback system: NTSC, PAL

## Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, CD-R/RW, WMA-CD, Audio CD
- Compression format: Dolby Digital, MP3, PCM, WMA
- MP3 bit rates: 32 - 320 kbps

## Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Compression Format: JPEG, TIFF
- Picture Enhancement: Flip photos, Rotate, Zoom,

Slideshow with MP3 playback, High Definition Resolution

## Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: DivX, MP3, JPEG Still pictures

## Connectivity

- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, HDMI output, Digital coaxial out, ComponentVideo out Progressive

## Convenience

- Child Protection: Parental Control, Child Lock
- On-Screen Display languages: English, Mexican Spanish, Canadian French

## Accessories

- Included Accessories: 2 x AAA Batteries, Audio/Video cable, Quick start guide, Remote Control, User Manual, Product Registration Card, Warranty Leaflet

## Dimensions

- Set dimensions (W x H x D): 435 x 38 x 210 mm
- Packaging dimensions (W x H x D): 490 x 82 x 296 mm

## Power

- Power supply: 120V, 60Hz
- Power consumption: < 12 W
- Standby power consumption: < 0.8 W



Issue date 2009-11-06

Version: 1.0.6

12 NC: 8670 000 33184  
UPC: 6 09585 14136 0

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)