



Philips
Docking station with
Bluetooth®

with Lightning connector
for iPod/iPhone/iPad
DAB+, FM, Dual alarm
10W, time & alarm backup

DTB297

Wake up to great music

with this iPod/iPhone/iPad docking station

Awake gently to great music from your iPod/ iPhone/iPad with Lightning connector, or get updated with news from the radio. Make your mornings brighter with crystal clear sound and stream music wirelessly from smart devices via Bluetooth

Advanced versatility

- Wireless music streaming via Bluetooth

Enrich your sound experience

- Fast charging and play music via Lightning connector
- DAB and FM compatible for a complete radio experience
- Bass Reflex Speaker System delivers a powerful, deeper bass

Easy to use

- Auto sync time via iPod/iPhone dock with Lightning connector
- Audio-in for easy portable music playback
- Time and alarm backup for on-time wakeup even with power cut

Start the day your way

- Dual alarm to wake you and your partner at different times
- Weekday/ weekend alarm setting to complement your lifestyle

PHILIPS

Docking station with Bluetooth®
with Lightning connector for iPod/iPhone/iPad, DAB+, FM, Dual alarm, 10W, time & alarm backup

DTB297/10

Highlights

Bluetooth music streaming

Listen to all your favorite songs on a speaker that delivers fabulous sound. This Philips docking speaker plays music from your Android powered devices via Bluetooth. Simply download the free Philips DockStudio app and the Bluetooth will automatically be turned on and connect once when your device is docked. You get to enjoy powerful and outstanding sound, with unbeatable convenience. Hardly anything else sounds as good.

Play and charge via Lightning



Enjoy your favorite music while charging your iPod/iPhone/iPad via the new Lightning connector! Just dock it directly on the speaker to play your hand-picked tunes in superb sound. It also charges your device quickly while playing, so you don't have to worry about the battery running out.

Auto sync time


Auto sync time via iPod/iPhone dock with Lightning connector

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

Dual alarm

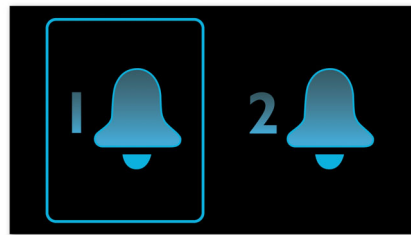

The Philips audio system comes with two alarm times. Set one alarm time to wake you up and the other time to wake up your partner.

Time and alarm backup

When there is a power failure, this intelligent clock will still maintain and keep its reliable time and your settings. The scheduled alarm remains active even when its display is off - all thanks to a pre-installed battery. When the power comes back on, there is no need to adjust the clock or reinstate settings. More amazingly, even if power supply is not restored, the battery provides enough energy for the buzzer to go off at the alarm time you have set - making sure you never wake up late.

Weekday/ weekend alarm



Designed with modern day lifestyles in mind, this clock radio has a dual alarm feature, allowing you to set different alarm times for weekdays and weekends or even vary the alarm settings for couples. The alarm settings can be tailored for the same alarm times for the entire week from Monday to Sunday. Or you can set the alarm for an early start on weekdays from Monday to Friday, and lazy lie-ins for Saturday and Sundays. Whichever you choose, this convenient features saves you from the hassle of fiddling with different alarm times every single night.



Docking station with Bluetooth®

with Lightning connector for iPod/iPhone/iPad, DAB+, FM, Dual alarm, 10W, time & alarm backup

Specifications

iPhone compatibility

- via Bluetooth: iPhone 5, iPhone 4S, iPhone 4, iPhone 3GS, iPhone 3G, iPhone 6, iPhone 6 Plus, iPhone 6S, iPhone 6S plus, iPhone SE
- via Lightning connector: iPhone 5, iPhone 6, iPhone 6 Plus, iPhone 6S, iPhone 6S Plus, iPhone SE

iPod compatibility

- via Bluetooth: iPod touch 5th generation, iPod touch 4th generation, iPod touch 3rd generation, iPod nano 7th generation
- via Lightning connector: iPod nano 7th generation, iPod touch 5th generation

iPad compatibility

- via Bluetooth: iPad 4, iPad 2, iPad, iPad mini, iPad Air 2, iPad mini 2, iPad mini 4, iPad Pro
- via Lightning connector: iPad mini, iPad 4, iPad Air 2, iPad mini 2, iPad mini 4, iPad Pro

Bluetooth® wireless technology

- Version: V2.1 + EDR
- Profiles: A2DP, AVRCP

Audio Playback

- Cradle playback mode: Charging iPhone, Charging iPod, Fast forward and backward, Play and Pause, Next and Previous track

Tuner/Reception/Transmission

- Tuner bands: DAB (Band III), FM
- DAB: smart scan, menu, info display
- DAB frequency range: 174.9 - 239.2 MHz
- FM frequency range: 87.5 - 108 MHz
- No. of preset stations: 20 (DAB), 20 (FM)
- Auto digital tuning
- Antenna: FM Antenna

Clock

- Type: Digital
- Time format: 12H, 24H

Alarm

- No. of alarms: 2

- Alarm source: Dock, DAB radio, FM radio, Buzzer
- 24 hours alarm reset
- Snooze (repeat alarm): Yes, 9mins
- Sleep timer: 15/ 30/ 60/ 90/ 120 mins

Convenience

- Display Type: LCD
- Backlight color: White
- Display brightness: High/ Mid/ Low

Sound

- Sound system: stereo
- Output power (RMS): 2 x 5W
- Volume control: up/down

Loudspeakers

- Built-in speakers: 2
- Main Speaker: Bass Reflex Speaker System

Connectivity

- Bluetooth
- Audio in (3.5mm)

Power

- Mains power: 100-240V, 50/60Hz
- Power type: AC input
- Backup battery: AA (not included)
- Number of batteries: 2

Dimensions

- Product dimensions (WxDxH): 263 x 163 x 135 mm
- Packaging dimensions (WxDxH): 319 x 227 x 185 mm
- Weight: 1.13 kg
- Weight incl. Packaging: 2.1 kg

Accessories

- AC/DC adaptor: with detachable plug (VDE, UK & AUS)
- Quick start guide
- World Wide Warranty leaflet



Issue date 2016-06-25

Version: 3.0.5

12 NC: 8670 001 07648
EAN: 87 12581 69990 1

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com