

Philips
2.1 Home theatre

3D Blu-ray

iPod/iPhone ready

HTS3271



Great clarity for movies and music

Obsessed with Sound

Start enjoying every sound detail in your favourite movies and music with this compact 3D Blu-ray home theatre. The mineral-based speaker cones built into its speakers deliver great clarity of every sound detail.

Great listening experience

- Mineral-based speaker cones for extra clarity
- Class D amplifier for a truly dynamic and clear sound
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- 400 W RMS power delivers great sound for movies and music

Designed to enhance your cinema at home

- Touch panel for intuitive playback and volume control
- Compact design that fits with your flat TV

Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Smart TV to enjoy online services and access multimedia on your TV
- Music iLink to enjoy music from iPod/iPhone/MP3 player
- Hi-Speed USB 2.0 Link plays video/music from USB flash drives
- EasyLink to control all HDMI CEC devices via a single remote
- Optional Wi-Fi accessory to wirelessly connect to Internet

PHILIPS
sense and simplicity


Highlights

Mineral-based speaker cones




Mineral-based speaker cones for extra clarity

Class D amplifier

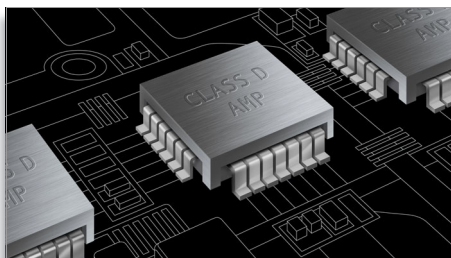

The Class D Amplifier takes an analogue signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to produce the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, the Class 'D' Digital Amplifier has more than 90% efficiency compared with traditional AB amplifiers. This high efficiency translates into a powerful amplifier with a small footprint.


Dolby TrueHD and DTS-HD

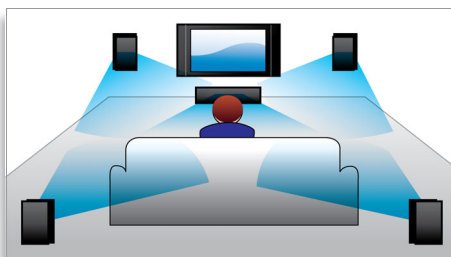

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master


Audio Essential complete your high definition entertainment experience.

400 W RMS power

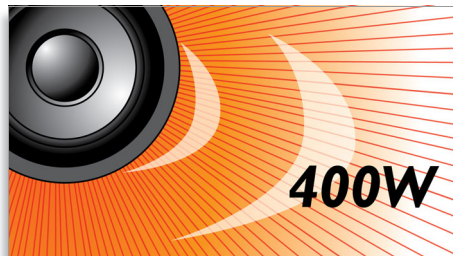

400 W RMS power delivers great sound for movies and music

Touch panel for playback

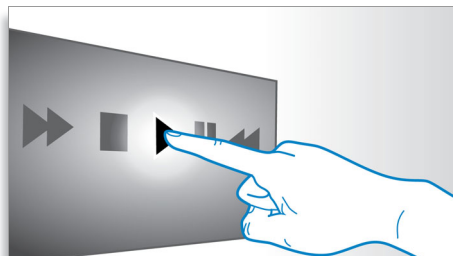

Intuitive touch panel control allows you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the front panel.

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080 x 1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created. Premium 3D movie releases on Blu-ray offer a wide, high

quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

Smart TV



Philips home theatre systems with Smart TV offer you an array of enhanced features, including Net TV, DLNA and MyRemote. Net TV brings a wide range of online information and entertainment to your TV. Simply select Net TV in the Home Menu and start browsing for services like video-on-demand shops* for the latest releases in HD, and Catch-up TV. With DLNA, you can access photos, music and movies stored on your PC from the comfort of your sofa. Can't find the remote control? Simply use your smartphone or tablet PC to control your home theatre via the Philips MyRemote app.

Music iLink



Philips Music iLink allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player or laptop via a simple connection to your home theatre. Simply connect your audio device to the Music iLink jack to enjoy your music with the superior sound quality of the Philips home theatre.

Optional Wi-Fi accessory

Optional Wi-Fi accessory to wirelessly connect to Internet

Specifications

Accessories

- Compatible accessories: DCK3060 Dock for iPod/iPhone, WUB1110 Wi-Fi USB Adaptor
- Included accessories: Batteries for remote control, CVBS video cable, FM antenna, Power cord, Quick start guide, Remote Control, World Wide Warranty leaflet

Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320 kbps

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, WMV HD, WMV SD

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R/BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, DivX, mkv, mp4, mpeg, mpg, wmv

Connectivity

- Smart TV: MyRemote, Net TV, SimplyShare
- Front/Side connections: Music iLINK, USB
- Rear Connections: AUX IN 1, AUX IN 2, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Easy-Fit Speaker Connectors, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, SD/SDHC Card slot, Wi-Fi USB slot

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep colour

Dimensions

- Main Unit (W x H x D): 360 x 58 x 315 mm
- Main Unit Weight: 2.6 kg
- Satellite Speaker (W x H x D): 95 x 161 x 87 mm
- Satellite Speaker Weight: 0.55 kg
- Satellite Speaker Cable length: 4 m
- Subwoofer (W x H x D): 123 x 307 x 369 mm
- Subwoofer Weight: 3.8 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 393 x 275 x 550 mm
- Weight incl. Packaging: 9 kg

Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Drivers per Satellite speaker: 1 x 3" Full range woofer
- Satellite speaker freq range: 150–20k Hz
- Satellite speaker impedance: 6 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20–150 Hz
- Subwoofer impedance: 3 ohm

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Power

- Power consumption: 75 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0.5 W

Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Dolby Virtual Speaker, Dolby Digital Prologic II, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio
- Satellite speaker output power: 100 W x 2
- Subwoofer output power: 200 W
- Total Power RMS @ 30% THD: 400 W

Sustainability

- Packaging: Electronic User Manual

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Pre-set Channels: 40



Issue date 2012-07-17

Version: 2.1.6

12 NC: 8670 000 76398
EAN: 87 12581 60332 8

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* For more information, visit www.philips.com/blu-ray