



Philips  
Mini Hi-Fi System

with 30-pin connector

for iPod/iPhone  
CD, MP3-CD, USB Direct, FM  
100 W



FWM200D

## Enjoy iPod/iPhone music in powerful sound

### Obsessed with sound

Experience uninterrupted enjoyment of your CD/MP3/WMA songs for up to 10 hours on the FWM200D Hi-Fi system. Extend your music pleasure by listening to your tunes from your iPod/iPhone and portable player - with USB Direct and MP3 player-in.

#### Enrich your sound experience

- 100 W RMS total output power
- MAX Sound for instant power boost
- Dynamic Bass Boost for deep and dramatic sound
- Digital Sound Control for optimised music style settings

#### Enjoy your music from multiple sources

- Play and charge your iPod/iPhone
- USB Direct for MP3/WMA music playback
- Play MP3-CD, CD and CD-R/RW
- MP3 Link for portable music playback


#### Easy to use

- Dock any iPod/iPhone, even in its case
- Single remote control for the system and iPod
- Wake-up and sleep timer functions

**PHILIPS**

# Highlights

## 100 W RMS total output power

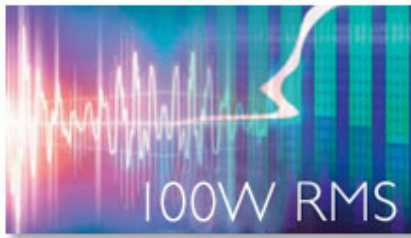

RMS refers to Root Mean Square, which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. Essentially, amplifiers are limited by the electrical energy they can amplify and loudspeakers by the electrical energy they can convert into sound energy, without distorting the audio signal. The higher the wattage, the better the sound power emitted by the speaker.

## Dock iPod/iPhone in its case



Smartly designed spring-loaded docking port effortlessly accommodates any iPod or iPhone, without special adapters. What's more, it works even when most protective cases are on – just dock your iPod or iPhone as it is. Now you can truly have fuss-free enjoyment of your music.

## MAX Sound



MAX Sound technology produces an instant boost in the bass, maximising volume performance and instantly creating the most impressive listening experience with just the touch of a button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting the bass and volume to maximum levels, without distortion. The end result is a noticeable amplification of both sound spectrum and volume and a powerful audio boost that will add mileage to any music.


## Play and charge your iPod/iPhone

Play your favourite music from your iPod/iPhone. Your iPod/iPhone will be charged when it is in the docking station, so you are always ready to use it when you are ready to go.

## USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.



Issue date 2014-07-18

Version: 2.0.5

12 NC: 8670 000 76347  
EAN: 87 12581 60317 5

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

# Specifications

## Sound

- Output power (RMS): 100 W
- Sound Enhancement: Dynamic Bass Boost, Digital Sound Control

## Loudspeakers

- Main Speaker: 2" tweeter, 2-way, Bass Reflex Speaker System, 5.25" woofer
- Number of Loudspeakers: 2

## Audio Playback

- Number of Discs: 1
- Loader Type: Tray
- Playback Media: CD, CD-R, CD-RW, MP3-CD
- USB Direct Modes: Fast Reverse/Fast Forward, Play/Pause, Previous/Next, Programme Play, Repeat, Stop, Shuffle
- Disc Playback Modes: Repeat/one/disc/programme, Shuffle Play, Fast Forward/Reverse, Next/Previous Track Search, Repeat Play
- Programmable Tracks: 20
- Cradle playback mode: Charging iPhone, Charging iPod, Fast forward and reverse, Menu, Up and Down, Next and Previous track, Play and Pause

## Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning
- Auto store
- Number of Pre-set Channels: 20

## Convenience

- Alarms: CD Alarm, USB alarm, Sleep timer
- Clock: On main display
- Display Type: LCD
- Eco Power Standby: 1 watt

## Connectivity

- Aux in: 3.5 mm stereo (MP3 Link)
- USB: USB host

## Power

- Power supply: 200-240 V, 50 Hz
- Standby power consumption: < 2 W

## iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4

## iPod compatibility

- Compatible with: iPod, iPod 1G, iPod 5th Generation, iPod 6th Generation, iPod mini, iPod nano 1st generation, iPod nano 2nd generation, iPod nano 3rd generation, iPod nano 4th generation, iPod nano 5th generation, iPod nano 6th generation, iPod touch, iPod touch 2nd gen 8/16/32 GB, iPod touch 2nd generation, iPod touch 3rd generation, iPod with colour display

## Accessories

- Included accessories: Remote Control, Guarantee booklet, Quick Use Guide
- User Manual: English

## Dimensions

- Set dimensions (W x H x D): 220 x 313 x 272 mm
- Packaging dimensions (W x H x D): 705 x 372 x 321 mm
- Weight incl. Packaging: 9.0 kg