




Philips  
Noise Cancelling  
Headphones

#### High resolution audio

On-ear  
Deluxe memory foam cushions  
Compact folding

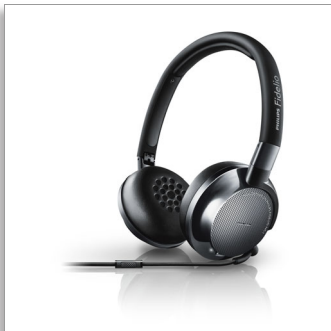

NC1

## Hear nothing but first class sound

Enjoy superior noise cancellation with the Fidelio NC1. All you get is uncompromised high fidelity sound, minus the noise. Compact foldability and long-wearing comfort make it the best sound companion on long haul or daily commutes.

#### Uncompromised high fidelity sound

- High Resolution audio reproduces music in its purest form
- Optimized 40mm neodymium drivers for high fidelity sound
- Standalone acoustic chamber for sound precision

#### Art of Noise Cancellation

- Hybrid technology for superior noise cancellation
- Specially tuned for consistent high fidelity sound
- Zero hiss to ensure uninterrupted enjoyment
- Smart power solution keeps you connected to your music
- 30 hours of ANC play time and unlimited music and talk time

#### Travel in Style

- Ergonomic deluxe memory foam cushions for long-haul comfort
- Compact multi-way folding for easy carrying and storage
- In-line control and mic switches you between music and calls
- Advanced design styling with aluminum and rubber accents



reddot award 2015  
winner



# PHILIPS

## Noise Cancelling Headphones

High resolution audio On-ear, Deluxe memory foam cushions, Compact folding


# Highlights

### High resolution audio



High Resolution Audio offers the best in audio performance, reproducing original studio master recordings more faithfully than 16bit/44.1kHz CD formats. This uncompromising quality makes High Resolution Audio the best sound companion for the music lover. Fidelio headphones meet the stringent standards required for the Hi-Res Audio stamp of quality. Whether enjoying your Hi-Res collection or a more traditional music source, the smooth extended high frequencies of the Fidelio headphone range help you get more from your music.

### Superior noise cancellation

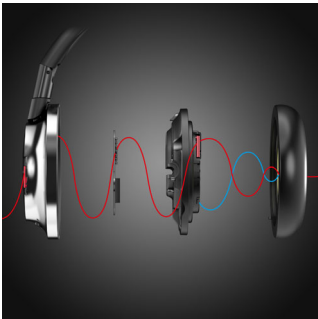

Fidelio NC-1 uses a feed-forward and feed-backward active noise cancellation (ANC) solution, which means there are 4 microphones implemented inside and outside the ear cans to capture noise for advanced processing. The feed-forward ANC (mic outside the ear can) covers a wider bandwidth of frequencies, while the feed-backward ANC

(mic inside the ear can) provides fortified noise cancellation. This combination ensures cancellation over a wide frequency range and to a deeper extent for optimized music enjoyment in any environment.

### 40mm high definition drivers



Each speaker driver is carefully hand picked, tuned and tested before being paired to ensure the most balanced natural sound. The 40mm drivers utilize high power neodymium magnets to deliver true high definition sound in a wide dynamic range, right down to the most minute details.

### Consistent high fidelity sound



The noise cancellation feature of the Fidelio NC-1 is specially tuned with optimal sound performance in mind. Challenging the perception that noise cancelling headphones cannot deliver high performance sound, the NC-1 is engineered to deliver the best audio quality whether you're in a quiet or noisy environment.

NC1/27

### Advanced design styling



Advanced design styling with aluminum and rubber accents

### Compact multi-way folding



The Fidelio NC-1's lightweight, slim and compact foldable construction in a stylish design makes it the perfect travel companion. With multiple ways of folding the headphones, you can decide how the headphones can fit efficiently in your travel bag or even in the pocket of airline seats.

### Deluxe memory foam cushion

Materials used for the Fidelio NC-1 are carefully selected to ensure long-wearing comfort and optimal sound performance. The ear cushions are crafted with memory foam, which moulds it self perfectly to the shape of your ears. Not only does it provide ideal ergonomic fit but also enhances the headphone's noise cancellation performance. The outer cushion is a combination of fabric and soft protein leather, which perfectly reduces both ear surface pressure and heat build up. These elements make NC-1 an extremely wearable and comfortable companion for long-haul journeys.

# Specifications

## Sound

- Acoustic system: Closed
- Magnet type: Neodymium
- Maximum power input: 150 mW
- Sensitivity: 107 dB
- Speaker diameter: 40 mm
- Impedance: 16 ohm
- Frequency response 7-40000 Hz: in noise cancellation off mode

## Connectivity

- Cable length: 1.2 m
- Connector: 3.5 mm stereo
- Finishing of connector: Gold plated
- Type of cable: Copper

## Accessories

- Airplane plug: Yes, 2 \* 3.5 mm
- 1.0 m USB charging cable
- 1.2 m audio cable
- Travel case

## Packaging dimensions

- UPC: 6 09585 24822 9
- Packaging dimensions (W x H x D): 16.8 x 20.2 x 8.6 cm
- Packaging dimensions (W x H x D): 6.6 x 8 x 3.4 inch
- Gross weight: 0.5276 kg

- Gross weight: 1.163 lb
- Nett weight: 0.34 kg
- Nett weight: 0.75 lb
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.1876 kg
- Tare weight: 0.414 lb
- Type of shelf placement: Both

## Outer Carton

- Gross weight: 2.822 lb
- Gross weight: 1.28 kg
- GTIN: 1 06 09585 24822 6
- Outer carton (L x W x H): 18.5 x 17.8 x 21.9 cm
- Outer carton (L x W x H): 7.3 x 7 x 8.6 inch
- Nett weight: 1.499 lb
- Nett weight: 0.68 kg
- Number of consumer packagings: 2
- Tare weight: 1.323 lb
- Tare weight: 0.6 kg

## Product dimensions

- Product dimensions (W x H x D): 5.5 x 6.5 x 2.8 inch
- Product dimensions (W x H x D): 14 x 16.4 x 7 cm
- Weight: 0.191 kg
- Weight: 0.421 lb



Issue date 2015-11-05

Version: 5.0.3

12 NC: 8670 001 25166  
UPC: 6 09585 24822 9

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)