

Philips  
Micro music system

**DAB+**

Bluetooth®  
with MULTIPAIR  
CD, MP3-CD, USB Direct, FM

**BTB2462**



## Hi-Fi stereo sound that fits your home

Listen to your smartphone tunes, stream your music library over Bluetooth and play MP3-CDs on this compact, all-in-one Philips music system. Then tune in to your favourite radio shows with DAB+ and FM compatibility.

### **Enrich your sound experience**

- Digital Sound Control
- Bass Reflex Speaker System delivers a powerful, deeper bass
- 10 W RMS total output power

### **Enjoy your music from multiple sources**

- Stream music over Bluetooth® with multi-device pairing
- Play MP3-CD, CD and CD-R/RW
- Audio-in for portable music playback
- USB Direct for easy MP3 music playback
- DAB+ and FM compatible for a complete radio experience

### **Design that blends into your interior**

- Compact design fits any space, any lifestyle
- Wall-mountable option for flexible placement

**PHILIPS**

# Highlights

## Multi-device pairing



Wireless Bluetooth® sound transmission is increasingly common in the world of sound systems, but most Bluetooth®-compatible systems allow just one device to connect at a time. Multi-device pairing lets you pair up to three devices and switch between them instantly.

## DAB+ and FM compatible

DAB+ and FM compatible for a complete radio experience

## Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimise the low frequency roll-off

of the system. The result is deeper controlled bass and lower distortion. The system works by causing the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a completely new dimension of deep bass.

## USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

## Audio-in




The Audio-in connectivity allows direct playback of Audio-in content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound

quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.

## Digital Sound Control

Digital Sound Control offers you a choice of pre-set balanced, clear, powerful, warm and bright controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalising technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

## Wall-mountable

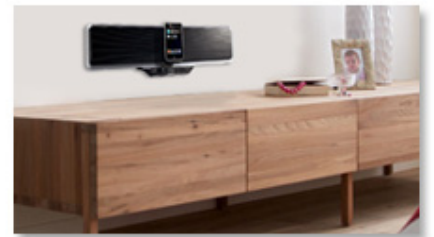

The perfect combination of a slim and versatile design, your Philips audio system is cleverly designed to blend into your living space. The base of the audio system is a stand so the system can sit securely and nicely on any shelf or cabinet. When wall mounted you have all the same flexibility of the freestanding stand.

# Specifications

## Sound

- Sound enhancement: digital sound control
- Maximum output power (RMS): 10 W

## Loudspeakers

- Speaker drivers: 2.75" woofer
- Speaker types: bass reflex speaker system

## Audio playback

- Disc playback modes: fast forward/reverse, next/previous track search, repeat/shuffle/programme
- Playback media: CD, CD-R/RW, MP3-CD, USB flash drive
- USB Direct playback modes: fast reverse/fast forward, play/pause, previous/next, repeat, shuffle, stop

## Tuner/Reception/Transmission

- Tuner bands: FM mono, FM stereo, DAB (Band L)
- Station presets: 20
- Antenna: FM antenna (75 ohm)
- Tuner enhancement: auto digital tuning, auto scan

## Connectivity

- USB: USB host

- Audio in (3.5 mm)
- Bluetooth profiles: A2DP

## Convenience

- Clock: On main display, sleep timer
- Display type: LED display
- Loader type: slot

## Accessories

- Included accessories: AC Power Cord, FM antenna, User Manual
- Remote control: 21-key remote

## Dimensions

- Packaging width: 514 mm
- Packaging height: 302 mm
- Packaging depth: 117 mm
- Gross weight: 3.6 kg
- Net weight: 2.4 kg
- Product dimensions (WxDxH): 466 mm (W) x 65 mm (D) x 226 mm (H)

## Power

- Power supply: 100-240 VAC, 50/60 Hz



Issue date 2015-10-16

Version: 2.0.7

12 NC: 8670 001 27415  
EAN: 48 95185 61198 3

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)