



Philips
5.1 Home theater

1000W RMS power
Wireless rear speakers

HTS3376W

Spectacular surround sound with superb clarity

Just like in the movies

High definition pictures and surround sound delivered by this system provide amazing home entertainment. Enjoy crisp pictures with 1080p HDMI upscaling, and playback from USB drives, portable media players and virtually any sort of disc.

Bring audio and video to life

- DTS, Dolby Digital and Pro Logic II surround sound
- Advanced Class D Amplifier for compact, powerful sound
- HDMI 1080p upscales to high definition for sharper pictures

Easy to set up

- Wireless rear speakers for fewer wires across your room
- EasyLink to control all HDMI CEC devices via a single remote

Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drive


Play all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays WMV, DivX, WMA, MP3 and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL

PHILIPS

Highlights

Wireless rear speakers

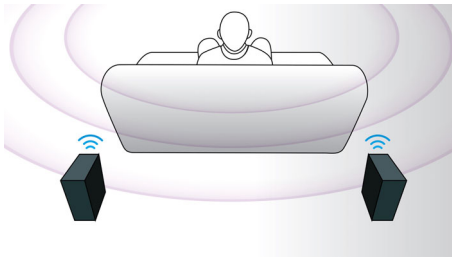

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections. **The wireless connection is between the main unit and the rear speakers only. Rear speakers are both connected to wireless receiver modules.

DTS, DolbyDigital, ProLogic II

A built-in DTS and Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

HDMI 1080p

HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can

now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

Hi-Speed USB 2.0 Link

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

EasyLink

EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your

connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Plays it all

Play virtually any media format you want - whether they be WMV, DivX, MP3s or JPEGs. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system - in the comfort of your living room.

Plays it all

Play virtually any disc you want - whether they be CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW, DVD-RW or DVD+R DL. Experience unbeatable flexibility and the convenience of playing all your discs on the one device.

DivX Ultra Certified

With DivX support, you are able to enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.



Specifications

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video Upscaling(720p, 1080i/p)

Sound

- Total Power (RMS): 1000 W
- Output power (RMS): 6x167W
- D/A converter: 24 bit, 192 kHz
- Frequency response: 40-20000 Hz
- Signal to noise ratio: >60 dB
- Sound System: DTS, Dolby Digital, Dolby Prologic II, Stereo
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- Equalizer settings: Action, Rock, Classic, Concert, Drama, Lounge, Gaming, Sports

Video Playback

- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, WMV, MPEG4
- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Video disc playback system: NTSC, PAL

Audio Playback

- Compression format: MP3, WMA
- Playback Media: CD, DVD+R/+RW, DVD-R/-RW
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, DVD-R/-RW, USB flash drive
- Picture Enhancement: Rotate, Zoom, Slideshow with music playback

Tuner/Reception/Transmission

- Tuner Bands: FM
- RDS: Station Name

Connectivity

- Front / Side connections: Hi-Speed USB, MP3 Line-in
- Rear Connections: HDMI output, Composite

video (CVBS) output, Scart, AUX in, FM Antenna, Easy-Fit Speaker Connectors, Digital coaxial in, Digital optical in

Power

- Power supply: 50Hz, 230V
- Standby power consumption: < 1 W
- Power consumption: 180 W

Loudspeakers

- Satellite Speaker: 2 Floor standing pillars
- Satellite speaker drivers: 3" full range woofer
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150-20000 Hz
- Center speaker drivers: 3" full range woofer
- Center speaker impedance: 4 ohm
- Center freq range: 150-20000 Hz
- Subwoofer driver: 6.5" high efficiency woofer
- Subwoofer impedance: 4 ohm
- Subwoofer freq range: 40-150 Hz
- Subwoofer type: Passive

Accessories

- Included accessories: Remote Control, 2 x AAA Batteries, Scart Cable, FM antenna, Quick start guide, User Manual, World Wide Warranty leaflet

Dimensions

- Set dimensions (W x H x D): 360 x 58 x 332 mm
- Set weight: 2.8 kg
- Front Speaker Width: 103 mm
- Front Speaker Height: 203 mm
- Front Speaker Depth: 71 mm
- Front Speaker Weight: 0.54 kg
- Rear Speaker Width: 262 mm
- Rear Speaker Height: 1199 mm
- Rear Speaker Depth: 264 mm
- Rear Speaker Weight: 3.376 kg
- Center speaker dimensions (W x H x D): 244 x 100 x 74 mm
- Center Speaker Weight: 0.791 kg
- Subwoofer dimensions (W x H x D): 163 x 363 x 369 mm
- Subwoofer Weight: 4.703 kg
- Packaging dimensions (W x H x D): 962 x 440 x 409 mm
- Weight incl. Packaging: 21 kg



Issue date 2017-04-04

Version: 4.0.5

12 NC: 8670 000 56705
EAN: 87 12581 50845 6

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com