



Philips
5.1 Home theater with 3D
Angled speakers

3D Blu-ray
iPod/iPhone ready



HTS5591

Enjoy powerful cinema in your home

Obsessed with sound

Maximize your home cinema sound experience with dynamic 3D Directional Angled Speakers! Play all your favorite entertainment content including 3D Blu-ray on this innovative Philips 5000 series home theater system.

Great listening experience

- 3D Angled Speakers disperse sound evenly around the room
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- 1000W RMS power delivers great sound for movies and music
- DoubleBASS technology for fuller and deeper bass

Designed to enhance your cinema at home

- Unique touch controls for easy access to your content
- Wireless rear speakers option for clutter free placement

Simply enjoy all your entertainment


- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- DLNA Network Link to enjoy music & videos from your PC



PHILIPS


Highlights

3D Angled speakers

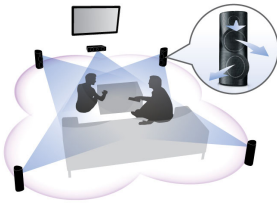

3D Angled Speakers feature angled drivers to deliver sound not only towards the front but also to the sides, creating a wider sweet spot so you can enjoy more immersive and cinematic surround sound.

Wireless rear speakers option

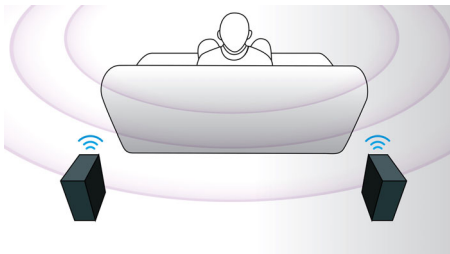

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections.

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in


synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

DLNA Network Link



The DLNA Network link provides easy access to personal photos, music, videos or movies on your PC or Home Network. It uses the Ethernet (LAN) connection with DLNA protocol that assures that DLNA certified products will work together seamlessly. By connecting your TV, home theater or Blu-ray Disc player to your home network, you will be able to access information from all DLNA certified devices. You can access your world of entertainment at a simple push of a button with the intuitive user interface, that is designed for easy browsing.

Dolby TrueHD and DTS-HD

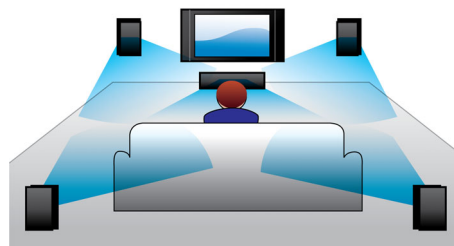

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master

Audio Essential complete your high definition entertainment experience.

1000W RMS power




1000W RMS power delivers great sound for movies and music

DoubleBASS technology



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you a full, uncompromised listening experience.

Unique touch controls

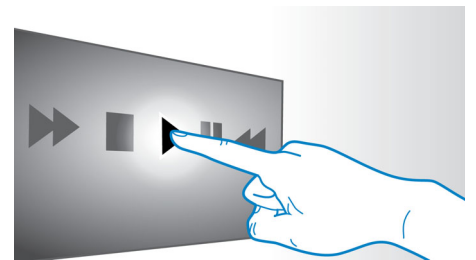

Touch controls allow you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the main unit.

Specifications

Accessories

- Compatible accessories: DCK3060 Dock for iPod/iPhone, RWSS5510 Wireless Rear Audio, WUB1110 Wi-Fi USB Adaptor
- Included accessories: 2 x AAA Batteries, 4 x 75mm screws, 16 x 30mm screws, FM antenna, Power cord, Remote Control, Quick start guide, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320kbps

Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, RMVB, WMV HD, WMV SD

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wav, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, divx, mkv, mp4, mpeg, mpg, wmv

Connectivity

- Access to Content: DLNA
- Front / Side connections: Microphone In, Music iLINK, USB / Wi-Fi slot
- Rear Connections: AUX IN 1, AUX IN 2, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, Mini Easy-Fit Speaker Jacks, Wireless Rear Audio

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Dimensions

- Main Unit (W x H x D): 435 x 57 x 357 mm
- Main Unit Weight: 3.7 kg
- Center Speaker (W x H x D): 280 x 95 x 92 mm
- Center Speaker Weight: 1.4 kg

- Centre Speaker cable length: 2 m
- Front Tallboy Speaker (WxHxD): 260 x 1101 x 260 mm
- Front Speaker Weight: 3.8 kg
- Front Speaker cable length: 4 m
- Rear Tallboy Speaker (WxHxD): 260 x 1101 x 260 mm
- Rear Speaker Weight: 3.8 kg
- Rear Speaker cable length: 10 m
- Subwoofer (W x H x D): 196 x 395 x 342 mm
- Subwoofer Weight: 4.8 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 400 x 470 x 1125 mm
- Weight incl. Packaging: 29.7 kg

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Tallboy speakers
- Center speaker drivers: 2 x 3" full range woofers
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 3 ohm
- Drivers per Tallboy speaker: 2 x 3" Full range woofers
- Tallboy speaker freq range: 150 - 20k Hz
- Tallboy speaker impedance: 5 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 3 ohm

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Power

- Power consumption: 105 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.5 W

Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Dialog Enhancer, Dolby Digital Prologic II, DoubleBass, FullSound, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio
- Center speaker output power: 230 W
- Tallboy speaker output power: 135 W x 4
- Subwoofer output power: 230 W
- Total Power RMS @ 30% THD: 1000 W

Sustainability

- Packaging: 80% recycled corrugated board, Electronic User Manual, No polyfoam, Soya based ink

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40



Issue date 2014-08-27

Version: 3.3.6

12 NC: 8670 000 67661
EAN: 69 23410 70681 9

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* To check whether Video on Demand is available in your country,
please visit www.philips.com/blu-ray.