




Philips
Micro music system

CD, MP3-CD, USB, FM
70W max

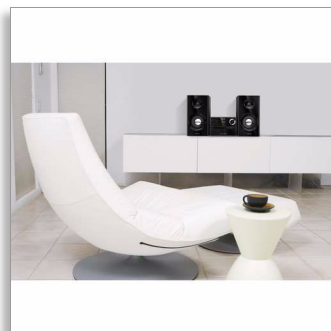

MCM2150

Rich and powerful sound

Obsessed with sound

Listen to all your favourites on your portable music player with USB Direct and Audio in. This Philips Micro sound system also plays MP3-CD and CD-R/RW, and features Bass Reflex speakers for powerful and dramatic bass.

Enrich your sound experience

- Bass Reflex Speaker System delivers a powerful, deeper bass
- Digital Sound Control for optimised music style settings
- Dome tweeter for detailed and natural sound
- 70 W RMS maximum output power

Enjoy your music from multiple sources

- Play MP3-CD, CD and CD-R/RW
- USB Direct for easy MP3 music playback
- Audio-in for portable music playback

Easy to use

- Motorised CD loader for convenient access
- Digital tuning with preset stations for extra convenience



NL/22/001

PHILIPS

Highlights

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimise the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by causing the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a completely new dimension of deep bass.

Audio-in



The Audio-in connectivity allows direct playback of Audio-in content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.

Digital Sound Control



Digital Sound Control offers you a choice of pre-set Balance, Clear, Powerful, Warm and Bright controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

Dome tweeter

Dome tweeters reproduce clear high and mid-range frequencies that enhance the overall sound clarity coming from the speakers. Delivering a harmonious blend of undistorted

and uncoloured wide-ranging sound, they offer detailed vocal clarity and instrument tone purity, thereby balancing the overall sound when paired with a combination of woofers.

Energy

For many years Philips has pro-actively been working on energy efficiency. As a result, most Philips products have achieved green energy labels. The greener the label, the lower the energy consumption, the lower your energy bill and the friendlier for the environment.



EU Eco Label

The Philips eco-design process aims to create products that are increasingly eco-friendly. Our efforts have been

recognised and Philips has been awarded the EU Eco Label (Eco flower) for the majority of its models because of their high energy efficiency, ultra low standby powers (up to 50% less than the required EU Eco Label level), absence of hazardous substances (e.g. lead) and design for easier recycling.

Specifications

Sound

- Sound enhancement: digital sound control
- Maximum output power (RMS): 70 W

Loudspeakers

- Loudspeaker types: Dome tweeter
- Main Speaker: 2-way, 4" woofer, Bass Reflex Speaker System

Audio playback

- Disc playback modes: fast forward/reverse, next/previous track search, repeat/shuffle/programme
- Playback media: CD, CD-R/RW, MP3-CD, USB flash drive
- USB Direct playback modes: fast reverse/fast forward, play/pause, previous/next, repeat, shuffle, stop

Tuner/Reception/Transmission

- Tuner bands: FM mono, FM stereo
- Station presets: 20
- Antenna: FM antenna (75 ohm)
- Tuner enhancement: auto digital tuning, auto scan, Easy set (plug and play)

Connectivity

- USB: USB host
- Audio in (3.5 mm)

Convenience

- Alarms: CD Alarm, Radio Alarm, USB alarm
- Clock: On main display, sleep timer
- Display type: LED display
- Loader type: tray

Accessories

- Included accessories: AC Power Cord, FM antenna, User Manual
- Remote control: 21-key remote

Dimensions

- Main unit width: 180 mm
- Main unit height: 119 mm
- Main unit depth: 220.4 mm
- Main speaker dimensions (W x D): 140 x 185 mm
- Main speaker height: 260 mm
- Packaging width: 663 mm
- Packaging height: 315 mm
- Packaging depth: 208 mm
- Gross weight: 6.7 kg
- Net weight: 5.74 kg

Power

- Power supply: 110-240V, 50/60 Hz



Issue date 2014-07-18

Version: 3.0.5

12 NC: 8670 000 98049
EAN: 08 71258 16690 27

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com