

Philips
Open-ear wireless sports
headphones

Open-ear fit

Bone conduction
Clearer calls on the go
LED safety lights



TAA5608BK

You move, they won't

Hit that rhythm with the wireless headphones that won't fall off no matter how you move! These open-ear sports headphones are super light, super comfortable-and tough. Plus, they let you hear everything that's happening around you.

Open-ear headphones. You move, they won't.

- Open-ear fit. Move it like you mean it
- Bone conduction. Sound without earphones
- Clearer calls on the go. They'll hear you, not the noise

Always ready. Always yours.

- Charge for 15 minutes, get an extra hour
- Philips Headphones app
- Ready for you. 6 hours play time
- Carry pouch included


For your kind of active life

- Be seen. LED safety lights
- Get out there. IPX5 water resistant
- Better connectivity. Next-generation Bluetooth*

PHILIPS

Highlights

Open-ear fit

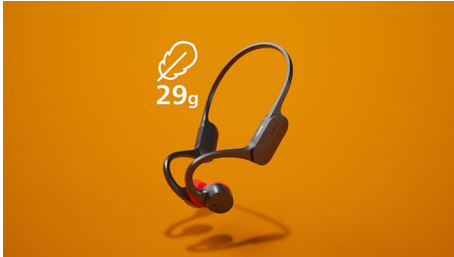


Run, jump, ride! These open-ear headphones won't fall off when you get moving. The neckband wraps around the back of your head, and loops over the top of your ears, to hold them comfortably in place: they won't move, even when you go for it. Plus, they're so light you'll barely feel them.

Bone conduction




Bone conduction technology transmits sound through the bones of your skull, which means you don't need to put an earbud in your ear or wear headphones that cover your ear. Instead, the sound travels from your cheekbones directly to the inner ear-and your music magically appears in your head!

Clearer calls on the go

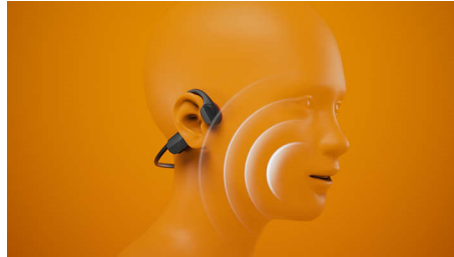


When you're on a call, beamforming mics accurately pick up the sound of your voice while an AI algorithm removes background noise from the world around you. The person you're speaking to will hear you, and not the traffic or the chatter of the people next to you!

Safety LED lights

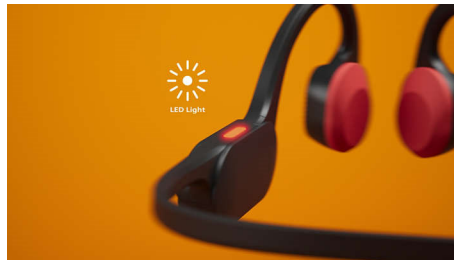

Run at night. Hike a mountain trail at dusk. Or cycle in the woods. LEDs on the frame mean you'll stay visible in dim environments. You can control the LEDs via the Philips Headphones app, or via the on/off button on the frame.

IPX5 water resistant

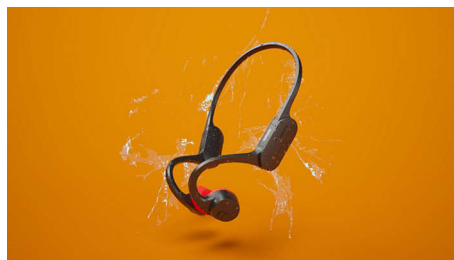

An IPX5 rating means these open-ear headphones don't mind a drop of rain or even a


downpour, so they'll never give you an excuse to stay on the couch! If you get a sweat on in the gym, they won't mind that either. When you're done, and the headphones are dry, store them in the soft carry pouch.

Next-generation Bluetooth



These earbuds will work with devices that support Bluetooth LE Audio and the LC3 codec to give you a steadier connection wherever you are. The sound won't dip if you're streaming music or taking calls in built-up areas, and there's virtually no lag if watching movies or gaming.*

6 hours play time

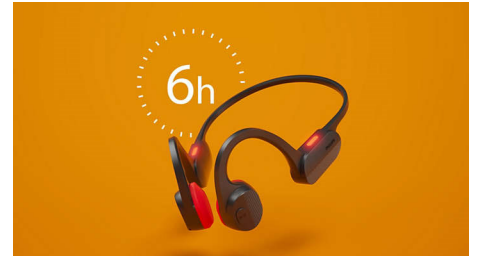

Pick up, rock on. With 6 hours play time from a single charge, these bone-conducting open-ear headphones are good to go for multiple workouts. A full charge takes just 2 hours. For a quick extra boost, just 15 minutes charging gives you an extra hour of play time.

Philips Headphones app

The Philips Headphones app lets you control the LED lights and puts you in charge of the music you're listening to.

Specifications

Sound

- Frequency range: 130 - 16 000 Hz
- Speaker diameter: 15 mm
- Impedance: 8 Ohm
- Maximum power input: 300 mW
- Sensitivity: 88 dB (1K Hz)
- Driver type: Dynamic

Connectivity

- Bluetooth version: 5.3
- Bluetooth profiles: A2DP, AVRCP, HFP
- Maximum range: Up to 10 m
- Supported codec: SBC, LC3

Outer Carton

- Length: 20.2 cm
- Number of consumer packagings: 3
- Width: 18.5 cm
- Gross weight: 0.941 kg
- Height: 19.5 cm
- GTIN: 1 48 95229 13148 1
- Nett weight: 0.192 kg
- Tare weight: 0.749 kg

Convenience

- Volume control
- Water resistance: IPX5
- Philips Headphones app support
- Firmware updates possible
- Type of controls: Button
- LED safety lights

Power

- Number of batteries: 1 pcs
- Music play time: 6 hour(s)
- Charging time: 2 hour(s)
- Fast charging time: 15mins for 1 hr
- Battery weight (Total): 3 g

- Battery capacity(Headphones): 140 mAh
- Battery life standby time: 80 hr
- Battery type(Headphones): Lithium Polymer (Built-in)

Packaging dimensions

- Height: 19.8 cm
- Packaging type: Carton
- Type of shelf placement: Hanging
- Width: 17 cm
- Depth: 6.1 cm
- Number of products included: 1
- EAN: 48 95229 13148 4
- Gross weight: 0.221 kg
- Nett weight: 0.064 kg
- Tare weight: 0.157 kg

Product dimensions

- Height: 4.73 cm
- Width: 12.94 cm
- Depth: 10.05 cm
- Weight: 0.029 kg

Accessories

- Others: 1 pcs soft pouch
- Quick Start Guide
- Charging cable: USB-C charging cable, 200 mm

Design

- Color: Black
- Ear fitting: Bone-conducting
- In-ear fitting type: Open fit

Telecommunication

- Microphone for call: 2 AI mics

UPC

- UPC: 8 40063 20308 2



Issue date 2024-06-30

Version: 6.6.1

EAN: 48 95229 13148 4

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Requires a software update. The Philips Headphones app will notify you when the latest software version is available.