




Philips
Open-ear wireless sports
headphones

Open-ear fit

Bone conduction
Clearer calls on the go
LED safety lights

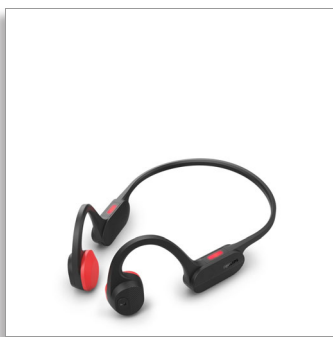

TAA5608BK

You move, they won't

Hit that rhythm with the wireless headphones that won't fall off no matter how you move! These open-ear sports headphones are super light, super comfortable-and tough. Plus, they let you hear everything that's happening around you.

Open-ear headphones. You move, they won't.

- Open-ear fit. Move it like you mean it
- Bone conduction. Sound without earphones
- Clearer calls on the go. They'll hear you, not the noise

For your kind of active life

- Be seen. LED safety lights
- Get out there. IPX5 water resistant
- Better connectivity. Next-generation Bluetooth*

Always ready. Always yours.

- Ready for you. 6 hours play time
- Charge for 15 minutes, get an extra hour
- Philips Headphones app
- Carry pouch included


PHILIPS

Open-ear wireless sports headphones
Open-ear fit Bone conduction, Clearer calls on the go, LED safety lights

TAA5608BK/00


Highlights

Open-ear fit

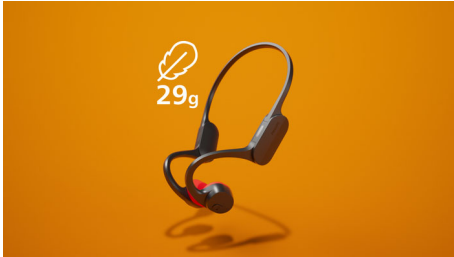


Run, jump, ride! These open-ear headphones won't fall off when you get moving. The neckband wraps around the back of your head, and loops over the top of your ears, to hold them comfortably in place: they won't move, even when you go for it. Plus, they're so light you'll barely feel them.

Bone conduction

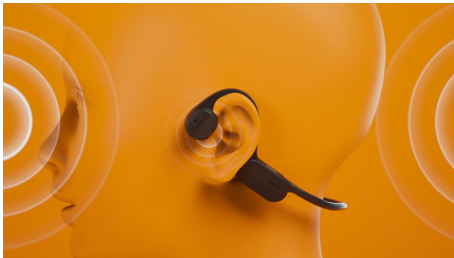


Bone conduction technology transmits sound through the bones of your skull, which means you don't need to put an earbud in your ear or wear headphones that cover your ear. Instead, the sound travels from your cheekbones directly to the inner ear—and your music magically appears in your head!

Clearer calls on the go

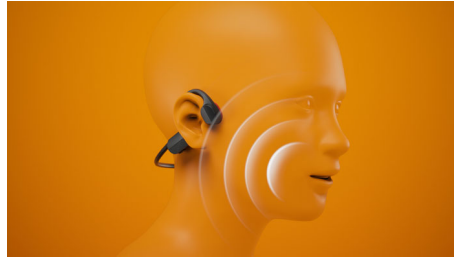


When you're on a call, beamforming mics accurately pick up the sound of your voice while an AI algorithm removes background noise from the world around you. The person you're speaking to will hear you, and not the traffic or the chatter of the people next to you!

Safety LED lights

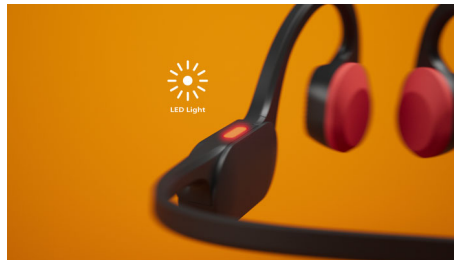

Run at night. Hike a mountain trail at dusk. Or cycle in the woods. LEDs on the frame mean you'll stay visible in dim environments. You can control the LEDs via the Philips Headphones app, or via the on/off button on the frame.

IPX5 water resistant

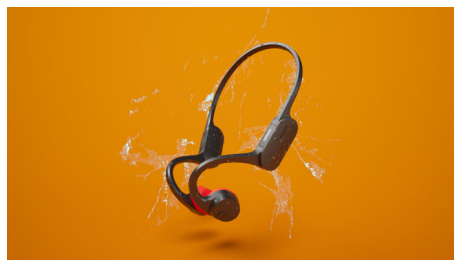

An IPX5 rating means these open-ear headphones don't mind a drop of rain or even a


downpour, so they'll never give you an excuse to stay on the couch! If you get a sweat on in the gym, they won't mind that either. When you're done, and the headphones are dry, store them in the soft carry pouch.

Next-generation Bluetooth



These earbuds will work with devices that support Bluetooth LE Audio and the LC3 codec to give you a steadier connection wherever you are. The sound won't dip if you're streaming music or taking calls in built-up areas, and there's virtually no lag if watching movies or gaming.*

6 hours play time

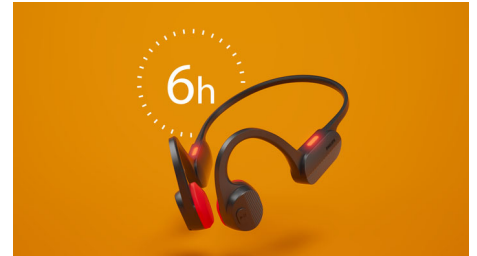

Pick up, rock on. With 6 hours play time from a single charge, these bone-conducting open-ear headphones are good to go for multiple workouts. A full charge takes just 2 hours. For a quick extra boost, just 15 minutes charging gives you an extra hour of play time.

Philips Headphones app

The Philips Headphones app lets you control the LED lights and puts you in charge of the music you're listening to.

Specifications

Sound

- Impedance: 8 Ohm
- Speaker diameter: 15 mm
- Sensitivity: 88 dB (1K Hz)
- Frequency range: 130 - 16 000 Hz
- Maximum power input: 300 mW
- Driver type: Dynamic

Telecommunication

- Microphone for call: 2 AI mics

Connectivity

- Bluetooth version: 5.3
- Supported codec: SBC, LC3
- Maximum range: Up to 10 m
- Bluetooth profiles: A2DP, AVRCP, HFP

Convenience

- Philips Headphones app support
- Firmware updates possible
- Water resistance: IPX5
- LED safety lights
- Type of controls: Button
- Volume control

Design

- Color: Black
- Ear fitting: Bone-conducting
- In-ear fitting type: Open fit

Power

- Music play time: 6 hr
- Battery type(Headphones): Lithium Polymer (Built-in)
- Battery capacity(Headphones): 140 mAh
- Battery life standby time: 80 hr

- Charging time: 2 hr
- Fast charging time: 15mins for 1 hr
- Number of batteries: 1 pcs
- Battery weight (Total): 3 g

Accessories

- Charging cable: USB-C charging cable, 200 mm
- Others: 1 pcs soft pouch
- Quick Start Guide

Product dimensions

- Product dimensions (W x H x D): 12.94 x 4.73 x 10.05 cm
- Weight: 0.029 kg

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Hanging
- Packaging dimensions (W x H x D): 17 x 19.8 x 6.1 cm
- Gross weight: 0.221 kg
- Nett weight: 0.064 kg
- Tare weight: 0.157 kg
- EAN: 48 95229 13148 4

Outer Carton

- Number of consumer packagings: 3
- Outer carton (L x W x H): 20.2 x 18.5 x 19.5 cm
- Gross weight: 0.941 kg
- Nett weight: 0.192 kg
- Tare weight: 0.749 kg
- GTIN: 1 48 95229 13148 1

UPC

- UPC: 8 40063 20308 2



Issue date 2023-08-23

Version: 5.0.1

12 NC: 8670 001 87824
EAN: 48 95229 13148 4

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Requires a software update. The Philips Headphones app will notify you when the latest software version is available.