



## Philips CarStudio Car audio system

- for iPhone
- Bluetooth
- DAB/DAB+ Ready

**CarStudio**



**CE153DR**

# Experience live music in your car

## Obsessed with sound

Enjoy multiple source music in your car with the Philips CE153DR. Stay connected to your music and important calls on your mobile, thanks to the built-in Bluetooth® receiver. Also features anti-theft detachable front panels for security.

### Enjoy superior sound

- Play songs from iPhone/iPod for favourites on the road
- MAX Sound for instant power boost
- Music Zone for adjustable sweet spots
- Dynamic Bass Boost electronically enhances the low tones
- 2-band parametric equaliser with 8 presets
- Built-in 50 W x 4 amplifiers for excellent sound quality

### Easy to use

- Browse by folder or song for instant search or quick access
- Built-in Bluetooth receiver for call and music streaming
- Audio out for amplifier addition
- Front/rear USB for flexible iPhone/iPod/USB device placement
- Upgradable to DAB/DAB+ radio with optional adaptor


### Design that blends into your car

- High contrast LCD for perfect viewing

**PHILIPS**

# Highlights

## Music Zone

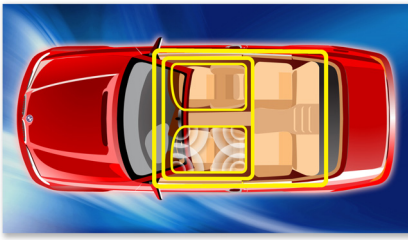

Philips' innovative Music Zone technology lets the driver and the passengers enjoy their music with more vivid spatial effect, just as the artist intended it to be heard. Users can easily switch the music listening zones from the driver to the passengers and back again to get the best sonic focus in the car. A dedicated zone control button provides three pre-defined settings - Left, Right and Front (and All) - so you can best match your listening needs easily and dynamically alone or with your passengers.

## DBB Dynamic Bass Boost



Activate the Dynamic Bass Boost (DBB), and the low-end bass frequencies are electronically enhanced to achieve consistent sound reproduction, especially when the speaker volume is set at a low level. You hear impressive bass at all times.

## Browse by folder or song



This function allows you to find a track or album much faster by letting you browse through songs and folders, which are the usual contents of USB/SDHC devices. With the dedicated folder/song button, only three simple steps are needed to make a search – press folder/song, rotate the volume knob and push to select. This simple process lets you search through your music quickly and easily, letting you to focus on your driving.

## MAX Sound



MAX Sound technology produces an instant boost in bass and treble, maximising volume performance and instantly creating the most impressive listening experience with just the touch of a button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting bass, treble and

volume beyond the original maximum levels without distortion. The end result is a noticeable amplification of both sound spectrum and volume and a potent audio boost that will add mileage to any music.

## Built-in Bluetooth receiver



The Bluetooth hands-free feature lets you use your mobile phone safely while driving so you don't have to miss any important calls. With the built-in Bluetooth® receiver, you can also conveniently stream your music files from your phone to your car entertainment system.

## DAB/DAB+ ready

Upgradable to DAB/DAB+ radio with optional adaptor

## Dual USB

Front/rear USB for flexible iPhone/iPod/USB device placement

## Play songs from iPhone/iPod

Play songs from iPhone/iPod for favourites on the road



# Specifications

## Display

- Type: High contrast B/W LCD
- Key illumination: Red

## Playback media

- Music from iPod/iPhone
- USB flash drive
- SD/SDHC card
- MP3 Link: for portable MP3 music playback
- Bluetooth streaming music
- Dual USB: Front and rear USB

## Audio Playback

- Compression format: MP3, WMA
- ID3 Tag support: Song title, artist, album
- MP3 bit rates: 32-320 kbps and variable bit rate
- USB Direct/SD Modes: Play/Pause, Fast Reverse/Fast Forward, Previous/Next, Repeat, Shuffle

## Tuner/Reception/Transmission

- Tuner Bands: AM, FM Stereo
- Auto digital tuning
- Tuner Enhancements: Auto search and store
- No. of preset stations: 18 (FM), 12 (AM)
- RDS: Station Name, Programme Type, News and Traffic, Auto-frequency
- DAB/DAB+ Ready

## Sound

- Equalizer: 2-bands
- Equalizer settings: Classic, Jazz, Pop, Rock, Flat, Optimal, Techno, User defined
- Sound Enhancement: MAX Sound, Dynamic Bass Boost, Music zone

- Output power (MAX): 50 W x 4 channels
- Output power (RMS): 22 W x 4 channels (4 ohms, 10% T.H.D.)

## Connectivity

- Microphone: Built-in microphone
- Preamp output: 1 pair Rear RCA (L/R)
- Bluetooth profiles: A2DP, AVRCP, Hands-free
- Bluetooth version: 2.0+EDR

## iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4, iPhone 5

## iPod compatibility

- Compatible with: iPod, iPod classic, iPod nano, iPod touch

## Security/Anti-theft

- Front panel: Detachable

## Accessories

- Remote control: Not included
- User Manual: English, Spanish
- Quick start guide: English, Spanish
- Optional accessory: CAB50 DAB/DAB+ adaptor box (not included)

## Power

- Power supply: 12 V DC

## Dimensions

- Product dimensions (W x H x D):  
188 x 58 x 140 mm
- Chassis: 1 Din



Issue date 2013-05-10

Version: 1.0.6

12 NC: 8670 000 98087  
EAN: 08 71258 16690 65

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)