



Philips
Soundbar speaker

2.0 CH bass reflex system

Bluetooth®
40W

HTL1190B

Great Sound for any TV

Easy 1-cable connection

Get amazing virtual surround sound from your TV via just one cable with this Philips soundbar speaker! In addition to movies, you can also stream your top quality Music wirelessly via Bluetooth.

Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience

Connect and enjoy all your entertainment

- Wireless music streaming via Bluetooth
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Enjoy MP3/WMA music directly from your portable USB devices
- Audio in to enjoy music from iPod/iPhone/MP3 player


Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV

PHILIPS

Highlights

Virtual Surround Sound

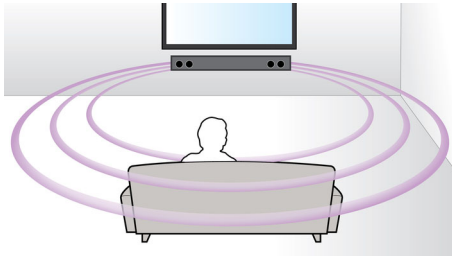


Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

USB




Enjoy MP3/WMA music directly from your portable USB devices

Dolby Digital

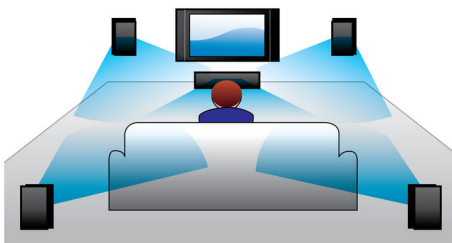

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Bluetooth

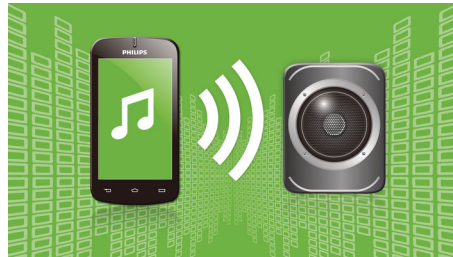

Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your Philips home cinema system. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

Low-rise profile



Low-rise profile for the perfect fit in front of your TV

Specifications

Sound

- Sound Enhancement: Treble and Bass Control, Virtual Surround Sound, Night Mode
- Sound System: Dolby Digital
- Speaker output power: 2 x 20 W
- Total Power RMS @ 10% THD: 40 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 2 x 2" Fullrange woofers
- Speaker Impedance: 4 ohm
- Speaker Frequency Range: 20-20K Hz

Connectivity

- Side Connections: Audio In (3.5mm), USB
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Rear Connections: AUX in, Digital coaxial in, Digital optical in
- Integrated Connections: Bluetooth

Design

- Wall mountable

Power

- Power consumption: 25 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.5 W

Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink

Dimensions

- Main Unit (W x H x D): 865 x 68 x 86 mm
- Main Unit Weight: 1.9 kg
- Packaging (W x H x D): 917 x 155 x 145 mm
- Weight incl. Packaging: 2.96 kg

Accessories

- Included accessories: Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, AAA Battery (x1)

Outer Carton

- EAN: 48 95185 60746 7
- Gross weight: 2.96 kg
- Outer carton (L x W x H): 91.7 x 14.5 x 15.5 cm
- Nett weight: 2.03 kg
- Number of consumer packagings: 1
- Tare weight: 0.93 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 91.7 x 15.5 x 14.5 cm
- EAN: 48 95185 60746 7
- Gross weight: 2.96 kg
- Nett weight: 2.03 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.93 kg
- Type of shelf placement: Laying

Product dimensions

- Product dimensions (W x H x D): 18 x 12.35 x 24.7 cm
- Weight: 1.6 kg



Issue date 2022-04-29

Version: 7.0.5

12 NC: 8670 001 23649
EAN: 69 59033 84813 1

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com