

Philips  
Soundbar speaker

### Virtual surround

External subwoofer  
Opt, Coax, Aux in, Audio in  
Bluetooth®

HTL2160W



## Powerful sound for any TV

with subwoofer

Fill your home with superb Bluetooth wireless music. In addition to TV & home theater, this Philips soundbar also boosts your gaming console and MP3 player. So start enjoying top-quality Virtual Surround Sound movies and music now.

#### Connect and enjoy all your entertainment

- Audio in to enjoy music from iPod/iPhone/MP3 player
- Enjoy MP3/WMA music directly from your portable USB devices
- Wireless music streaming via Bluetooth
- Works with TVs, BD/DVD players, gaming consoles, MP3 players

#### Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Ultra-compact 80cm-wide soundbar suits any home décor

#### Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- Twin tweeters for optimum clarity performance
- External subwoofer adds thrill to the action

# PHILIPS

## Soundbar speaker

Virtual surround External subwoofer, Opt, Coax, Aux in, Audio in, Bluetooth®

HTL2160W/12


# Highlights

### Bluetooth



Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

### Virtual Surround Sound

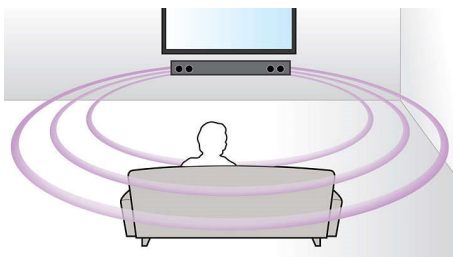

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

### External subwoofer




External subwoofer adds thrill to the action

### Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

### Dolby Digital

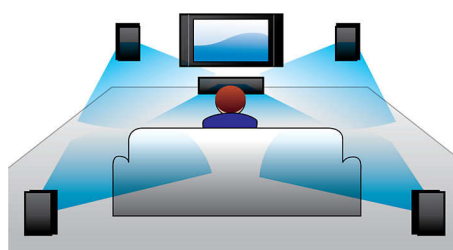

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality

surround sound audio with realistic spatial cues.

### USB



Enjoy MP3/WMA music directly from your portable USB devices

### Low-rise profile



Low-rise profile for the perfect fit in front of your TV

### Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

### Ultra-compact soundbar

Ultra-compact 80cm-wide soundbar suits any home décor

### Twin tweeters (HC 2012)

Twin tweeters for optimum clarity performance



# Specifications

## Sound

- Sound Enhancement: Treble and Bass Control
- Sound System: Dolby Digital
- Subwoofer output power: 30 W
- Speaker output power: 15 W x 2
- Total Power RMS @ 30% THD: 60 W

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Passive
- Subwoofer impedance: 8 ohm
- Speaker Drivers per side: 1 woofer, 1 Mylar tweeter
- Speaker Impedance: 4 ohm
- Tweeter Impedance: 8 ohm

## Connectivity

- Integrated Connections: Bluetooth
- Rear Connections: Digital coaxial in, Digital optical in, Subwoofer out, AUX in
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Side Connections: Audio In (3.5mm), USB

## Power

- Power consumption: 30 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.5 W

## Accessories

- Included accessories: 1 x CR2025 Battery, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

## Design

- Wall mountable

## Dimensions

- Main Unit (W x H x D): 800 x 52.4 x 75.6 mm
- Weight incl. Packaging: 5.4 kg
- Main Unit Weight: 1.2 kg
- Packaging (W x H x D): 400 x 292 x 349 mm
- Subwoofer (W x H x D): 165 x 240 x 295 mm
- Subwoofer Weight: 2.6 kg
- Subwoofer cable length: 3 m

## Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink



Issue date 2024-04-13

Version: 3.1.3

EAN: 87 12581 67422 9

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)