

Philips ActionFit
Sports headphones with
mic

8.6mm drivers/closed-back
Earhook

SHQ3305LF



Experience freedom. Stop at nothing

Secure fit and lightweight

Lightweight, sweatproof and adjustable earhook equipped, the Actionfit SHQ3305 headphones let you focus on working out without losing motivation. Train to incredible sound and barely-there comfort.

protection

- Sporty carrying pouch for easy storage
- Kevlar® Reinforced cable for ultimate durability
- Sweat and moisture proof - ideal for any workout

Freedom

- 3 ear tip sizes for the optimum fit
- Cable clip included for tangle-free workout
- 7.1g ultra lightweight design provides ultimate comfort*
- Adjustable earhook for personalized fit

Simply stay connected

- Remote control and mic for switching from music to call

Push harder

- High performance sound drives peak performance
- Insert earphones provide sound isolation


PHILIPS

Sports headphones with mic
8.6mm drivers/closed-back Earhook

SHQ3305LF/27


Highlights

3 choices of ear tips sizes

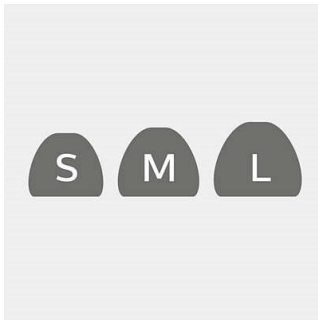


3 ear tip sizes for the optimum fit

7.1g ultra lightweight design*

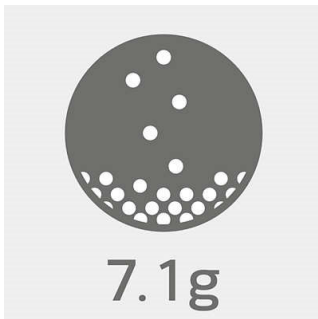


Weighing in at just 7.1g, these Actionfit sports earphones are so light and comfortable that you will forget you are even wearing them. Perfect for keeping you going right through the hard final miles.

Adjustable earhook

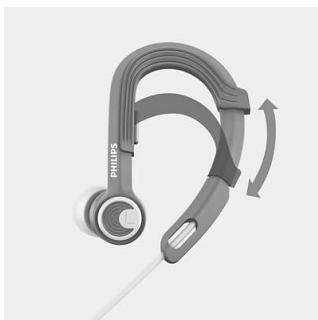

An adjustable ear hook ensures the ActionFit SHQ3300 headphones fit your ears perfectly. Just put the headphones on and slide the adjustable hook up or down for a snug fit. Whatever your workout or terrain, your headphones will stay on comfortably.

Cable clip

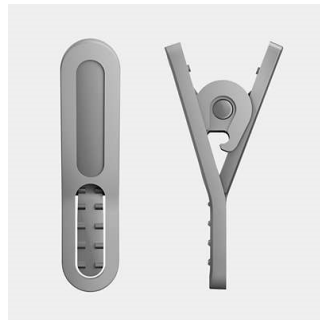

A cable clip comes included with ActionFit earphones, keeping the cable out of your way while you push yourself harder.

Sporty carrying pouch for easy storage

Hands free call



Remote control and mic for switching from music to call

High performance sound



8.6mm neodymium drivers pump out high performance sound, pushing you to perform at your best.

Kevlar® Reinforced cable




Kevlar® reinforced headphone cables are tough enough to survive even the roughest of workouts.

Sound isolation

Insert earphones create a tight seal in the ear canal, resulting in a strong isolation effect. Our oval acoustics tubes are ergonomically optimized to ensure exceptional fit.

Sweat and moisture proof

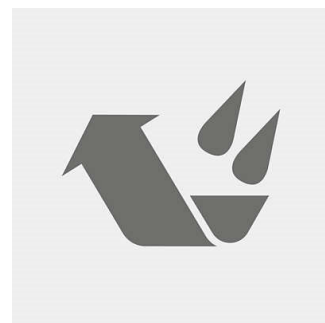

Sweat or rain will no longer stop you from maxing yourself out to your favorite tunes. These Actionfit sports headphones materials are sweat and water proof making them the perfect workout companion whatever the weather.

Specifications

Sound

- Acoustic system: Closed
- Frequency response: 6 - 24 000 Hz
- Diaphragm: PET
- Magnet type: Neodymium
- Speaker diameter: 8.6 mm
- Sensitivity: 107 dB
- Maximum power input: 20 mW
- Impedance: 16 ohm

Connectivity

- Cable Connection: two-parallel, symmetric
- Finishing of connector: Gold plated
- Finishing of connector: gold-plated
- Cable length: 1.2 m
- Connector: 3.5 mm

Outer Carton

- Length: 38 cm
- Number of consumer packagings: 24
- Length: 15 inch
- Width: 18.1 cm
- Gross weight: 1.8822 kg
- Height: 24.8 cm
- GTIN: 1 08 89446 00031 0
- Width: 7.1 inch
- Height: 9.8 inch
- Nett weight: 0.5544 kg
- Gross weight: 4.149 lb
- Nett weight: 1.222 lb
- Tare weight: 1.3278 kg
- Tare weight: 2.927 lb

Inner Carton

- Length: 18 cm
- Number of consumer packagings: 3
- Length: 7.1 inch
- Width: 8.2 cm
- Height: 10.5 cm
- Width: 3.2 inch
- Height: 4.1 inch
- Nett weight: 0.0693 kg

- Gross weight: 0.1999 kg
- Nett weight: 0.153 lb
- Gross weight: 0.441 lb
- Tare weight: 0.1306 kg
- Tare weight: 0.288 lb
- GTIN: 2 08 89446 00031 7

Packaging dimensions

- Height: 17.5 cm
- Packaging type: Blister
- Type of shelf placement: Both
- Width: 9.5 cm
- Depth: 2.5 cm
- Height: 6.9 inch
- Number of products included: 1
- Width: 3.7 inch
- Gross weight: 0.0563 kg
- Depth: 1 inch
- Nett weight: 0.0231 kg
- Gross weight: 0.124 lb
- Nett weight: 0.051 lb
- Tare weight: 0.0332 kg
- Tare weight: 0.073 lb
- UPC: 8 89446 00031 3

Product dimensions

- Height: 8 cm
- Width: 3 cm
- Depth: 2.8 cm
- Width: 1.2 inch
- Height: 3.1 inch
- Depth: 1.1 inch
- Weight: 0.0231 kg
- Weight: 0.051 lb

Accessories

- Storage pouch
- Cable management: Cable clip

Design

- Color: Lime Yellow & White



Issue date 2024-03-24

Version: 1.0.3

UPC: 8 89446 00031 3

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com