

PHILIPS



Mira design cordless phone

30 min answering machine

1.8" display/white backlight

Handset speakerphone



M5651WG

Unique and desirable

With its sleek silhouette and high-quality finishing, Philips Mira challenges conventional perceptions about telephone design. Timeless, unique and stylish, it's an elegant piece of art for your home.

Ultimate calling experience

- Handset speakerphone allows you to talk hands-free
- Easy to read 4.6 cm (1.8") display with white backlight
- Privacy settings: call block and call barring
- Save up to 100 of your favourite contacts in your phonebook
- Advanced sound testing and tuning for superb voice quality
- Talk for up to 16 hours on a single charge

Eco-designed

- Zero power emission when ECO+ mode is activated

Outstanding design in high-quality execution

- Durable, glossy and fingerprint-resistant outer shell
- Elegant and stylish appearance from every angle
- Smart cable management
- Calibrated keypad for smooth precision clicks
- Charge handset either way around

Highlights

Durable and glossy outer shell



Durable, glossy and fingerprint-resistant outer shell

Beautiful from every angle



Elegant and stylish appearance from every angle

Handset speakerphone



Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

ECO+



Zero power emission when ECO+ mode is activated


4.6 cm (1.8") display

Easy to read 4.6 cm (1.8") display with white backlight

Multiple privacy settings

Value your privacy and quiet time at home? Black List restricts specific numbers or those starting with certain digits, protecting you from receiving unwanted calls. You can choose to block up to 4 sets of numbers. Each set can consist of 1 to 24 digits. If the number of an incoming call starts with any of these number sets or are the exact numbers that you choose to block, your phone will not ring. With Call Barring, you can avoid the surprise of expensive phone bills by blocking calls from specific numbers starting with certain digits (for example, pay per call numbers).

100-name phone book

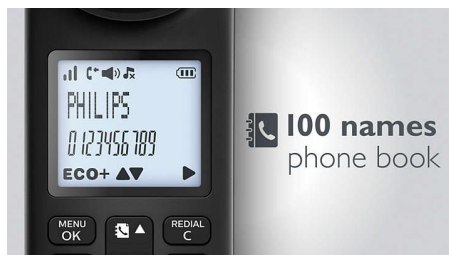

Always have the phone numbers of your loved ones available: Save up to 100 favourite contacts in your phonebook.

Hassle-free charging

Charge handset either way around

Smart cable management



The smart cable management system cleverly hides the wires from sight. Intelligently designed concealed sockets and an internal cable guide ensure everything is clutter-free and neatly tucked away.

Smooth and calibrated keypad




Calibrated keypad for smooth precision clicks

Superb sound quality

Advanced sound testing and tuning for superb voice quality

Up to 16 hours talk time

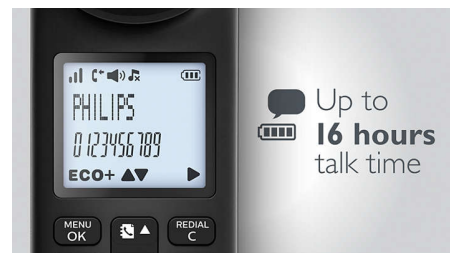

The phone can support up to 16 hours of conversation on a single charge.

Specifications

Sound

Volume control on handset
Ringtones on handset: 10 polyphonic
HQ-Sound

Convenience

Menu structure in the handset: List Menu
Base Station keys: Paging key
Number of keys: 20
Speakerphone — talk hands-free
Call Management: Caller ID*, Call Waiting*,
Dialled calls, Microphone mute, Missed Calls,
Received Calls
Call barring: Restrict the phone from making
specific outgoing calls
Signal strength indicator: 3 bar indicator
Battery level indicator: 3 bar battery icon
Intercom — multiple handsets
Date/Time display
Multi-handset capability: Up to 4
Programmable hot keys: Key 1 and 2
Keypad lock
Key tone on/off
Auto hang up
Up to 16 hrs talk time
Up to 250 hrs standby time
Charge time: 8 hours
Line cord length: 1.8 m
Power cord length: 1.8 m
Range: Open field < 300 m (984 ft); indoor <
50 m (164 ft)

Block callers/Blacklist*: Restrict the phone from
ringing on specific incoming numbers
Premium MMI: Standard
Event notifications: For events status

Power

Battery Capacity: 500 mAh
Mains power: AC 100-240 V ~ 50/60 Hz
Battery type: 2 x AAA, NiMH rechargeable
Power Consumption: < 0.75 W

Packaging dimensions

Height: 9.5 cm
Packaging type: Carton
Type of shelf placement: Laying
Width: 31.8 cm
Depth: 8.1 cm
Number of products included: 1
EAN: 48 95229 10703 8
Gross weight: 0.5 kg
Nett weight: 0.358 kg
Tare weight: 0.142 kg

Picture/Display

Display size: 4.6 cm / 1.8"
Backlight colour: White
Display type: 1 line Dot Matrix + 1-line Numeric +
Hard ICON
Backlight: Yes

Answering Machine

Recording time capacity: Up to 30 minutes
Pre-recorded OGM
Answering machine control: From handset

Memory Capacity

Call log entries: 50 entries
Phonebook: 100 names and numbers
Redial List Capacity: 20 entries
Phonebook store in the base

Security

Transmission encryption

SAR Value

Philips handsets: < 0.1 W/kg

Eco Design

Eco Mode: Automatic
Eco+

Network Features

Compatible: GAP

