



Philips
docking entertainment
system

with 30-pin connector
for iPod/iPhone



DCM129

Relax to great music

Obsessed with sound

Experience your iPod music in superb sound quality with the Philips DCM129 Docking Entertainment System. Just dock your iPod and enjoy music the way you like it. DCM129 also offers fast and precise tuning via its 20 preset stations.

Enjoy your music from multiple sources

- Play and charge your iPod/iPhone simultaneously
- Play CD, CD-R and CD-RW
- MP3 Link for portable music playback

Enrich your sound experience

- Dynamic Bass Boost for deep and dramatic sound
- Bass Reflex Speaker System delivers a powerful, deeper bass

Easy to use

- Digital tuning with 20 pre-set stations for extra convenience
- Single remote control for the system and iPod
- Compact design

PHILIPS

Highlights

Dynamic Bass Boost



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimise the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by causing the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends


the overall low frequency sounds to create a completely new dimension of deep bass.

MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.

Play and charge your iPod/iPhone

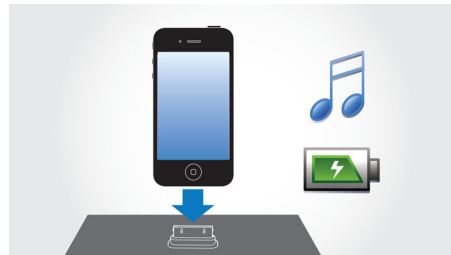

Enjoy your favourite MP3 music while charging your iPod/iPhone! The dock lets you connect your portable device directly to the Docking entertainment system so you can listen to your favourite music in superb sound. It also charges your iPod/iPhone while it plays so you can enjoy your music and not have to worry about your portable player battery running out. The Docking entertainment system automatically charges your portable device while it is docked.

Specifications

Sound

- Output Power: 4 W RMS
- Volume Control: Volume Control up/down
- Sound Enhancement: Dynamic Bass Boost
- Sound System: Stereo

Loudspeakers

- Main Speaker: 3" woofer, Bass Reflex Speaker System

Audio Playback

- Playback Media: CD, CD-R, CD-RW
- Disc Playback Modes: 20-Track Programmable, Repeat/one/all/programme, Fast Forward/Reverse, Next/Previous Track Search, Repeat Play, Shuffle Play
- Loader Type: Top
- Cradle playback mode: Charging iPod, Fast forward and reverse, Next and Previous track, Play and Pause, Charging iPhone
- Programmable Tracks: 20

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning
- Station presets: 20
- Tuner Enhancements: Auto Store

Connectivity

- Other connections: FM fixed pigtail antenna
- Audio Connections: 3.5 mm Line in

Convenience

- Clock: On main display
- Display Type: LED
- Backlight colour: Green
- Backlight

Accessories

- Included accessories: Remote Control, User Manual, World Wide Warranty leaflet, Quick install guide, FM antenna
- Remote control: 13-key remote control

Dimensions

- Set dimensions (W x H x D): 148 x 233 x 230 mm
- Main speaker dimensions (W x H x D): 134 x 230 x 152 mm
- Packaging dimensions (W x H x D): 370 x 270 x 326 mm
- Weight incl. Packaging: 5.2 kg

iPod compatibility

- Compatible with: iPod, iPod mini, iPod nano, iPod with colour display, iPod 5th Generation, iPod classic, iPod nano 1st Generation, iPod nano 2nd Generation, iPod nano 3rd Generation, iPod nano 4th Generation, iPod nano 5th Generation, iPod nano 6th generation, iPod touch, iPod touch 2nd generation, iPod touch 3rd generation, iPod touch 4th generation

Power

- Power supply: 220-240 V, 50 Hz

iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S



Issue date 2016-06-21

Version: 3.0.6

12 NC: 8670 000 91241
EAN: 87 12581 64878 7

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com