

PHILIPS

Wireless speaker

Bluetooth®

Stereo with bass radiator

Battery or AC operated

6W

SBT310W



Loud, dynamic sound

Wireless music streaming

Enjoy wireless music streaming via Bluetooth and powerful sound with Bass Reflex speakers. AC power and AA battery options ensure easy playback anywhere. Its time display makes it perfect on your bedside.

Simplicity in use

- Works with any Bluetooth-enabled device
- Ideal for any smartphone, computer or portable device

Impressive sound

- Advanced audio sound performance in a compact design
- Wireless music streaming via Bluetooth
- Bass Reflex speakers deliver a powerful, deeper bass

Easy and convenient

- Versatile AC power with AA battery options
- LED clock display for clear time viewing
- Audio-in for easy portable music playback

Specifications

Sound

Output power (RMS): 4W
Sound System: Stereo
Speakers: 2.75"

Connectivity

Audio Connections: 3.5mm Line in
Bluetooth profiles: A2DP, AVRCP, HFP, HSP
Bluetooth range: Line of sight, 10M or 30FT

Convenience

Display Digits: 4
Display type: LED display (green)
Clock/Version: Digital

Compatibility

Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
iPod touch: 3rd generation or later
Works with: most Bluetooth smartphones, tablets, music devices
iPad: iPad 1, iPad 2, new iPad
iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S
other music devices: with Bluetooth 2.1 or above

Power

Battery type: AA
Mains power: 110 - 220V
Number of batteries: 4
Operating time on battery: 5 hour(s)

Product dimensions

Height: 11,6 cm
Width: 30 cm
Depth: 15,6 cm
Width: 11,8 inch
Height: 4,6 inch

Depth: 6,1 inch
Weight: 1,2 kg
Weight: 2,646 lb

Accessories

Warranty certificate
World Wide Warranty leaflet
AC/DC adaptor: 5V, 1A
Quick Start Guide

Dimensions

Weight incl. Packaging: 1.65 kg
Product dimensions (WxDxH): 303 x 120 x 141 mm
Packaging dimensions (WxDxH): 355 x 165 x 170 mm
Product weight: 1.15 kg

Audio system

Frequency range: 160Hz/18KHZ:±3dB
Output power in total: 2W x 2
Input impedance: 22kohm
Signal/Noise ratio: 62dB
Power: 5V/1A
THD: < 0.8%

Audio systems L/R channels

Audio power amplifier: NS4150
Channel separation: 60dB
Rated output power: 2W x 2
Input sensitivity: 600MV

Left/Right speakers

Driver power range: 10W
Speaker driver: 2.75"
Frequency range: 80~20KHz
Nominal impedance: 4ohm
Sensitivity: 84+/-2dB


Highlights

Bluetooth



Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

Bass Reflex System

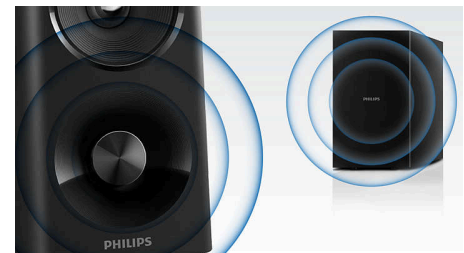

A chamber behind the speaker driver that channels air to acoustically tuned vents built into the speaker give the bass notes a more punchy, realistic sound.

AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

