



Philips  
Wireless speaker

**Bluetooth®**

Stereo with bass radiator  
Battery or AC operated  
6W



**SBT310W**

## Loud, dynamic sound

### Wireless music streaming

Enjoy wireless music streaming via Bluetooth and powerful sound with Bass Reflex speakers. AC power and AA battery options ensure easy playback anywhere. Its time display makes it perfect on your bedside.

#### **Impressive sound**

- Wireless music streaming via Bluetooth
- Bass Reflex speakers deliver a powerful, deeper bass
- Advanced audio sound performance in a compact design

#### **Easy and convenient**

- Versatile AC power with AA battery options
- Audio-in for easy portable music playback
- LED clock display for clear time viewing

#### **Simplicity in use**

- Works with any Bluetooth-enabled device
- Ideal for any smartphone, computer or portable device

# PHILIPS

## Wireless speaker

Bluetooth® Stereo with bass radiator, Battery or AC operated, 6W

# Specifications

### Product dimensions

- Product dimensions (W x H x D):  
30 x 11,6 x 15,6 cm
- Product dimensions (W x H x D):  
11,8 x 4,6 x 6,1 inch
- Weight: 1,2 kg
- Weight: 2,646 lb

### Compatibility

- Works with: most Bluetooth smartphones, tablets, music devices
- iPad: iPad 1, iPad 2, new iPad
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S
- iPod touch: 3rd generation or later
- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
- other music devices: with Bluetooth 2.1 or above

### Sound

- Output power (RMS): 4W
- Sound System: Stereo
- Speakers: 2.75"

### Audio system

- Frequency range: 160Hz/18KHz:±3dB
- Input impedance: 22kohm
- Output power in total: 2W x 2
- Power: 5V/1A
- Signal/Noise ratio: 62dB
- THD: < 0.8%

### Audio systems L/R channels

- Audio power amplifier: NS4150
- Channel separation: 60dB
- Input sensitivity: 600mV
- Rated output power: 2W x 2

### Left/Right speakers

- Driver power range: 10W
- Frequency range: 80~20KHz
- Nominal impedance: 4ohm
- Sensitivity: 84+/-2dB
- Speaker driver: 2.75"

### Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth range: Line of sight, 10M or 30FT
- Audio Connections: 3.5mm Line in

### Convenience

- Clock/Version: Digital
- Display Digits: 4
- Display type: LED display (green)

### Power

- Battery type: AA
- Number of batteries: 4
- Operating time on battery: 5 hr
- Mains power: 110 - 220V

### Accessories

- AC/DC adaptor: 5V, 1A
- Warranty certificate
- World Wide Warranty leaflet
- Quick start guide

### Dimensions


- Product dimensions (WxDxH): 303 x 120 x 141 mm
- Packaging dimensions (WxDxH): 355 x 165 x 170 mm
- Product weight: 1.15 kg
- Weight incl. Packaging: 1.65 kg



SBT310W/37

# Highlights

### Bluetooth

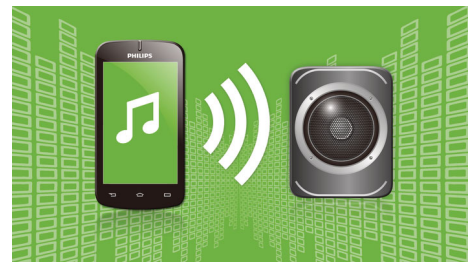

Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

### Bass Reflex System



A chamber behind the speaker driver that channels air to acoustically tuned vents built into the speaker give the bass notes a more punchy, realistic sound.

### AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.



Issue date 2020-07-09

Version: 1.0.5

12 NC: 8670 000 96313  
EAN: 00 60958 52297 23

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)