



Philips
Soundbar speaker

Virtual surround

Wireless subwoofer
Opt, Coax, Aux in, Audio in
Bluetooth®

HTL5110



Powerful sound for any TV

with wireless subwoofer

Unleash the full sound potential of all your media devices and enjoy the freedom of placement provided by the wireless subwoofer. This soundbar works with your TV, discs players, gaming console and MP3 player, which is Bluetooth compatible.

Connect and enjoy all your entertainment

- Audio in to enjoy music from iPod/iPhone/MP3 player
- Enjoy MP3/WMA music directly from your portable USB devices
- Wireless music streaming via Bluetooth
- Works with TVs, BD/DVD players, gaming consoles, MP3 players

Designed for simplicity

- Flexible placement on the wall or tabletop
- Great Sound built-in for true simplicity without clutter

Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- Twin tweeters for optimum clarity performance
- 120W RMS power delivers great sound for movies and music
- Wireless subwoofer adds thrill to the action


PHILIPS

Soundbar speaker
Virtual surround Wireless subwoofer, Opt, Coax, Aux in, Audio in, Bluetooth®

HTL5110/F7


Highlights

Virtual Surround Sound

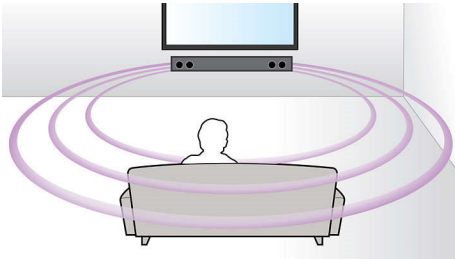

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Dolby Digital

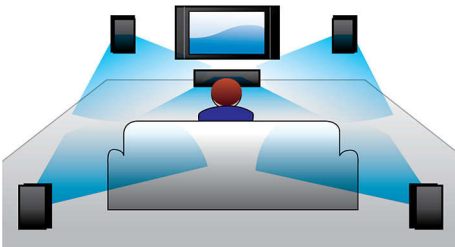

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Twin tweeters (HC 1012)

Twin tweeters for optimum clarity performance

Bluetooth



Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

USB



Enjoy MP3/WMA music directly from your portable USB devices

Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3

player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

120W RMS power

120W RMS power delivers great sound for movies and music

Wireless subwoofer




Wireless subwoofer adds thrill to the action

Great sound built-in

Great Sound built-in for true simplicity without clutter

Flexible placement

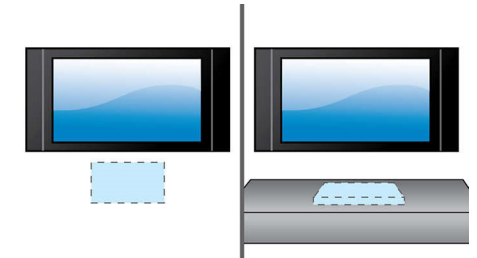

Flexible placement on the wall or tabletop



Soundbar speaker

Virtual surround Wireless subwoofer, Opt, Coax, Aux in, Audio in, Bluetooth®

HTL5110/F7

Specifications

Sound

- Sound Enhancement: Night Mode, Treble and Bass Control, Virtual Surround Sound
- Sound System: Dolby Digital
- Subwoofer output power: 60W
- Speaker output power: 2x 30 W
- Total Power RMS @ 30% THD: 120 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer type: Wireless subwoofer
- Speaker Drivers per side: 1 woofer, 1 Mylar tweeter

Connectivity

- Front / Side connections: Audio in, USB
- Integrated Connections: Bluetooth
- Rear Connections: AUX in, Digital coaxial in, Digital optical in
- iPod/iPhone: via 3.5mm Audio In, via bluetooth

Outer Carton

- Number of consumer packagings: 1
- Length: 41.7 inch
- Width: 9.4 inch
- Height: 17.3 inch
- Gross weight: 22.046 lb
- Nett weight: 16.534 lb
- Tare weight: 5.512 lb
- UPC: 6 09585 23464 2

Power

- Power consumption: 25 W
- Power supply: 50Hz, 110-240V
- Standby power consumption: < 0.5 W

Packaging dimensions

- Packaging type: Carton
- Type of shelf placement: Laying
- Height: 17.3 inch
- Number of products included: 1
- Width: 41.7 inch
- Depth: 9.4 inch
- Gross weight: 22.046 lb
- Nett weight: 16.534 lb
- Tare weight: 5.512 lb
- UPC: 6 09585 23464 2

Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

Design

- Wall mountable

Dimensions

- Main Unit (W x H x D): 995 x 91 x 104 mm
- Weight incl. Packaging: 10 kg
- Main Unit Weight: 3.5 kg
- Packaging (W x H x D): 1060 x 440 x 240 mm
- Subwoofer (W x H x D): 190 x 250 x 315 mm
- Subwoofer Weight: 4 kg
- Subwoofer cable length: 3 m

Sustainability

- Packaging: Soya based ink



Issue date 2024-04-13

Version: 3.2.4

UPC: 6 09585 23464 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com