



Philips  
Soundbar speaker

2.1 CH wired subwoofer  
Bluetooth®  
HDMI ARC  
120 W

HTL2163B



## Powerful sound for any TV

with subwoofer

Enjoy your films and music with Virtual Surround Sound and deep bass via just one cable! This Philips Soundbar with dedicated subwoofer enriches your home entertainment when used with TVs, BD/DVD players, gaming consoles and MP3 players

### Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Flexible placement on the wall, tabletop or stand

### Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- Twin tweeters for optimum clarity performance
- External subwoofer adds thrill to the action


### Connect and enjoy all your entertainment

- Wireless music streaming via Bluetooth
- Enjoy MP3/WMA music directly from your portable USB devices
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Audio-in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote

# PHILIPS

# Highlights

## Virtual Surround Sound

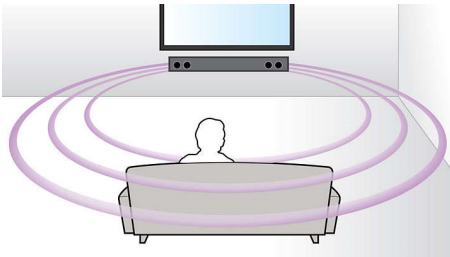

Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## External subwoofer



External subwoofer adds thrill to the action


## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player or laptop via a simple connection to your Philips home cinema system. Simply connect your audio device to the Audio in jack

to enjoy your music with the superior sound quality of the Philips home cinema system.

## Dolby Digital

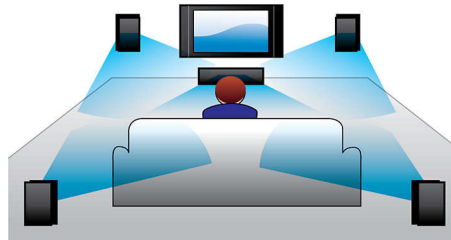

Because Dolby Digital standards, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

## USB



Enjoy MP3/WMA music directly from your portable USB devices

## Low-rise profile



Low-rise profile for the perfect fit in front of your TV

## Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

## Twin tweeters (HC 2012)


Twin tweeters for optimum clarity performance

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Flexible placement

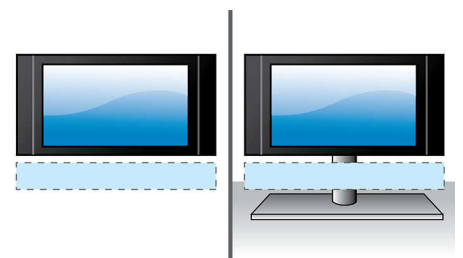

Enjoy the versatility of this home theatre system that allows you to place it where you want. Whether on a TV stand, on a table or mounted on a wall, the product looks sensational and functions without compromise. For once, you get to control how your home looks without giving up an incredible home theatre experience.

# Specifications

## Sound

- Sound Enhancement: Virtual Surround Sound, Treble and Bass Control, Night Mode
- Sound System: Dolby Digital
- Subwoofer output power: 60 W
- Speaker output power: 30 W x 2
- Total Power RMS @ 10% THD: 120 W

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Passive
- Subwoofer impedance: 3.6 ohm
- Speaker Drivers per side: 1 woofer, 1 Mylar tweeter
- Speaker Impedance: 8 ohm
- Tweeter Impedance: 16 ohm

## Connectivity

- Integrated Connections: Bluetooth
- Rear Connections: Digital coaxial in, Digital optical in, Subwoofer out, AUX in, HDMI 1.4 output (ARC)
- iPod/iPhone: via 3.5 mm Audio In, via Bluetooth
- Top connections: Audio In (3.5 mm), USB 2.0

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel,

Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passsthrough, System standby

## Power

- Power consumption: 30 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: < 0.5 W

## Accessories

- Included accessories: AAA Battery (x1), Power cord, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, AC Adapter

## Design

- Wall mountable

## Dimensions

- Main Unit (W x H x D): 843 x 52 x 60 mm
- Weight incl. Packaging: 6.3 kg
- Main Unit Weight: 1.4 kg
- Packaging (W x H x D): 400 x 292 x 349 mm
- Subwoofer (W x H x D): 165 x 240 x 295 mm
- Subwoofer Weight: 2.5 kg
- Subwoofer cable length: 3 m

## Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink



Issue date 2024-04-13

Version: 6.0.9

EAN: 87 12581 70702 6

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)