



Philips
Sports headphones with
mic

8.6mm drivers/closed-back
Neckband



SHQ4305WS

Experience freedom. Stop at nothing

Secure fit and lightweight

The featherweight Actionfit SHQ4305 is engineered from ultra light, flexible and sweat proof rubber, ensuring a perfect fit that you will want to keep on long after your workout. Their rich deep bass keeps you motivated always.

Push harder

- High performance sound drives peak performance
- Insert earphones provide sound isolation

Freedom

- 11.4g ultra lightweight design provides ultimate comfort*
- Flexible neckband auto-adjusts to your head for an ideal fit
- 3 ear tip sizes for the optimum fit
- Cable clip included for tangle-free workout


protection

- Sweat and moisture proof - ideal for any workout
- Kevlar® Reinforced cable for ultimate durability
- Sporty carrying pouch for easy storage

PHILIPS

Highlights

11.4g ultra lightweight design

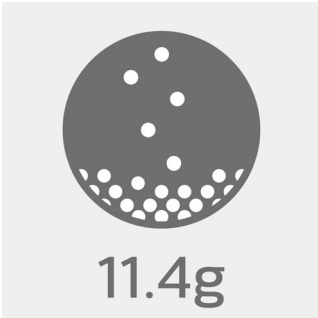


Weighing in at just 11.4g, these Actionfit sports earphones are so light and comfortable that you will forget you are even wearing them. Perfect for keeping you going right through the hard final miles.

3 choices of ear tips sizes



3 ear tip sizes for the optimum fit

Cable clip

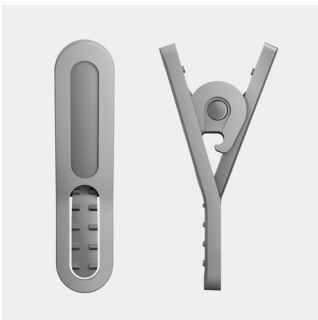

A cable clip comes included with ActionFit earphones, keeping the cable out of your way while you push yourself harder.


Sporty carrying pouch for easy storage

Flexible neckband




A neckband made with a supple spring-wire that moulds itself to you makes these Actionfit headphones effortlessly comfortable. Lightweight rubberized earhooks and elastic rubber neckband feel secure yet comfortable throughout any workout.

High performance sound

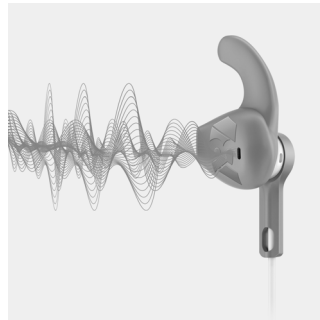

8.6mm neodymium drivers pump out high performance sound, pushing you to perform at your best.

Kevlar® Reinforced cable

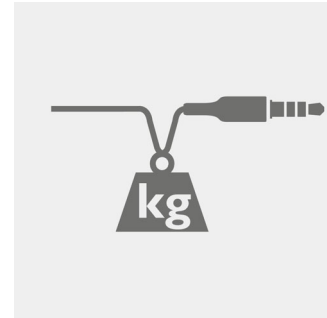


Kevlar® reinforced headphone cables are tough enough to survive even the roughest of workouts.

Sound isolation

Insert earphones create a tight seal in the ear canal, resulting in a strong isolation effect. Our oval acoustics tubes are ergonomically optimized to ensure exceptional fit.

Sweat and moisture proof

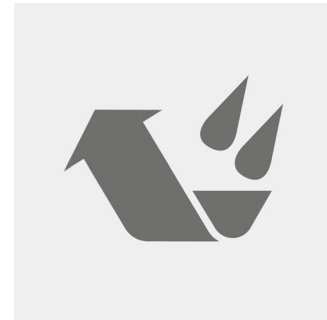

Sweat or rain will no longer stop you from maxing yourself out to your favorite tunes. These Actionfit sports headphones materials are sweat and water proof making them the perfect workout companion whatever the weather.

Specifications

Design

- Color: White

Accessories

- Storage pouch

Connectivity

- Cable Connection: single sided
- Cable length: 1.2 m
- Connector: 3.5 mm
- Finishing of connector: gold-plated

Sound

- Diaphragm: PET
- Impedance: 16 ohm
- Magnet type: Neodymium
- Maximum power input: 20 mW
- Sensitivity: 107 dB
- Speaker diameter: 8.6 mm
- Type: Dynamic
- Voice coil: CCAW
- Acoustic system: Closed
- Frequency response: 5 - 24 000 Hz

Packaging dimensions

- EAN: 69 25970 70104 4
- Packaging dimensions (W x H x D):
17 x 22.5 x 4.5 cm
- Gross weight: 0.122 kg
- Nett weight: 0.032 kg
- Number of products included: 1
- Packaging type: Blister
- Tare weight: 0.09 kg
- Type of shelf placement: Both

Outer Carton

- Gross weight: 0.526 kg
- GTIN: 1 69 25970 70104 1
- Outer carton (L x W x H): 23.8 x 15.4 x 21.1 cm
- Nett weight: 0.096 kg
- Number of consumer packagings: 3
- Tare weight: 0.43 kg

Product dimensions

- Product dimensions (W x H x D):
12 x 13 x 4.2 cm
- Weight: 0.032 kg



Issue date 2016-07-18

Version: 3.2.4

12 NC: 8670 001 22356
EAN: 69 25970 70104 4

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com