

Philips Modea
DVD/SACD home theater
system

MODEA

HTS8000S



The art of living

Combining the finesse of style and performance, this elegant and award winning design indulges you with endless hours of viewing and listening experience. So sit back and immersed yourself in movies and music at the comfort of your home.

Fusion of form and function

- Award winning flat design, for wall mount or table top
- Small and elegant user interface

Complete integrated home theater system

- SonoWave for full, no-fuss multichannel surround sound
- Multi-format DVD player
- Progressive Scan component video for optimized image quality
- Clean and clever cable management

PHILIPS

Highlights

SonoWave

The SonoWave surround sound system, powered by a full multi-channel amplifier, uses an advanced digital sound processing technology that provides multi-channel surround sound from fewer speakers. By positioning independent drivers at precise angles, a powerful multi-channel surround

sound is produced and experienced in any room shape and size.

Progressive Scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both

fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

Clean & neat cable management

The clean and clever cable management system allows you to manage your cable connections through an ergonomically designed interface.



Specifications

Picture/Display

- Aspect ratio: 4:3, 16:9
- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, 4x Video Upsampling

Sound

- D/A converter: 24 bit, 96 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: >95 dB
- Sound System: Dolby Digital, DTS, Dolby Prologic II, Stereo
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- Equalizer settings: Action, Classic, Concert, Digital, Drama, Jazz, Rock, Sci-Fi
- Total Sound Power (RMS): 550 W

Video Playback

- Playback Media: DVD-Video, DVD+RW, DVD+R, DVD-RW (Video mode), DVD-R, SVCD, Video CD
- Compression formats: MPEG1, MPEG2, MPEG4, DivX 5.x, DivX 4.x, DivX 3.11
- Video disc playback system: NTSC, PAL

Audio Playback

- Playback Media: SACD Multichannel, SACD Stereo, CD, CD-R, CD-RW, MP3-CD, WMA
- Compression format: MP3, PCM, Windows Media™ Audio
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Playback Media: Picture CD
- Picture Compression Format: JPEG
- Slide show: with music (MP3)

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning
- Auto store
- Number of Preset Channels: 40

Connectivity

- Other connections: Composite video (CVBS) out, Component Video out Progressive, Analog audio Left/Right in, Digital coaxial in, FM Antenna

Convenience

- Child Protection: Parental Control
- Remote Control: Multi-functional

Power

- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: < 1 W

Loudspeakers


- Satellite Speaker: Magnetically shielded front
- Satellite speaker freq range: 120-20000 Hz
- Satellite speaker impedance: 6 ohm
- Satellite speaker drivers: 1" conical dome tweeter, 3" mid range woofer
- Subwoofer freq range: 30-120 Hz
- Subwoofer impedance: 3 ohm
- Subwoofer driver: 6.5" high efficiency woofer

Accessories

- Included accessories: Video Cable, Audio Cable, FM antenna, AC Power Cord, Interconnect cable, Remote Control, Wall mounting bracket, Screws for wall mounting x2, User Manual, Quick Use Guide, Warranty certificate

Dimensions

- Set dimensions (W x H x D): 251 x 277 x 134 mm
- Set weight: 2.8 kg
- Surround Speaker dimensions (W x H x D): 350 x 140 x 134 mm
- Surround speaker Weight: 1.15 kg
- Subwoofer dimensions (W x H x D): 600 x 411 x 216 mm
- Subwoofer Weight: 9 kg
- Packaging dimensions (W x H x D): 664 x 350 x 464 mm
- Weight incl. Packaging: 18.2 kg

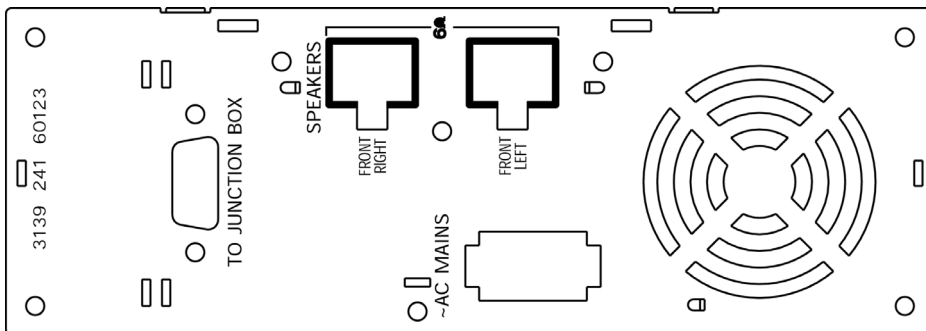

Issue date 2018-04-11

Version: 10.0.13

12 NC: 9073 100 12437
EAN: 87 10895 86478 7

© 2018 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com