


Philips  
Wireless Home Monitor

for iPod/iPhone/iPad

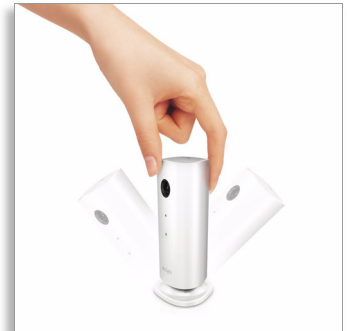

M100

## Watch over your home from your iPhone/iPad

### Put your mind at ease

The Philips In.Sight wireless home monitor allows you watch over your home when you are away. Setup is easy, giving you instant monitoring from an iPhone or iPad. Push alerts tell you when motion or noise has been detected.

#### Stay close to loved ones when you're on the move

- Instant monitoring from your iPhone or iPad
- iPhone/iPad app for convenient operation
- Browser-based monitoring using any web browser
- Wi-Fi enabled for placement anywhere in your home

#### Secure and easy to set up

- Magnetic base for easy adjustment of viewing direction
- Quick and easy set-up via QR code
- Extra wall mount for the best possible placement
- Watch up to 16 monitors with one app on your iPhone/iPad
- Encrypted direct networking for secure connection

#### Alerts via push notifications

- Recordings uploaded to your private Dropbox account
- Built-in noise and motion detection
- Phone alerts when monitor detects noise/motion



# PHILIPS

# Highlights

## Wi-Fi enabled



The InSight wireless home monitor is a Wi-Fi enabled monitor, it uses your home wireless network to stream live video and audio with monitors that you can set up anywhere you like.

## Instant monitoring



Once you have set up your InSight wireless home monitor on your local network, you can access the video stream from your iPhone or iPad anywhere in the world over Edge, 3G and wireless networks instantly. There's no limit to where and how you view your video.

## InSight app for Apple




Philips InSight wireless home monitor is a cutting-edge app-based wireless video monitor that lets you see and hear what's happening at home, from anywhere in the world. Completely free, the dedicated InSight app can be downloaded from the App Store, directly right from your iPhone or iPad.

## Browser-based monitoring

The InSight wireless home monitor also allows you to find out what's going on at home in real time from your favorite web browser, be it Chrome, Internet Explorer, Safari or Firefox, on a PC or Mac.

## Easy set-up

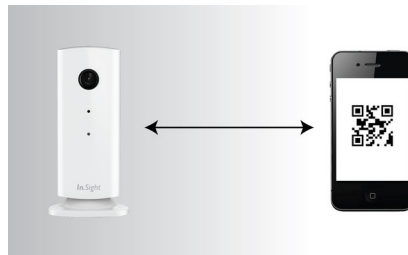

Quick and easy set-up allows you to pair the InSight wireless home monitor with an iPhone or iPad. Place the QR code image in front of the monitor lens to activate the InSight app. The monitor is ready to use when light turns solid green.

## Watch up to 16 monitors



With one app, you can watch up to 16 Philips InSight wireless home monitors. Place as many monitors as you like, anywhere you like.

## Direction adjustable



Philips InSight wireless home monitor has a magnetic base that holds the monitor, allowing

you to rotate and adjust your monitor to any angle.

## Extra wall mount



InSight wireless home monitor comes with a wall mounting bracket. Use it to easily mount your monitor to any wall or ceiling. The base itself pivots and turns, so you can still reposition the InSight wireless home monitor when it is mounted.

## Encrypted direct networking



Philips InSight wireless home monitor uses highly secure encryption to provide you with privacy at all times. InSight wireless home monitor uses a unique encryption key each time it makes a connection.

## Noise and motion detection



It's impossible to predict when something might happen. InSight wireless home monitor keeps watch with adjustable noise and motion detection. You will be alerted anytime noise or motion is detected.



# Specifications

## Lens & Sensor

- Sensor: VGA
- Focus mode: Fixed
- Focus range: 0.4M to infinity

## Video Quality

- VGA streaming
- Formats: H.264 video compression
- White Balance: Automatic white balance
- Exposure: Automatic exposure control

## Features

- Wi-Fi: 802.11 b/ g/ n (2.4GHz), 802.11 a (5GHz) not supported
- Motion detection
- Noise detection
- LED indicator
- Magnetic base: Direction adjustable
- Reset button
- Screw holes: Yes, 1

## Software

- Installation: via App
- Automatic App update
- Web browser support
- System supported: iOS4.3 or above
- iPad compatibility: iPad, iPad 2, New iPad, iPad with Retina display, iPad mini
- iPhone compatibility: iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5
- iPod compatibility: iPod Touch 4th generation & up

## Accessories included

- Extra wall mount
- USB power adapter
- USB cable: Yes, 2.5 m
- Screws / wall anchors: 3
- Quick Start Guide

## Input and Output

- Microphone: High-sensitive, Mono
- USB: Mini-USB port

## Minimum Requirements

- Windows: Windows XP, Windows Vista, Windows 7, Internet Explorer 6.0, PENTIUM 4 - 2.8 GHz processor, 1GB RAM and 64 MB Video RAM
- MAC: MACINTOSH 10.4, MACINTOSH 10.5, MACINTOSH 10.6, MAC 1.66 Ghz Intel Core Duo, Safari 1.1

## Dimensions

- Packaging dimensions (W x H x D): 158 x 160 x 58 mm
- Product dimensions (W x H x D): 45 x 95 x 45 mm

## Accessories

- World Wide Warranty leaflet



Issue date 2018-06-26

Version: 12.2.5

12 NC: 8670 000 90506  
EAN: 87 12581 64571 7

© 2018 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Viewing live video over your home Wi-Fi network using the In.Sight wireless home monitor is free and unrestricted. Viewing live video remotely (either over an external Wi-Fi network or 3G network) is also free for unlimited sessions, but subject to a limit of 5 minutes per session.

\* Longer remote viewing session times and other premium features are available for purchase from the App. These conditions are subject to change.