

Philips
2.1 Home theater

Blu-ray Disc playback

HTS7200



Clarity in every sound detail

with Blu-ray Disc playback

Be part of a new HD experience with this stylish Blu-ray home theater crafted in aluminum and glass. Soft dome tweeters built into its high-quality speakers deliver superb sound clarity. Watching movies will never be the same again.

Superior listening experience

- Soft dome tweeters for pure sound and voice clarity
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- Dolby Virtual Speaker for realistic surround sound
- Fullsound™ to bring your MP3 music to life
- DoubleBASS technology for fuller and deeper bass
- 440W RMS power delivers great sound for movies and music

Designed to enhance your living space

- Stylish design with aluminium finish and glass stands
- Touch panel controls for easy playback and volume control

Connect and enjoy all your entertainment

- Blu-ray Disc playback for sharp images in full HD 1080p
- BD-Live* (Profile 2.0) to enjoy online Blu-ray bonus content
- Deep Color for vivid images in over a billion colors
- EasyLink to control all HDMI CEC devices via a single remote

PHILIPS
sense and simplicity


Highlights

BD-Live (Profile 2.0)




BD-Live opens up your world of high definition even further. Receive up-to-date content just by connecting your Blu-ray Disc player to the internet. Exciting new things like exclusive downloadable content, live events, live chats, gaming and on-line shopping all await you. Ride the high definition wave with Blu-ray Disc playback and BD-Live.

Blu-ray Disc playback

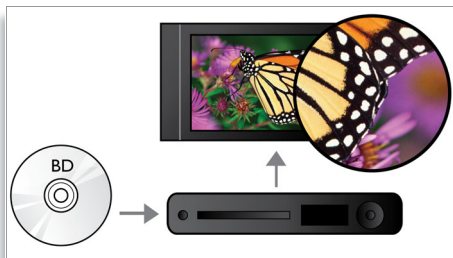


Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound - so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allow a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features like pop-up menus bring a whole new dimension to home entertainment.

Deep Color

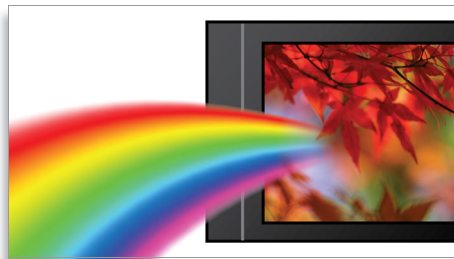


The real world is not limited by colors - practically any hue can occur in any shade, in any luminosity. What you see on your TV screen is a different matter, so images often don't look true to life. Deep Color recreates the natural world on your TV screen, bringing to you the millions and millions of colors that occur in reality - and launching your viewing experience to new heights.

Dolby Virtual Speaker

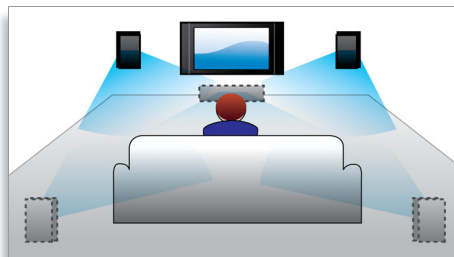

Dolby Virtual Speaker is a sophisticated audio virtualization technology that produces rich and immersive surround sound from a two-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. DVD playback is enhanced by expanding the 2-channel environment. When combined with Dolby Pro Logic II processing, any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Dolby TrueHD and DTS-HD

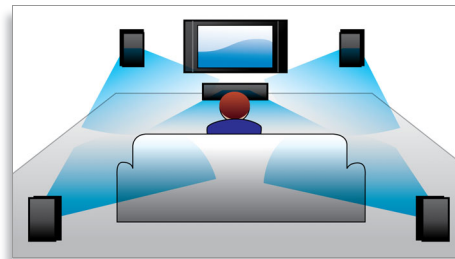

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

440W RMS power



440W RMS power delivers great sound for movies and music

Specifications

Video Playback

- Compression formats: avi, AVCHD, MPEG1, MPEG2, MPEG4, WMV, WMV 9, MKV, XviD, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, H.264, VC-1
- Playback Media: BD Video, BD-R/RE 2.0, DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW, USB flash drive (FAT16/32), USB HDD (FAT32), DVD +/-R DL (Dual Layer)
- BD Region Code: C
- DVD Region Code: 5
- Picture Quality Enhancements: Video upscaling

Audio Playback

- Compression format: MP3, WMA
- Playback Media: CD-R/RW, DVD+R/+RW, Audio CD, DVD-R/-RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

Picture/Display

- D/A converter: 12 bit / 150MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

Sound

- Total Power (RMS): 440 W
- Output power (RMS): 2x120W, 200W
- Frequency response: 40-20000 Hz
- Signal to noise ratio: >65 dB
- D/A converter: 24 bit, 192 kHz
- Sound System: Dolby True HD, Dolby Digital, Dolby Virtual speaker, Stereo, Dolby Prologic II, DTS
- Equalizer settings: Action, Rock, Classic, Concert, Drama, Jazz, Sports
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode

Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: DVD-R/-RW, DVD+R/+RW, CD-R/RW, USB flash drive
- Picture Enhancement: Rotate, Zoom, Slideshow with music playback

Tuner/Reception/Transmission

- Tuner Bands: FM
- RDS: Station Name
- Number of Preset Channels: 40

Loudspeakers

- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150-20000 Hz
- Subwoofer driver: 6.5" high efficiency woofer
- Subwoofer impedance: 3 ohm
- Subwoofer freq range: 45-5000 Hz
- Subwoofer type: Passive
- Satellite speaker drivers: 18mm Dome Tweeter, 2" x 3"

Connectivity

- Front / Side connections: Hi-Speed USB, MP3 Line-in
- Rear Connections: HDMI output, Component Video output, Composite video (CVBS) output, AUX in, FM Antenna, Digital coaxial in, Digital optical in, Ethernet, Easy-Fit Speaker Connectors

Power

- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.8 W
- Power consumption: 100 W

Accessories

- Included accessories: User Manual, Quick start guide, Remote Control, 2 x AAA Batteries, FM antenna, World Wide Warranty leaflet, HDMI cable

Dimensions

- Set dimensions (W x H x D): 360 x 72 x 345 mm
- Set weight: 4.2 kg
- Front Speaker Width: 130 mm
- Front Speaker Height: 362 mm
- Front Speaker Depth: 130 mm
- Front Speaker Weight: 1.8 kg
- Subwoofer dimensions (W x H x D): 295 x 375 x 295 mm
- Subwoofer Weight: 6.3 kg
- Packaging dimensions (W x H x D): 560 x 472 x 400 mm



Issue date 2012-09-18

Version: 7.2.10

12 NC: 8670 000 57157
EAN: 87 12581 51047 3

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com