



Philips
Mira design cordless phone

1.8" display/ white backlight
Handset speakerphone



M5601WG

Unique & desirable

With its sleek silhouette and high quality finishing, Philips Mira challenges conventional perceptions about telephone design. Timeless, unique and stylish, it's an elegant piece of art for your home.

Outstanding design in high-quality execution

- Durable, glossy and fingerprint-resistant outer shell
- Charge handset either way around
- Calibrated keypad for smooth precision clicks
- Elegant and stylish appearance from every angle
- Smart cable management

Ultimate calling experience

- Easy to read 4.6 cm (1.8") display with white backlight
- Handset speakerphone allows you to talk handsfree
- Advanced sound testing and tuning for superb voice quality
- Save up to 100 favorite contacts in your phonebook
- Privacy settings: call block & call barring
- Talk up to 16 hours talk time on a single charge

Eco-designed

- Zero power emission when ECO+ mode is activated

PHILIPS

Mira design cordless phone
1.8" display/ white backlight Handset speakerphone

M5601WG/90

Highlights

Durable and glossy outer shell



Durable, glossy and fingerprint-resistant outer shell

Beautiful from every angle



Elegant and stylish appearance from every angle

Handset speakerphone



Handsfree mode uses a built-in loud speaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

ECO+




Zero power emission when ECO+ mode is activated

Multiple privacy settings

Value your privacy and quiet at home? Black List restricts specific numbers or those starting with certain digits, protecting you from receiving unwanted calls. You can choose to block up to 4 sets of numbers. Each set can consist of 1 to 24 digits. If the number of an incoming call starts with any of these number sets or are the exact numbers that you chose to blocked, your phone will not ring. With Call Barring, you can avoid the surprise of expensive phone bills by blocking calls to specific numbers starting with certain digits (for example, pay per call numbers).

100-name phone book

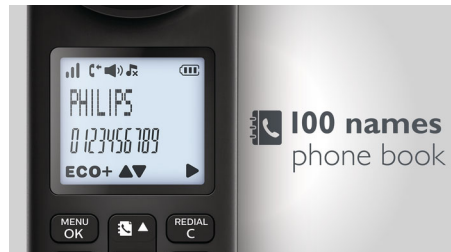

Always have the phone numbers of your loved ones available: Save up to 100 favorite contacts in your phonebook.

4.6cm (1.8") display



Easy to read 4.6 cm (1.8") display with white backlight

Hassle-free charging

Charge handset either way around

Smart cable management



The smart cable management system cleverly hides the wires from sight. Intelligently designed concealed sockets and an internal cable guide ensure everything is clutter free and neatly tucked away.

Smooth and calibrated keypad



Calibrated keypad for smooth precision clicks

Superb sound quality

Advanced sound testing and tuning for superb voice quality

Specifications

Sound

- Ringtones on handset: 10 polyphonic
- HQ-Sound
- Volume control on handset

Picture/Display

- Display size: 4.6 cm/1.8"
- Display type: 1-line Dot Matrix + 1-line Numeric + Hard ICON
- Backlight: Yes
- Backlight color: White

Convenience

- Speakerphone - talk handsfree
- Menu structure in the handset: List Menu
- Signal strength indicator: 3-bar indicator
- Battery level indicator: 3-bar battery icon
- Date / Time display
- Programmable hot keys: Key 1 and 2
- Auto hang up
- Key tone on/off
- Call Management: Caller ID*, Call Waiting*, Dialed calls, Microphone mute, Missed Calls, Received Calls
- Multi handset capability: Up to 4
- Line cord length: 1.8 m
- Power cord length: 1.8 m
- Charge time: 8 hours
- Up to 16 hrs talk time
- Up to 250 hrs standby time
- Range: Open field < 300 m; indoor < 50 m
- Keypad lock
- Base Station keys: Paging key
- Block callers/ Blacklist*: Restrict the phone from ringing on specific incoming numbers
- Call barring: Restrict the phone from making specific outgoing calls
- Event notifications: For events status
- Number of keys: 20

- Premium MMI: Standard
- Intercom - multiple handsets

Memory Capacity

- Phonebook: 100 names and numbers
- Redial List Capacity: 20 entries
- Call log entries: 50 entries
- Phonebook store in the base

Eco Design

- Eco+
- Eco Mode: Automatic

Power

- Battery Capacity: 500 mAh
- Battery type: 2 x AAA, NiMH rechargeable
- Mains power: AC 100-240 V ~ 50/60 Hz
- Power Consumption: < 0.70 W

Security

- Transmission encryption

Network Features

- Compatible: GAP

SAR Value

- Philips handsets: < 0.1 W/kg

Packaging dimensions

- EAN: 48 95185 62144 9
- Number of products included: 1
- Packaging type: Carton
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 31.8 x 9.5 x 8.1 cm
- Gross weight: 0.503 kg
- Nett weight: 0.362 kg
- Tare weight: 0.141 kg



Issue date 2019-06-02

Version: 3.0.8

12 NC: 8670 001 35627
EAN: 48 95185 62144 9

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com