





Philips
Clock Radio

Sound soother

Alarm, Natural sound
Plug and set

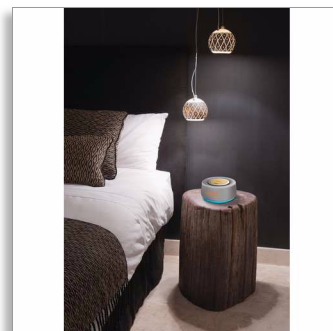

AJH5100

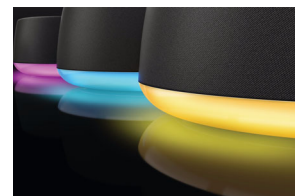

Wake up & fall asleep with nature

Also enjoy multi-colored mood-lights

Fill your bedroom with the calming calls of nature or tunes. Pick from a list of these and use any of the 20 in alarms, or the sleep timer that gently fades music out. The Philips Clock radio also offers multi-colored mood-lights.

Fall asleep with nature

- 20 nature sounds & tunes for falling asleep & waking calmly
- Peaceful sleep timer with gradual music fade-out
- Gentle wake for a pleasant wake up experience
- Adjustable alarm volume for reliable wake up calls

Designed to fit your bedroom

- Multi-color mood-lights to match your style
- Mood-lights control for color loop or desired ambience
- Adjustable display brightness for comfort viewing

Easy to use

- FM digital tuning
- Plug and set the time automatically
- Time and alarm backup for on-time wakeup even with power cut

PHILIPS


Highlights

20 nature sounds & tunes




Say good night and mean it. 20 built-in sounds help you fall asleep and wake up better, with 15 chosen to create an atmosphere of calm in your bedroom, lulling you into deep and restful sleep. Drop off to sounds of nature like those made by rain and forests, soothing environmental sounds like heartbeats and wind chimes, or music designed to put you in the mood for sleep. When morning comes, wake up refreshed with any of five sounds, including the toll of a bell and the chirping of birds. Besides the wide selection of sounds, you can also choose to wake up to a standard buzzer or to the radio.

Peaceful sleep timer

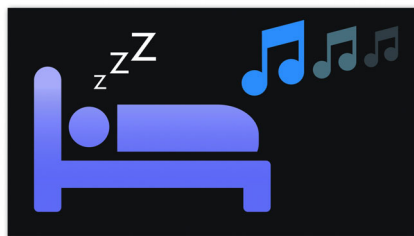

This soothing sleep timer allows you to program the required length of time for music fade-out to coincide with how long you normally take to fall asleep. Besides its power-saving capabilities, it also helps to ease you into blissful slumber by eliminating the need to adjust the volume or the shock of an abrupt end to the background music as you start to doze off.



Multi-color mood-lights



Color and light can affect how you feel. One combination can make you feel energized, and another make you feel composed. Colored lights are also undeniably attractive and can add interest to any room. This clock radio comes with multi-color mood-lights that can produce more than 32,000 colors - giving you a plethora of hues to choose from, whether you want light that matches your mood or your décor.

Mood-lights color control

Play the mood-lights to let the colors loop - and enjoy a vibrant ambiance. Or pause the lights to stop at a color you simply like, or a color that matches your room or your mood.

Plug and set

Take the clock out of its box, plug it in and the time is already set for you - automatically. The intelligent clock reads preprogrammed data and sets the correct time according to the default time zone. If you are living outside the default time zone, all you have to do is press the Time zone button and the clock will reset the time. No more reading manuals, no more fiddling with buttons.

Time and alarm backup

When there is a power failure, this intelligent clock will still maintain and keep its reliable time and your settings. The scheduled alarm remains active even when its display is off - all thanks to a pre-installed battery. When the power comes back on, there is no need to adjust the clock or reinstate settings. More amazingly, even if power supply is not restored, the battery provides enough energy for the buzzer to go off at the alarm time you have set - making sure you never wake up late.

Specifications

Convenience

- Alarms: 24 hour alarm reset, Buzzer Alarm, Gentle Wake, Radio Alarm, Repeat alarm (snooze), Sleep timer
- Clock/Version: Digital
- Display Type: 4 digit display
- Clock Enhancements: Backup Clock
- Display Enhancements: Brightness Control

Tuner/Reception/Transmission

- Tuner Bands: FM

Sound

- Sound System: Mono
- Volume Control: rotary
- Output power (RMS): 600mW

Accessories

- Included accessories: AC Power Cord, User Manual, Warranty certificate

Dimensions

- Packaging type: D-box
- Product dimensions (W x H x D): 144 x 144 x 65 mm
- Packaging dimensions (W x H x D): 222 x 164 x 96 mm
- Gross weight: 0.73 kg
- Net weight: 0.45 kg

Power

- Power supply: 100 - 240V AC, 50/60Hz
- Number of batteries: 1
- Backup battery: CR2032 (included)



Issue date 2014-06-12

Version: 2.0.5

12 NC: 8670 000 85621
EAN: 87 12581 62865 9

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com