

Philips
CD Soundmachine

USB

AZ1834



Enjoy music wherever you go

The sleek and portable design of AZ1834 allows you to enjoy your favorite MP3/WMA music collections stored at portable music player without using headphone.

Enjoy your music from multiple sources

- USB Direct for MP3/WMA music playback
- Play MP3/WMA-CD, CD and CD-RW

Rich and clear sound

- Bass Reflex Speaker System delivers a powerful, deeper bass
- Full range speakers for immersive and dynamic sound

Easy to use

- FM/MW tuner for radio enjoyment
- CD Shuffle/Repeat for personalized music enjoyment
- Line-in connection for your portable music playback

PHILIPS

Highlights

USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

Play MP3/WMA-CD, CD and CD-RW




Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorized music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.

Bass Reflex Speaker System




Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

Full range speakers

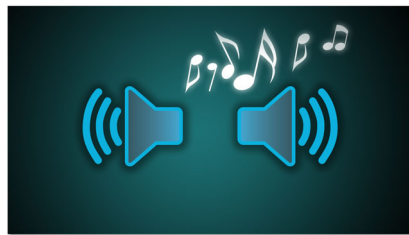


The compact stereo speakers provide full range quality sound and allow you to listen freely. Enjoy music anytime, anywhere, with built-in stereo speakers that allow the convenience and enjoyment of music playback.

FM/MW tuner

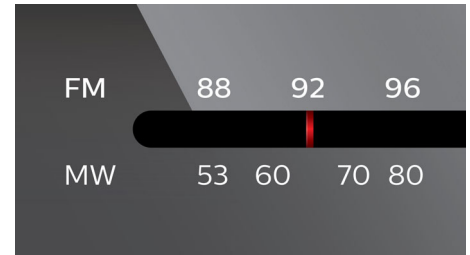

FM/MW (AM) stereo tuner

CD Shuffle/Repeat

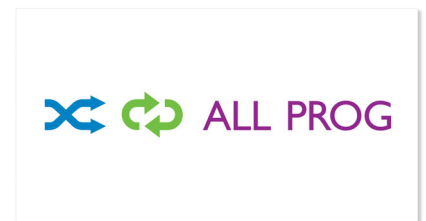

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

Line-in connection

MP3 line-in connectivity allows direct playback of MP3 content via your audio system. By simply connecting your portable MP3 player to the audio system via its built-in line-in jack, you can enjoy superb sound quality while playing your favorite music from your portable MP3 player.



Specifications

Connectivity

- USB: USB host
- MP3 Link: 3.5mm stereo line in

Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program

Tuner/Reception/Transmission

- Tuner bands: FM, MW
- Antenna: FM antenna

Sound

- Sound system: stereo
- Volume control: rotary (analogue)
- Output power: 2 x 1 W RMS

Loudspeakers

- No. of built-in speakers: 2
- Speaker grille finishing: metal

Convenience

- Loader type: top
- Display type: LCD display

Accessories

- Cables/Connection: 3.5 mm stereo line in cable, power cord
- Others: User Manual
- Warranty: Warranty Certificate

Power

- Battery type: C size (LR14)
- Battery voltage: 1.5 V
- Number of batteries: 6
- Power type: AC Input

Dimensions

- Gross weight: 2.55 kg
- Packaging depth: 246 mm
- Packaging height: 169 mm
- Packaging width: 397 mm
- Weight: 1.9 kg
- Main unit depth: 217 mm
- Main unit height: 127 mm
- Main unit width: 350 mm



Issue date 2015-01-22

Version: 1.0.4

12 NC: 8670 000 39086
EAN: 87 12581 41288 3

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com