

Philips  
DVD home theater player



HTP3520K

## Plays any disc, reads any format

Does size matter? Ever heard of less is more? Introducing the best value DVD player. No complications! Just a simple set that plays practically any disc format, including your digital photos with absolutely no compromise to picture quality.

### Bring audio and video to life

- 12-bit/108MHz video processing for sharp and natural images
- Progressive Scan component video for optimized image quality
- Screen Fit for optimal viewing every time

### Play all your movies and music

- DivX Ultra Certified for enhanced DivX video playback
- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG

### Enjoy enhanced karaoke

- Karaoke Idol for interactive excitement and great fun

### Easy to use

- My Wallpaper for a personalized welcome screen

**PHILIPS**  
sense and simplicity

# Highlights

## Progressive Scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

## DivX Ultra Certified




With DivX support, you are able to enjoy DivX encoded videos and movies from the

Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

## Multimedia DivX

Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG

## Screen Fit

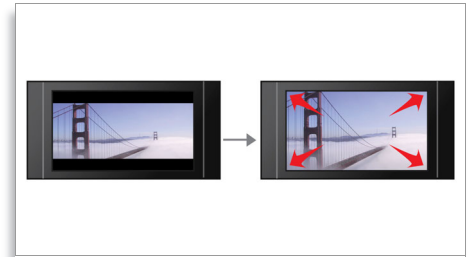

Whatever you're watching, and on any TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full-screen



# Specifications

## Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

## Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 90
- Distortion and Noise (1kHz): 65 dB
- Crosstalk (1kHz): 70 dB
- Dynamic Range (1kHz): 80 dB
- Sound System: Dolby Digital

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD-R/-RW, DVD+R/+RW, DVD-Video, DivX
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0
- Video disc playback system: NTSC, PAL

## Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- Compression format: Dolby Digital, MP3, WMA, PCM

## Still Picture Playback

- Playback Media: DVD-R/-RW, DVD+R/+RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow, Zoom, Slideshow with MP3 playback

## Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3, DivX

## Connectivity

- Front / Side connections: Microphone
- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, ComponentVideo out Progressive

## Convenience

- Child Protection: Parental Control, Child Lock
- On-Screen Display languages: English, Malay, Korean, Thai, Traditional Chinese
- Karaoke: MIC volume

## Power

- Power consumption: < 10 W
- Power supply: 50/60 Hz, 110-240V
- Standby power consumption: < 1W

## Accessories

- Included accessories: 2 x AAA Batteries, Audio/Video cable, Remote Control, World Wide Warranty leaflet, Power cord, Quick start guide, User Manual

## Dimensions

- Set dimensions (W x H x D): 360 x 39 x 209 mm
- Packaging dimensions (W x H x D): 502 x 456 x 308 mm
- Speaker Depth: 90 mm
- Speaker Height: 134 mm
- Subwoofer dimensions (W x H x D): 100 x 300 x 250 mm
- Speaker Width: 94 mm



Issue date 2013-02-12

Version: 1.3.2

12 NC: 8670 000 62068  
EAN: 87 12581 53738 8

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)