



Philips  
Portable DVD Player

17.8 cm (7") LCD  
2-hr playtime



PD7042



## Double your movies on the road with two DVD players

Play your movies and music in the car! The Philips PD7042 features two 7"/18 cm DVD players to let passengers indulge in enjoying their own DVD movies, music and photos on the road. With a 2-hr built-in battery, you can enjoy movies anywhere.

### Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

### Enrich your AV entertainment experience

- 17.8 cm (7") TFT colour LCD display in 16:9 widescreen format
- Watch movies separately or share one movie on both players
- Built-in stereo speakers

### Extra touches for your convenience

- Up to 2-hour playback with rechargeable built-in battery\*
- Smart Car Mount for ease of use
- Full Resume on Power Loss
- Travel bag included
- 2 sets of earphones included for personal enjoyment

**PHILIPS**

Portable DVD Player  
17.8 cm (7") LCD 2-hr playtime

PD7042/05


# Highlights

## 18 cm/7" TFT colour LCD (16:9)



The colour LCD display brings images to life, showing off your treasured photos, favourite movies and music with the same 'real life' rich detail and vibrant colours as high quality prints. The 16:9 widescreen aspect ratio is standard for universal to high-definition digital television. A native 16:9 aspect ratio means video display without bars at the top and bottom of the picture and without the quality loss that comes from scaling, altering an image to fit on a different screen size.

## DVD, DVD+/-RW, (S)VCD, CD

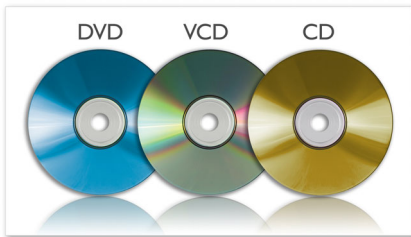

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD

and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

## MP3-CD, CD and CD-RW playback



MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

## Single cable connection

The single cable connection design means there is just one cable needed to connect the two Philips Portable DVD players together. No additional cables are needed, there is no mess created and installation takes a few seconds.

## Watch movies separately

The in-car dual player design lets you watch movies individually on each portable DVD player. Alternatively, you can connect them

together and, with the single touch of the signal switch button, passengers in both the front and back seats can watch one movie playing simultaneously on both DVD players.

## Smart Car Mount



To enjoy entertainment on the go, why not bring your portable DVD player from home on the road with you? A unique Car Mount system ensures ease-of-use, with a quick-release arm that facilitates easy removal of the player when not in use. You can bring the portable DVD player with you, leaving just the Mount behind in the car.

## DivX Certified

With DivX<sup>®</sup> support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films. The DivX media format is an MPEG-4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified<sup>®</sup> Philips device.



# Specifications

## Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size: 7 inch / 18 cm
- Resolution: 480(w) x 234(H) x 3(RGB)

## Sound

- Output Power: 250 mW RMS (built-in speakers)
- Output power (RMS): 5 mW RMS (earphone)
- Signal to noise ratio: >80 dB (line out), >76 dB (earphone), >62 dB (built-in speakers)

## Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Reverse, Fast Forward, OSD, Repeat, Zoom, Shuffle Play, Resume Playback from Stop
- Video disc playback system: NTSC, PAL
- Compression formats: MPEG4, Divx

## Audio Playback

- Compression format: Dolby Digital, MP3
- MP3 bit rates: 32 - 320 kbps
- Playback Media: CD, CD-R, CD-RW, MP3-CD
- File systems supported: ISO-9660, Joliet

## Connectivity

- DC in: 9 V, 0.8 A
- Headphone jack: 3.5 mm Stereo Headphone
- AV output: Composite (CVBS) x 1
- AV input: Composite (CVBS) x 1

## Convenience

- Battery charging indication
- Shock proof

## Accessories

- AC/DC Adapter: 9 V, 0.8 A, (110-240 V, 50/60 Hz)
- Cables: AV Cables
- Car kit: cigarette outlet adapter, 12vDC
- Smart car mount: AY4246 x 2

- Headphones: AY3822 x 2
- Pouch: Travel bag x 1
- User Manual: English

## Power

- Battery lifetime: Up to 2 hrs\*
- Battery Type: Built-in battery

## Dimensions

- Master carton quantity: 3
- Product dimensions (W x H x D): 199 x 38 x 153 mm
- Master carton dimensions: 285 x 360 x 372 mm
- Master carton weight: 7.93 kg
- Packaging dimensions (W x H x D): 362 x 350 x 90 mm
- Product weight: 1.4 kg
- Packaging type: D-box

## Outer Carton

- EAN: 87 12581 53156 0
- Gross weight: 8.148 kg
- Outer carton (L x W x H): 37.2 x 28.5 x 36 cm
- Net weight: 6.381 kg
- Number of consumer packages: 3
- Tare weight: 1.767 kg

## Packaging dimensions

- Packaging dimensions (W x H x D): 36.2 x 35 x 9 cm
- EAN: 87 12581 53153 9
- Gross weight: 2.576 kg
- Net weight: 2.127 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.449 kg
- Type of shelf placement: Laying

## Product dimensions

- Product dimensions (W x H x D): 20 x 15.5 x 7.7 cm
- Weight: 1.266 kg



Issue date 2017-04-05

Version: 3.1.6

12 NC: 8670 000 61078  
EAN: 87 12581 53153 9

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX, DivX Certified and associated logos are trademarks of DivXNetworks, Inc. and are used under licence.

\* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

\* Battery life varies by use and settings.

\* Battery life of playtime is approximate and may vary depending on application condition. To optimise battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level and use the product at room temperature.