

Philips  
Sleek micro sound system

wall-mountable

MCM277



## Obsessed with sound

Sound that fits your home

Trendy and progressive, unique innovation and style appeals to you. The vividly and chic Philips sleek micro music system with dynamic sound performance, is packed in a sleek design with MP3/WMA-CD & USB Direct playback that can also be wall mounted.

### Enjoy your music from multiple sources

- USB Direct for MP3/WMA music playback
- Play MP3/WMA-CD, CD and CD-RW
- Convenient line-in jack for portable music playback

### Enrich your sound experience

- Digital Sound Control for optimized music style settings
- Dynamic Bass Boost for deep and dramatic sound
- 10W RMS total output power

### Start the day your way

- Wake up and sleep timer functions
- Digital tuning with preset stations for extra convenience

### Design that blends into your interior

- Motorized sliding front door adding style and elegance
- Wall-mountable option for flexible placement



# PHILIPS

Sleek micro sound system  
wall-mountable

MCM277/12

# Highlights

## USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

## Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorized music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.

## Convenient line-in jack

Line-in connection allows you to play your music on other device with the Philips player, just simply connect the player to the Line-out or Audio-out, or to connect the headphone

jack of other media players such as CD or DVD player, VCR and MP3 player.

## Digital Sound Control



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.


## Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can

enjoy consistent sound even when you turn down the volume.

## 10W RMS

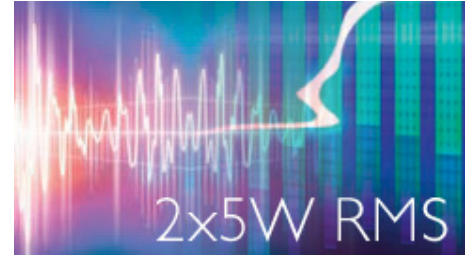

This Philips music system has 10W RMS total output power. RMS refers to Root Mean Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. The higher the wattage, the better the sound power emitted by the speaker.

## Wake up and sleep timer



Many of alarm clocks feature a variety of alarm choices. This Philips Clock radio awakens you to radio or the traditional alarm buzzer. The Sleep Timer allows you to program the required length of time for music to coincide with how long you normally take to fall asleep. No matter what your alarm clock needs, whether it's a morning buzzer that produces a steady tone, or listening to your favorite music as you go to sleep, this clock radio has it all.



# Specifications

## Sound

- Output power: 2 x 5 W RMS, 2 x 10 W music power
- Sound enhancement: digital sound control 4 modes, Dynamic Bass Boost

## Loudspeakers

- Speaker drivers: 4" woofer
- Speaker types: bass reflex speaker system

## Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc playback modes: repeat/shuffle/program
- Others: ID3-tag support
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, program play, repeat, shuffle, stop

## Tuner/Reception/Transmission

- Tuner bands: FM stereo, MW
- RDS: program type, station name, radio text, RDS clock set
- Station presets: 40
- Antenna: FM antenna, MW antenna
- Tuner enhancement: auto digital tuning, auto scan

## Connectivity

- Audio/Video output: Headphone (3.5mm)
- MP3 Link: 3.5mm stereo line in
- USB: USB host

## Convenience

- Alarms: CD alarm, radio alarm, USB alarm
- Clock: on main display, sleep timer
- Loader type: front, motorised
- Display type: LCD display
- Backlight color: white

## Accessories

- Remote control
- User Manual: multi-languages
- Others: FM/MW antenna, Quick start guide, screws for wall mounting x2
- Warranty: World Wide Guarantee booklet

## Dimensions

- Main speaker dimensions (W x D): 160 x 90 mm
- Gross weight: 5.5 kg
- Main speaker height: 269 mm
- Main unit depth: 90 mm
- Main unit height: 269 mm
- Main unit width: 194 mm
- Packaging depth: 238 mm
- Packaging height: 314 mm
- Packaging width: 310 mm

## Power

- Power supply: 50 Hz
- Power supply: 220 - 240 V

## Green

- Eco Power standby: 1 W



Issue date 2014-02-06

Version: 1.0.5

12 NC: 8670 000 37579  
EAN: 87 12581 39997 9

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)