



Philips
DVD player

DVD622



See, hear, play everything

Does size matter? Ever heard of less is more? Introducing the best value DVD-player. No complications! Just a simple set that plays practically any disc format, including your digital photos with absolutely no compromise to picture quality.

Great audio and video performance

- Progressive Scan component video for optimized image quality
- 192kHz/24 bit audio DAC enhances analogue sound input

Plays it all

- Movies: DVD, DVD+R/RW, DVD-R/RW, VCD
- Music: CD, CD-R/RW and MP3-CD
- Photos: Picture CD (JPEG)

Fits everywhere, goes anywhere

- Compact design
- Ultra-slim design

PHILIPS
sense and simplicity

Specifications

Picture/Display

- Aspect ratio: 4:3, 16:9
- D/A converter: 10 bit, 54 MHz
- Picture enhancement: Progressive Scan

Sound

- D/A converter: 192KHz/24 bit
- Signal to noise ratio: 90dB
- Distortion and Noise (1kHz): 80 dB
- Crosstalk (1kHz): 100 dB
- Dynamic Range (1kHz): 90 dB
- Sound Enhancement: Night Mode
- Sound System: Dolby Digital

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD, DVD, DVD-Video, DVD+R, DVD+RW, DVD-R, DVD-RW (Video mode)
- Compression formats: MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD
- Compression format: MP3, PCM
- MP3 bit rates: 32 - 256 kbps

Still Picture Playback

- Playback Media: Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Rotate, Slideshow, Zoom

Connectivity

- Other connections: Analog audio Left/Right out, Digital coaxial out, ComponentVideo out, Progressive, Composite video (CVBS) out, S-Video out

Convenience

- Child Protection: Parental Control
- On-Screen Display languages: English, Canadian French, Mexican Spanish

Power


- Power supply: 110V, 60Hz
- Power consumption: 12 W
- Standby power consumption: 2.2 W

Accessories

- Batteries: 2 x AA
- Cables: 1 x AV Cables
- Remote control: 3141 017 90201
- Quick start guide
- User Manual: English/ French/ Spanish
- Warranty Card: North American version


Dimensions

- Set dimensions (W x H x D): 360 x 50 x 285 mm
- Set weight: 2.2 kg
- Packaging dimensions (W x H x D): 415 x 88 x 365 mm
- Weight incl. Packaging: 2.8 kg




Highlights

Progressive Scan

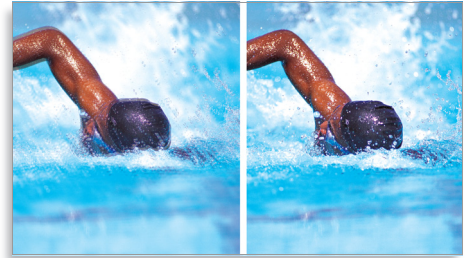

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

192kHz/24 bit audio DAC

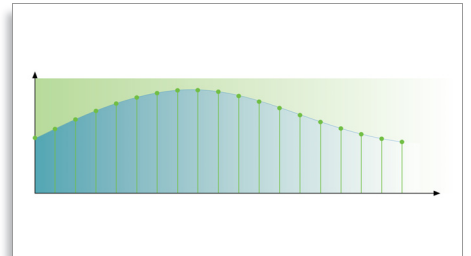

192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

Multi format Movies

Multi-format playability allows you to play most disc formats for maximum disc compatibility and viewing pleasure.

Multi-format Music

Multi-format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.

Picture CD (JPEG)

Multi-format playability allows you to view images in the comfort of your living room and play most disc formats for maximum disc compatibility and viewing pleasure.

Ultra-slim design

The attractive enclosure has a very low profile.



Issue date 2009-08-09

Version: 3.0.6

12 NC: 8622 810 12405
UPC: 0 37849 95948 0

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com