

4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

4.1.1 Setup

I cannot enter setup mode.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. For this see chapter 2.1.
After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The brand code for my device is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common TV, STB, DVD player / recorder and VCR brands.

- You will find a complete brand list on page 15-30 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

My TV switches OFF in step 4 but does not switch ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.2.2) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.

- Try improving the button(s). See chapter 2.2.2.

How do I set the remote control for combo devices (TV / VCR, TV / DVD, DVD / VCR, etc)?

Some combo devices require you to set up two different source selection buttons to control both parts of the combo device. For example, if you have a TV / DVD combo, you might need to set up the remote control for both TV and DVD to operate your TV / DVD combo.

4.1.2 Operation

The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. For this see chapter 2.1.
After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The device I want to operate does not respond at all / does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control of the device.
- Try improving buttons. See chapter 2.2.2.

Not all button functions are available in the database of the remote control.

- Try learning button functions from the original remote control. See chapter 3.2.



Wrong code selected during setup.

- Set up the remote control again for the device. Always test if the device responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

The Teletext buttons do not work.

- Find out whether your TV is equipped with Teletext.
- Try improving the Teletext buttons. See chapter 2.2.2.
- Check whether you are using the correct buttons to switch on Teletext. For TV this is the  button; for STB this is the  button.

4.1.3 Batteries

Will my settings be deleted when I replace the batteries?

No. All user settings will be retained in the remote control memory for 5 minutes.



Warning

The batteries should not be exposed to excessive heat such as sunshine, fire or the like.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP5004, you can always contact us.

When calling our helpline, make sure to have the SRP5004 at hand when you call, so that our operators can help you determine whether the SRP5004 is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP5004/86.

Date of purchase:

...../...../.....

(day/month/year)

For **online support** go to: www.philips.com/welcome.

- Click 'Support' and follow the on-screen instructions.

Helpline

Country	Phone number	Tariff
Ireland	01 601 1158	pstn
United Kingdom	0800 331 6015	free

@sat.....	0008 (DB1)	Alltech.....	0109
1&1.....	3908	Alpha.....	0112
4Kus.....	0005	Altai.....	3690
		Ambassador.....	0120
A		Amitech.....	0130
A.R. Systems.....	0012	Amitronica.....	0131
AB Sat.....	3689	Amoi.....	0132
ABC.....	0013	Ampere.....	0134
Acme.....	3521	Amplivision.....	0138
Acoustic Solutions.....	0032 (DB1)	Amstrad.....	0140
Acura.....	0036	AMW.....	0143
ADA.....	0038	Anam.....	0146
ADB.....	0039	Anam National.....	0147
ADC.....	0040	Andersson.....	0148 (DB1)
Addison.....	0043	Andover.....	0149
Adelsound.....	0044	Anglo.....	0151
ADL.....	0045 (DB1)	Anitech.....	0154
Admiral.....	0046	Ankaro.....	0155
Advent.....	0054 (DB1)	Ansonic.....	0156
Adyson.....	0058	Anttron.....	0162
AEG.....	0059	AOC.....	0165
Aegir.....	0060	Apex.....	3691
Agashi.....	0063	Apollo.....	0171
Agazi.....	3522	Arc En Ciel.....	0178
AGB.....	0064	Arcam.....	0179
AGS.....	0067	Arcam Delta.....	3524
Aiko.....	0069	Arcelik.....	4791 (DB1)
Aim.....	0070	Arcom.....	3736 (DB1)
Airis.....	0071	Arcon.....	0182
Aiwa.....	0072	Ardem.....	0184
Akado.....	3784 (DB1)	Aristona.....	0192
Akai.....	0074	Armstrong.....	0195
Akiba.....	0078	Amion.....	0196 (DB1)
Akito.....	0082	Arthur Martin.....	0200
Akura.....	0083	ASA.....	0202
Alaron.....	0085	Asat.....	0204
Alba.....	0086	Asberg.....	0205
Alcatel.....	0089	ASLF.....	0211
Alcyon.....	0093	Asono.....	0212
Aldes.....	0094	AssCom.....	0215 (DB1)
Alice.....	0098 (DB1)	AST.....	0216
Alize.....	0100	Astacom.....	0217
Alkos.....	3523	Aston.....	0220
Allantide.....	0102	Astra.....	0221
Allegro.....	0103	Astro.....	0224
Allorgan.....	0105	Asuka.....	0227
Allsat.....	0106	Atacom.....	0228
Allsonic.....	0107	Atec.....	0230 (DB1)
Allstar.....	0108	Atlanta.....	0232 (DB1)

Atlantic.....	0233	Binatone.....	0378	Canal Satellite	0477	CNT	0594
Atori.....	0237	Birmingham Cable		Canal+	0478	Coby.....	0597
Atsat.....	0238 (DB1)	Communications....	0382	Capsonic	0486	Colombia.....	0599
Auchan.....	0240	Black Diamond.....	0384 (DB1)	Carad.....	0488	Columbia.....	0604
Audiosonic.....	0264	Black Panther Line.	4196	Carena.....	0489	Columbus.....	0605
Audioton	0266	Black Star	0386	Carrefour.....	0492	Com Hem.....	4561 (DB1)
Audix	0270 (DB1)	Blacktron.....	3526	Cascade.....	0496	Comag	0606
Aurora.....	0274	Blackway.....	0388	Casio	0499	Comcast.....	3456 (DB1)
Ausind	0276	Blaupunkt.....	0390	Cat.....	0500	Comcrypt.....	0610
Austar.....	0277	Blue Media.....	3378 (DB1)	Catha	4094	CommLink.....	0616
Autovox	0280	Blue Sky	0395	Cathay.....	0501	Comtech.....	3776
Avalon	0286	Blue Star.....	0396	Catron.....	0502	Concorde.....	0626
Avanit.....	4945 (DB1)	BlueH.....	3793 (DB1)	CCE.....	0504	Condor.....	0627
Avious.....	0291	Boca.....	0399	Celestial.....	0511	Conia	0628
AVM.....	0294	Boghe.....	0400	Centrex.....	0516	Connexions.....	0631
Awa	0296	Bondstec.....	0403	Centrum	0519	Conrad.....	0633
Axiel.....	0297	Boots.....	0405	Centurion.....	0520	Conrad Electronic..	3695
Axil.....	0298	Boston.....	0410	Century.....	0521	Conrowa.....	0634
Axis.....	0300	BPL.....	0413	CGE.....	0523	Contec.....	0635
Axitronic.....	3608 (DB1)	Brain Wave	3692	CGV	0524	Continental Edison	0637
Axxon.....	0303 (DB1)	Brainwave.....	0415	Changcheng.....	0526	Cosat.....	0645
Ayomi.....	3525	Brandt.....	0416	Changfei	0527	Coship.....	0646
B		Brimax.....	3797 (DB1)	Changhai	0529	Cosmel.....	0647
B&D.....	3609 (DB1)	Brinkmann.....	0423	Changhong.....	0530	Crosley.....	0655
Baird.....	0311	Brionvega.....	0424	Channel Master.....	0531	Crown.....	0658
Bang & Olufsen.....	0314	Britannia	0425	Chaparal.....	0533	Cryptovision.....	0661
Barcom	0320	British Telecom	0427	Cherokee.....	0536	CS Electronics.....	0663
BARON	3959	Broadcast.....	0428	Chess	0538	CTC.....	0664
Basic Line.....	0325	Broco	0431	Chimei.....	3563	C-Tech.....	0449
Bastide.....	0327	Bruns.....	0435	Chuangjia.....	4096	CVG.....	3996
Baur	0331	BskyB.....	0436	Chunfeng.....	0546	Cybercom	0671 (DB1)
Baze	0334	BSR.....	0437	Chung Hsin.....	0547	CyberHome.....	0672
Bazin.....	0335	BT	0438	Chunsun.....	0549	Cybermaxx.....	3696
BBK.....	0337	BT Cable.....	3995	Cimline.....	0552	Cybertron.....	0675
BBT	0338	BT Satellite.....	3693	Cinetec	0560	Cyfrowy Polsat	4341 (DB1)
Beijing.....	0345	BT Vision.....	3742	CineVision.....	0562	Cyrus	0679
Beko	0346	BTC	0439	Cinex	0563 (DB1)	D	
Belgacom TV.....	0349	Bubu Sat.....	0440	Cisco	3801 (DB1)	Daenyx	0690
Bell Atlantic.....	0351	Bush.....	0445	City.....	0569	Daeryung.....	0691
Bellagio.....	0354	BVV.....	0447	CityCom	0570	Daewoo	0692
Belson.....	0355 (DB1)	C		Clarivox.....	0576	Dainichi.....	0694
Benjamin	0358	Cabletime.....	0457	Classic.....	0580	Dansai.....	0699
BenQ	0359	Caihong.....	0462	Clatronic	0581	Dansat.....	0700
Beon.....	0361	Cambridge.....	0469	Clayton	0582 (DB1)	Dantax.....	0702
Best.....	0364	Cambridge Audio..	0470	Clyde.....	0588	Darty.....	4266 (DB1)
Best Buy	0365	Cambridge Audio...	0470	Clyde Cablevision..	3694	Darty Box	4228
Bestar.....	0368	Cameron.....	4032	CMR.....	4694 (DB1)	Datron.....	4201
Bestar-Daewoo.....	0369	Camundosat	0474	CMS.....	0590	Datsura.....	0703
		Canal Digital.....	0476	CMS Hightec.....	0591		

Dawa.....	0707	Ditristrad	3699	ELG.....	0900	Fenner	0994
Daytek.....	0708	Dixi.....	0807	Elin.....	0902	Ferguson	0996
Dayton.....	0709	DK Digital.....	0808	Elite	0903	Fidelity	0998
Daytron.....	0710	DMTech.....	0813	Elmak.....	0907 (DB1)	Filmnet.....	0999
D-box.....	0682	DNR.....	0815	Elonex	4019 (DB1)	Filmnet Cablecrypt	3701
DCE.....	0713 (DB1)	DNT.....	0816	Elsat.....	0908	Filmnet Comcrypt..	3702
DDC	0714	Dongda.....	0820	Elsay.....	0909	Filsai	1000
De Graaf.....	0716	Donghai.....	0821	Elta.....	0910	Finlandia.....	1003
DEC.....	0717	Dragon Systems	4830 (DB1)	Emanon	0913	Finlux.....	1004
Decca.....	0718	Drake.....	0825	Emerson	0917	FinnSat.....	1005
Decsat.....	0719	DREAMBOX.....	4392 (DB1)	Emme Esse	0919	Fintec	1006
Deitron.....	0722	Drean.....	0832	e-motion	3496 (DB1)	Firstline.....	1008
Delega.....	3697	DSE.....	0833 (DB1)	Emperor.....	0921	Fisher.....	1009
Denko	0730	DSTV	0835	eMTech	3626 (DB1)	Flair Mate.....	1010
Denon.....	0731	DTS	0837	Engel.....	0929	Flint	1014
Denver.....	0733	Dual.....	0838	Enzer.....	0934	FNR	1016
Denzel.....	0734	Dual-Tec.....	3528	EP Sat.....	0935	Formenti.....	1023
Desay.....	0737	Dumont.....	0840	Epson.....	0937	Formenti-Phoenix..	1024
Desmet.....	0738	Dune.....	0841	Erres.....	0942	Fortress	1027
Dew.....	0742	Duogjie.....	4101	ESC	0945	Foxtel.....	1029
DGM.....	3566 (DB1)	Durabrand.....	0842 (DB1)	Etron	0949	Fraba.....	1030
Dgtec.....	0745 (DB1)	Dux.....	0843	Etzuko.....	4203	Fracarro.....	1032 (DB1)
Diamant.....	0746	D-Vision	0684	Eurieult.....	0950	France Satellite/TV	3703
Diamond.....	0747	DVX.....	0847	Eurocrypt	0952	France Telecom	1033
DICRA.....	4938 (DB1)	Dynasat.....	0852	Eurodec	0953	Free.....	4157
Digatron.....	0751	Dynatron	0855	Eurofeel	0954	Freebox.....	1036
Digiality	0755	Dynex.....	3476	EuroLine.....	0955	Freecom.....	1037
Digihome.....	0758 (DB1)			Euroman.....	0956	Freesat.....	1038
Digiline	0759	E		Europa.....	0957	Friac	1040
DigiLogic	0760 (DB1)	Easy Home	3700	European	0958	Frontech.....	1042
Digipro.....	0762	Easy Living.....	0860 (DB1)	Europhon.....	0959	FTE.....	1043
DigiQuest.....	0763 (DB1)	Echostar.....	0866	Eurosat.....	0962	FTEmaximal.....	1044
Digital Device.....	0770 (DB1)	Eclipse.....	0867	Eurosky	0963	Fuba.....	1045
Digitek.....	0779 (DB1)	E-Dem.....	3624	Eurospace.....	0964	Fugionkyo	1046
Digitenne.....	4942 (DB1)	Edision.....	3392 (DB1)	Eurostar	0965	Fujicom	1048 (DB1)
Digitor.....	0781	Einhell	0875	Eutelsat	0967	Fujitsu.....	1052
Digiturk.....	0783	Elap.....	0877	Eutra.....	0968	Fujitsu General	1053
DiK.....	0787 (DB1)	Elbe.....	0880	Evesham	0972 (DB1)	Fujitsu Siemens.....	1054 (DB1)
Dikom.....	3391 (DB1)	Elbe-Sharp.....	3529	Exator.....	0974	Funai.....	1056
DirectV.....	0794 (DB1)	Elcatech	0882	Expert.....	0976		
Discoverer	0796	Elcit.....	0883	Exquisit.....	0978	G	
Discovery	0797	Electa.....	3530			Galaxi.....	1068
Diseqc.....	3698	ELECTRO TECH.....	3531	F		Galaxis.....	1069
Dish Network System		Electrohome.....	0890	Fagor Life.....	4102	Galaxisat.....	1070
.....	0799 (DB1)	Electus	0894	Fait.....	4699 (DB1)	Gardiner.....	1073
DishTV.....	0801 (DB1)	Elekta	0895	Feilang.....	0990	GBC.....	1078
Diskxpress.....	0802	Elektra	0896	Feilu	0991	GbSAT.....	1079 (DB1)
Distratel.....	0804	Element	3477	Feiyue	0993	GE.....	1081 (DB1)
Distrisat.....	0805	Elfunk.....	0899 (DB1)	Fenmenti.....	4103	Geant Casino.....	1082

GEC.....	1083	Hampton	1183	Huangshan	1291	ITS	1405
Geloso.....	1087	Hanns.G	3478 (DB1)	Huanyu	1292	ITT	1406
General.....	1090	Hannspree	1189 (DB1)	Huari	1294	ITT Nokia.....	1407
General Instrument	1093	Hanseatic.....	1190	Hughes Network		ITV.....	1408
General Satellite	1094 (DB1)	Hantarex.....	1192	Systems	1296 (DB1)		
General Technic	1095	Hantor.....	1193	Hugoson	1297 (DB1)	J	
Genexxa	1097	Hanuri.....	1194	Huijiaban	4108	Janeil	1414
Gericom.....	1103	Harman/Kardon.....	1198	Humax	1298	JEC.....	1426
GFM.....	3820	Harting und Helling	1201	Huth	1305	Jepssen.....	1430 (DB1)
Giant.....	1113	Harwood	1204	Hygashi	1308	Jerrold.....	1431
Giec.....	1115	Hase & Igel	1205	Hyper	1309	JGC	1434 (DB1)
Global Solutions	1120	Hathw@y.....	3399	HyperVision	1311	Jiahua.....	1435
Global Sphere.....	1121	Hauppauge	1206	Hypson	1312	Jinhai	1439
Globo.....	1122 (DB1)	HB	1209 (DB1)	Hyundai	1315	Jinxing.....	1442
GMI.....	1124	HCM.....	1210			Johansson.....	1449
Go Video.....	1126	Heliocom.....	1218	I		JOK.....	1451
Gold	3823 (DB1)	Helium.....	1220	Iberia	1320	JSR	1459
Gold Box	1131 (DB1)	Hema.....	1222	ICE.....	1324	JVC	1464
Goldbox.....	3704	Hemmermann.....	1223	ICeS.....	1325		
Golden Channel.....	1133	Henss.....	1224 (DB1)	ID Digital.....	1329	K	
GoldHand	1136	Hifivox	1233	iDEAL	3641 (DB1)	Kabel Deutschland.	1468
Goldline.....	1138	Higashi.....	1234	lekei.....	1332 (DB1)	Kabel Digital.....	4448 (DB1)
GoldStar.....	1140	Highline.....	1236	IlSonic	1334 (DB1)	Kaisui	1471
Gooding	1141	Hikona	1237	Iiyama	1335 (DB1)	Kamm	1474
Goodmans.....	1142	HiLine	3533	Imex.....	1344	Kamosonic	3535
Gorenje.....	1144	HiMAX	1241	Impego.....	4207	Kamp.....	1475
GPM	1149	Hinari	1243	Imperial.....	1346	Kangchong.....	1476
Gradiente.....	1151	Hirschmann.....	1246	Indesit.....	1349	Kanghua.....	1477
Graetz	1152	Hisawa.....	1247	Indiana.....	1350	Kangwei	4115
Gran Prix.....	1153 (DB1)	Hisense	1249	Indovision	1351 (DB1)	Kansai	1480
Granada.....	1154	Hitachi	1251	Ingelen.....	1354	Kaon	1482 (DB1)
Grandin.....	1156	Hitachi Fujian	1252	Ingersol	1355	Kapsch.....	1483
Great Wall.....	4105	Hitsu.....	1257	Initial	1356 (DB1)	Karcher.....	1484
Gronic	1160	HNE	1260	Inno Hit.....	1358	Kathrein	1486
Grothusen.....	1161	Hoehner	1262	Innovation	1360	Kathrein Eurostar ...	3707
Grundig.....	1162	Hoher	4504 (DB1)	Inspira.....	4296 (DB1)	Kawa.....	1487
Grunkel.....	1164	Home Tech Industries		Interactive.....	3534	Kawasho.....	1489
G-Sat.....	1067	1266	Interbuy	1376	Kendo	1500
GVG.....	1169	Homecast.....	1268	Interfunk.....	1377	Kennedy	1504
		HomeChoice.....	1269	Internal.....	1379	Kennex.....	1505
H		Hongmei.....	1272	International.....	1380	Kenwood.....	1507
H & B.....	1171 (DB1)	Hornet.....	1276 (DB1)	Interstar.....	1383	Key West.....	1509
H&B.....	3635	Hornophon.....	1277 (DB1)	Intertronic.....	1384	KeyPlug.....	3646
Haaz	1172	Hoshai	1278	Intervision.....	1386	KIC.....	1512
Haensel & Gretel...	1173 (DB1)	Houston	1280	InVideo.....	1388	Kiirro	1513
Haier	1175	Huafa.....	1287	IR.....	4110	Kingavon.....	1519
Haihong.....	1176	Huanghaimei.....	1288	Irradio.....	1396	Kingsley	1520
Halifax	1179	Huanghe.....	1289	Isukai.....	1402	Kiota	1522
Hallo.....	4563 (DB1)	Huanglong.....	1290	ITC	1404	Kiss	1524

Kiton.....	1525	Lifesat.....	1632	Masuda.....	1744	Mitsubishi.....	1855
Klap.....	1526	Lifetec.....	1633	MataV.....	1745	Mivar.....	1857
KLH.....	1529 (DB1)	Limit.....	1637	Matsui.....	1750	Mizuda.....	1860
Kneissel.....	1535	Linsar.....	4564 (DB1)	Matsushita.....	1751	MNET.....	1862
Koda.....	1539	Lion.....	1643	Max.....	1753	Monyka.....	1873
Kolin.....	1541	Listo.....	3406 (DB1)	Maxdome.....	3586	Morgan Sydney.....	3712
Kolon.....	1542	LiteOn.....	1645	Maxim.....	1759 (DB1)	Morgans.....	3970
Kolster.....	1543	Lloyds.....	3539 (DB1)	MB.....	3711	Morgan's.....	1875
Konig.....	1547	Local India TV.....	1653	MBO.....	1765 (DB1)	Motion.....	1877
Konka.....	1548	Lodos.....	1659 (DB1)	McMichael.....	1768	Motorola.....	1878
Korpel.....	1552	Loewe.....	1660	MDS.....	1772 (DB1)	Movie Time.....	1880
Korting.....	1554	Loewe Opta.....	3540	Mecotek.....	1776	Mr Zapp.....	3713
Kosmos.....	1557	LogicLab.....	3650	Mediabox.....	1779	MTC.....	1889
Koyoda.....	1561	Logik.....	1661	Mediacom.....	1780 (DB1)	MTEC.....	1890
KPN.....	4941 (DB1)	Logisat.....	4850 (DB1)	Mediamarkt.....	1781	MTLogic.....	1892
KR.....	1562	Lorenzen.....	1666	MediaSat.....	1782	Mudan.....	1896
Kreiling.....	1566 (DB1)	Lorraine.....	1669	Mediator.....	1784	Multichoice.....	1900
Kreismeyer.....	1567	Luma.....	1674	Mediencom.....	1786	Multistandard.....	1904
K-SAT.....	1467	Lumatron.....	1676	Medion.....	1787	Multisystem.....	4121
KTV.....	1572	Lupus.....	1678	Medison.....	1788	Multitec.....	1906
Kuro.....	1579	Lux May.....	1680	Mega.....	1789	Multitech.....	1907
KXD.....	1581	Luxor.....	1683	MegaDrive.....	4297 (DB1)	Muratto.....	1910
Kyoshu.....	1583	Lyonnais.....	3709	Melectronic.....	3654	Murphy.....	1911
Kyostar.....	1584			Melvox.....	1799	Musikland.....	1915
Kyoto.....	1585			Memorex.....	1800	Mustek.....	1916
		M		Memphis.....	1802	Mx Onda.....	1919
		M Electronic.....	1688 (DB1)	Mercury.....	1804	Myrica.....	3946 (DB1)
		M&B.....	1691 (DB1)	Metronic.....	1809	Mysat.....	1923
		M/A Com.....	4229	Metz.....	1810	Mystral.....	1925
		Macab.....	1692	MiCO.....	1813		
		Madison.....	1698	Micro Com.....	3998	N	
		Magnadyne.....	1702	Micro electronic.....	3656	NAD.....	1926
		Magnaфон.....	1703	Micro Technology.....	1820	Naiko.....	1930
		Magnavox.....	1706	Micromax.....	1822	Nakamichi.....	1932
		Magnex.....	1707	Micromedia.....	1823	Nakamura.....	1933
		Magnum.....	1709	Micromedia.....	1823	NanoXX.....	4045 (DB1)
		Majestic.....	1713	Micromedia.....	1824	Naonis.....	1936
		Maligne TV.....	4851 (DB1)	Micromedia.....	1824	National.....	1942
		Manata.....	1716	Microspot.....	3849 (DB1)	National Panasonic.....	4661 (DB1)
		Manora.....	1716	Microrstar.....	1827	Navex.....	1944
		Mandor.....	1717	Microtec.....	1828	NEC.....	1950
		Manesth.....	1718	Migros.....	1832	Neckermann.....	1951
		Manhattan.....	1719	Mikomi.....	1833 (DB1)	NEI.....	1952
		Maqma.....	1722 (DB1)	Minato.....	1835	Nesco.....	1960
		Marantz.....	1724	Minax.....	1836 (DB1)	Netsat.....	1966
		Marelli.....	1729	Minerva.....	1838	Netway.....	3419 (DB1)
		Mark.....	1731	Minoka.....	1840	Network.....	1968
		Marquant.....	1734	Minowa.....	1843	Neuf Telecom.....	3999
		Mascom.....	1738	Mintek.....	1845 (DB1)	Neufunk.....	1970
		Maspro.....	1739	Mirai.....	1849 (DB1)		
		Master's.....	1742	Mitsai.....	3851 (DB1)		

Neuhaus.....	1971	Opera.....	2090	Philharmonic.....	2194	Q	
Neuling.....	1972 (DB1)	Optex.....	2093	Philips.....	2195	Quadral.....	2314
Neusat.....	1974	Optim.....	2094	Philips Magnavox.....	3715	Quandra Vision.....	3546
Nevir.....	1977	Optus.....	2100	Phocus.....	2198 (DB1)	Quasar.....	2320
New Tech.....	1979	Orange.....	3866	Phoenix.....	2199	Quelle.....	2322
New World.....	1980	Orava.....	2101	Phonola.....	2201	Questa.....	2324
Next Base.....	1983	Orbit.....	2103	Phonotrend.....	2202	Quiero.....	3718
Next Wave.....	3777 (DB1)	Orbitech.....	2104	Pioneer.....	2212		
Nicamagic.....	1994	Origo.....	2110	Pionier.....	2213	R	
Nikai.....	4566 (DB1)	Orion.....	2111	Plantron.....	2219	Radialva.....	2329
Nikkai.....	1998	Oritron.....	2112	Playsonic.....	2224	Radio.....	4128
Nikkei.....	1999 (DB1)	Orline.....	2113	Plu2.....	2225 (DB1)	Radiola.....	2330
Nikko.....	2000	Ormond.....	2114	Pointer.....	2229	Radiomarelli.....	2331
Nimbro.....	4065 (DB1)	Orson.....	2115	Polaroid.....	2230	Radionette.....	2332
Noblex.....	2013	Orsowe.....	2116	Polsat.....	3716	RadioShack.....	2333
Nobliko.....	2014	Osaki.....	2118	Poppy.....	2236	Radiotone.....	2334
Nogamatic.....	2016	OSAT.....	2119	Portland.....	2238	Radix.....	2335
Nokia.....	2017	Osio.....	2121	Powerpoint.....	2241	Rainbow.....	2339
Nomex.....	2018	Oso.....	2122	Prandoni Prince.....	4125	Raite.....	2340
Noos.....	2019	Osume.....	2123	Precision.....	2244	Rank.....	2345
Nordic.....	2021	Otto Versand.....	2126	Predki.....	2245	RBM.....	2350
Nordmende.....	2022	Oulin.....	4123	Preisner.....	2246	RCA.....	2351
Nordvision.....	3543	Oxford.....	2131	Premiere.....	3666	Rebox.....	2356 (DB1)
Normerel.....	2024			Priesner.....	3717	REC.....	2357
Northcoast.....	2026	P		Prima.....	2253	Recor.....	2359
Nova.....	2031	P&B.....	2132	PrimeView.....	3513 (DB1)	Rectiligne.....	2362
Novaplex.....	2034	Pace.....	2134	Prinz.....	2260	Red Star.....	3669 (DB1)
Novatronix.....	2035	Pacific.....	2135	Pro Basic.....	3593 (DB1)	Rediffusion.....	2364
Novis.....	2036	Packsat.....	2139	Pro2.....	2265 (DB1)	Redpoint.....	2365
NTC.....	2045	Pael.....	2140	Profekt.....	4126	Redstar.....	2366
NTL.....	2047	Palcom.....	2144	Profex.....	2269	Reflex.....	2368
Nu-Tec.....	2048	Palladium.....	2145	Profile.....	2271	Regency.....	2371
O		Palsat.....	2146	Profilo.....	2272	Relisis.....	2374 (DB1)
O.K.Line.....	4301 (DB1)	Palsonic.....	2147	Profitronic.....	2273	Render.....	4072 (DB1)
Oceanic.....	2061	Panama.....	2149	Proline.....	2274	Reoc.....	2379
Octagon.....	2062	Panasat.....	2151	Promax.....	2275	Revox.....	2383
Okana.....	4122	Panasonic.....	2153	Prosat.....	2278	Revoy.....	2384
Okano.....	2065	Panavision.....	2154	Proson.....	2281 (DB1)	Rex.....	2385
Omni.....	2074	Panda.....	2155	Prosonic.....	2282	RFT.....	2386
ONCEAS.....	3544	PARK.....	3951 (DB1)	Protech.....	2284	Rhapsody.....	2387
Onida.....	2081	Pathe Cinema.....	2168	Protek.....	2285	Rimax.....	2391
Onimax.....	2082	Pathe Marconi.....	2169	ProVision.....	2291	Ritar.....	4718 (DB1)
Onkyo.....	2085	Patriot.....	2170	PVP Stereo Visual Matrix.....	2301	R-Line.....	2327
Onn.....	3663 (DB1)	Pausa.....	2171	2302	Roadstar.....	2398
Ono.....	2086	peekTon.....	2178	Pye.....	2302	Robotron.....	2401
Onwa.....	2087	Personic.....	3778	Pyle.....	2303 (DB1)	Roch.....	2402
Onyx.....	3864 (DB1)	Perdio.....	2185	Pymi.....	2304	Rockdale.....	2403
Oopla.....	2088	Perfekt.....	2186	Pyxis.....	2305	Ronin.....	2412
		Philco.....	2192			Rover.....	2415

Rowa.....	2416	Scott.....	2508	Sky Digital.....	3723	STVI.....	2751
Rownsonic.....	2417	SCS.....	2510	Sky Germany.....	4443 (DB1)	Stylandia.....	2752
Royal.....	2419	Sedeia Electronique.....	2518	SKY Italia.....	2612 (DB1)	Sumida.....	2756
Royal Lux.....	2420	Seeltech.....	2519	SkyCable.....	2617	Sungoo.....	3767 (DB1)
RTF.....	3548	Seemann.....	2521	Skymaster.....	2621	Sunkai.....	2762
S		SEG.....	2522	Skymax.....	2622	Sunny.....	2764 (DB1)
SAB.....	2428 (DB1)	SEI.....	2524	SkySat.....	2625	Sunny Sound.....	2765
Saba.....	2429	Sei-Sinudyne.....	2525	Skyvision.....	2630	Sunsat.....	2767
Sabaki.....	2430	Seitech.....	3433 (DB1)	Skyworth.....	2631	Sunstar.....	2768
Sabre.....	2431	Seleco.....	2528	SL.....	2632	Sunstech.....	2769 (DB1)
Sagem.....	2434	Sencora.....	2531	Slim Art.....	2636	Suntronic.....	2770
Saisho.....	2437	Sentra.....	2534	SM Electronic.....	2639	Sunwood.....	2772
Saivod.....	2439	Sentron.....	4216	Smart.....	2642	Super Sat.....	2775
Sakura.....	2441	Septimo.....	2536	S-Media.....	3515 (DB1)	Superla.....	2782
Salora.....	2443	Serino.....	2539	Sogera.....	2649	Supermax.....	2783
Sambers.....	2445	Servi Sat.....	3721	Solavox.....	2654	Supersonic.....	2787
Sampo.....	2446	Setone.....	4943 (DB1)	Sonawa.....	2663	SuperTech.....	2789
Samsung.....	2448	Shanghai.....	2547	Songdian.....	4136	Supervision.....	2791
Samurai.....	2451	Shanshui.....	4133	Soniko.....	2669	Supra.....	2792
Sandra.....	2454	Shaofeng.....	2549	Sonitron.....	2671	Supratech.....	2793 (DB1)
Sansui.....	2458	Sharp.....	2550	Sonneclair.....	2673	Susumu.....	2797
Sanwa.....	2461	Shencai.....	2553	Sonoko.....	2675	Sutron.....	2798
Sanyo.....	2462	ShengCai.....	4217	Sonolor.....	2676	Swedx.....	2803 (DB1)
Sanyuan.....	2464	Shenyang.....	2555	Sontec.....	2677	Swissflex.....	2805 (DB1)
SAT.....	2470	Sherwood.....	2557	Sontech.....	3435	Swisstec.....	2806 (DB1)
Sat Control.....	2471 (DB1)	Shinco.....	2560 (DB1)	Sony.....	2679	Sydney.....	2808
Sat Cruiser.....	2472	Shinco.....	4074 (DB1)	Sound & Vision.....	2680	Sylvania.....	2809
Sat Team.....	2474	Shinsonic.....	2562 (DB1)	Soundmaster.....	2685	Symphonic.....	2810
Satbox.....	2476	Shintom.....	2563	Soundmax.....	2687	Synn.....	2813
Satcom.....	2477	Shintoshi.....	2564	Soundwave.....	2689	Syline.....	2815
Satec.....	2479	Shivaki.....	2567	Soyo.....	2693 (DB1)	Systec.....	2816
Satel.....	2480	Shorai.....	2569	Spectra.....	2697	Sytech.....	2819 (DB1)
Satelco.....	2481	Siam.....	2572	SR.....	2704	Sytong.....	2820
Satford.....	2483	Siarem.....	2573	Srypton.....	4138	T	
Satline.....	2484	Siemens.....	2574	Standard.....	2713	T.D.E. Systems.....	2822
Satmaster.....	2485	Siera.....	2576	Star Cluster.....	3724	Tactus.....	2825
SatPartner.....	3719 (DB1)	Siesta.....	2577	Starcom.....	2722	Taishan.....	2835
Satplus.....	2486	Sigmatek.....	2580	Stargate.....	2723	Taisho.....	2836
Saville.....	2491	Silva.....	2591	Starland.....	2726	Tandberg.....	2842
SBR.....	2492	Silva Schneider.....	2592	Starlite.....	2728	Tandy.....	2843
ScanMagic.....	2496	Silver.....	2594	Starmedia.....	2730	Tantec.....	2845
Schacke.....	3720	Singer.....	2599	Starring.....	2733	Tashiko.....	2850
Schaub Lorenz.....	2500	Sinudyne.....	2601	Start Trak.....	3725 (DB1)	Tatung.....	2852
Schneider.....	2501	Skantic.....	2605	Stenway.....	2739	TBoston.....	2853 (DB1)
Schoentech.....	3504 (DB1)	Skantin.....	2606	Stern.....	2741	TCL.....	2856
Schwaiger.....	2502	Skardin.....	2607	Stevison.....	2742 (DB1)	TCM.....	2857
Scientific Atlanta.....	2503	Skinsat.....	3722	Strato.....	2745	Teac.....	2860
Scientific Labs.....	2504	SKR.....	2608	Stream System.....	3675 (DB1)	Teachimagen.....	4140
		SKY.....	2610	Strong.....	2748		


Tec.....	2861	Televue	2939	Tristar.....	3057	Videon.....	4227
Tech Line	2863	Televiso	2941	Triumph.....	3058	Videosat	3170
Techica	2865	Telewest	2942	TruVision.....	3061	VideoSystem.....	3172
Technema.....	2866	Telewire.....	2943	TSM.....	3065	Videotechnic.....	3173
Technica.....	2868 (DB1)	Temco.....	2946	Tudi	3068	Videoton.....	3174
Technical.....	3888 (DB1)	Tempo	2949	Turnsat	3071	Videoway.....	3176
Technics.....	2869	Tennessee.....	2952	TVA.....	4225	VideoWorks	3177
Technika.....	2870	Tenosal.....	2953	TVB.....	3078 (DB1)	Vidtech.....	3179
Techniland	2872	Tensai.....	2954	TVE	3897 (DB1)	Viewmaster	3182
TechniSat.....	2873	Tenson.....	2955	TVonics.....	3080	Viewsonic.....	3186
Technisson.....	2874 (DB1)	Tesla.....	3680 (DB1)	Twinner.....	3083	Viewstar	3187
Technology	3726	Tesmet.....	3550			Viore	3192 (DB1)
Technosat.....	2877	Tevion.....	2962	U		Virgin.....	4185
Technotrend	2879	Textet.....	2963	UEC.....	3088	Visiola.....	3197
Technowelt.....	2881	Thes.....	3769 (DB1)	Uher.....	3089	Vision.....	3198
Techvision.....	4307 (DB1)	Thomson	2972	Ultravox.....	3095	Visionetics	3199
Techwood	2884 (DB1)	Thorens.....	2973	Umax.....	3098	Visionic.....	3200
Teco.....	2886	Thorn.....	2974	UMC	3099 (DB1)	Visiopass.....	3203
Tedex.....	2889	Tiankeban	4142	Unic Line.....	3100	Visiasat.....	3204
Tee-Comm	2890	Tioko.....	2989	Uniden	3101	Vistar.....	3207
Teknika	2895	Tiscali	3442	Union.....	3781	Visual Innovations..	4773 (DB1)
Telanor.....	3727	Tividi.....	3443 (DB1)	Unisat.....	3104	Vivanco.....	3209
Telasat.....	2897	Tivo.....	2991 (DB1)	United	3106	Vivax.....	3601 (DB1)
Tele System Electronic		TNT.....	4184	United Cable.....	3108	Vivid.....	3210
.....	2899 (DB1)	Tobo	2999	United Quick Star..	4226	Vodafone	4944 (DB1)
Tele+1	2900	Tocom	3000	Unitor.....	3110	Volcasat.....	4053 (DB1)
Teleavia	2901	Tokai.....	3001	Unity DigitalTV.....	4863 (DB1)	Vortec	3217
Teleciel	2903	Tokyo	3004	Unitymedia.....	4328 (DB1)	Voxson.....	3220
Telecom.....	2906	Tomashi	3006	Universal	3113	VTech.....	3222
Telecor	2910	Tonna.....	3011	Universum	3115		
Teledirekt.....	2912	Tonsai.....	4223	Univox.....	3116	W	
Telefonica.....	2913	Top Suxess.....	3013	UPC.....	3118 (DB1)	Waitec.....	3227
Telefunken.....	2914	Topfield	3014			Walkvision.....	3228 (DB1)
Telefusion.....	2915	Torx	3020	V		Waltham	3230
Telegazi	2917	Toshiba.....	3021	V7 Videoseven.....	3130 (DB1)	Watson.....	3233
Telegent.....	2918	Towada	3028	Variosat.....	3134	Watt Radio.....	3234
Telesa.....	2919	Towika.....	4224	VEA.....	3957 (DB1)	Wega.....	3238
Telemaster	2922	Toyoda.....	3030	Vector.....	3136	Wegavox.....	3239
Telemeister.....	2924	TPS.....	3032	Vega.....	3138	Wela.....	3730
Telenet	2925	Trakton	3036	Ventana.....	3142	Welkin	3242 (DB1)
Telepiu.....	2926	TRANS-continent..	3039	Verizon.....	3146 (DB1)	Wellington	3243 (DB1)
Telesat	2928	Transfec	4143	Vestel	3148	Welltech.....	3244
Telesonic	2930	Transonic	3041	Vexa.....	3149	Weltblick.....	3245
Telestar.....	2931	Transtec.....	3042	Via Digital.....	3729	Weltstar.....	3247 (DB1)
Telesystem	2933 (DB1)	Triad.....	3049	Viasat.....	3153	Weston.....	3251
Teletech.....	2934	Triasat	3050	Vibrant	3154	WestStar.....	3519 (DB1)
Teleton.....	2935	Triax.....	3051	Victor.....	3155	Wetekom	3252
Televs.....	2937	Trident.....	3054	Videologic.....	3165	Wevasat	3253
Televideon.....	2938	Trio.....	3056	Videologique.....	3166	Wewa.....	3254

Wharfedale.....	3255
White Westinghouse	3258
Wilson.....	3260 (DB1)
Windsor.....	3265 (DB1)
Windstar.....	3266
Winersat.....	3269
Wintel.....	3271 (DB1)
Wintergarten.....	3272
Wisi.....	3273
Wittenberg.....	3731
Woorisat.....	3280
World-of-Vision.....	3282 (DB1)
Worldsat.....	3283
Woxtex.....	3286
X	
Xbox.....	3295
Xcom Multimedia.....	4000
Xiahua.....	3299
Xiangyu.....	3302
Xingfu.....	3305
Xinghai.....	3306
Xinrisong.....	3308
XLogic.....	3310
XMS.....	3312
Xoro.....	3315
Xrypton.....	3317
Xsat.....	3318
Xtreme.....	3319 (DB1)
Xuelian.....	3320

Y	
Yakumo.....	3324
Yamada.....	3325
Yamaha.....	3326
Yamakawa.....	3327
Yamishi.....	3328
Yokan.....	3335
Yoko.....	3336
Yorx.....	3340
Yuhang.....	3345
Yukai.....	3346
Yüsmart.....	4777 (DB1)

Z	
Zanussi.....	3349
Zaunkonig.....	3352
Zehnder.....	3353
Zenith.....	3356
ZhuHai.....	3364
Ziggo.....	4007 (DB1)
Zinwell.....	3365
Zodiac.....	3366
Zwergnase.....	3371

(DB1) Brands only available from version DB1 onwards.
You can find the DB version on the sticker inside the battery compartment.

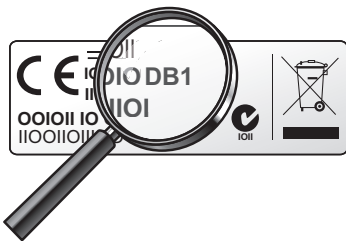

EN Information to the consumer

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Recycling and disposal

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Battery information

Your product operates on batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.



© 2011 Koninklijke Philips Electronics N.V.
All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.
The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5220 4

December 2011

www.philips.com

RTP/4911