



Philips  
CD Soundmachine

CD, MP3-CD, USB, FM  
2W

AZ320

## Enjoy music wherever you go

You take pleasure in the simple things in life and delight in convenience. The compact and portable Philips CD soundmachine lets you indulge in the pleasures of enjoying your favorite music with the help of easy-to-use functions.

### **The ultimate listening experience**

- USB Direct for MP3 music playback
- Play MP3-CD, CD and CD-R/RW
- FM tuner for radio enjoyment

### **Easy to use**

- CD repeat/shuffle/Program for personalized music enjoyment
- Audio-in for easy portable music playback

### **Rich and clear sound**

- Dynamic Bass Boost for deep and dramatic sound

# PHILIPS

# Specifications

## Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD, USB flash drive
- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- USB Direct playback modes: fast backward/fast forward, previous/next, repeat, shuffle, program play, play/pause, stop

## Tuner/Reception/Transmission

- Tuner bands: FM
- Antenna: FM antenna

## Sound

- Sound enhancement: Dynamic Bass Boost
- Sound system: stereo
- Volume control: rotary (analogue)
- Output power: 2 x 1 W RMS

## Loudspeakers

- No. of built-in speakers: 2

## Convenience

- Display type: LCD display
- Loader type: top

## Connectivity

- Audio in (3.5mm)

## Power

- Battery type: C size (LR14)
- Battery voltage: 1.5 V
- Number of batteries: 6
- Power supply: 110-240V

## Accessories

- Warranty: Warranty leaflet
- Quick start guide

## Dimensions


- Packaging depth: 156 mm
- Packaging height: 272 mm
- Packaging width: 320 mm
- Main unit depth: 240 mm
- Main unit height: 132 mm
- Main unit width: 299 mm
- Gross weight: 2.1 kg
- Weight: 1.6 kg

# Highlights

## USB Direct for MP3 music

USB Direct for MP3 music playback

## Play MP3-CD, CD and CD-R/RW

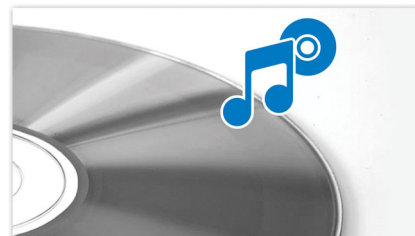

MP3 stands for "MPEG 1 Audio layer-7.6 cm (3)". MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. MP3 has become the standard audio compression format used on the world wide web, allowing quick and easy audio file transfer.

## CD repeat/shuffle/Program

CD repeat/shuffle/Program for personalized music enjoyment

## Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.



Issue date 2014-06-12

Version: 1.0.4

12 NC: 8670 001 00691  
EAN: 87 12581 67944 6

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Avoid extensive use of the set in a volume higher than 85 decibel because this may damage your hearing.

\* Adaptor supplied is needed for all Latin American countries, except in Brazil.