

Philips
Portable DVD Player



PET946



Watch your favourite TV programmes and DVDs anywhere

with easy set-up

Enjoy free-to-air digital TV programmes with the built-in digital TV receiver on the PET946 portable DVD player. With the 9" TFT LCD swivel screen, you can indulge in up to 5 hours of movies, music and photo enjoyment on the go.

Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard playback of DivX videos
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

Enjoy portable TV entertainment in real-time

- 9" swivel colour LCD panel for improved viewing flexibility
- Support DVB-T standard for free-to-air digital TV
- Electronic Programme Guide (EPG)
- Direct Teletext and subtitle function support
- Easy installation and automatic channel search


Extra touches for your convenience

- Up to 5-hour playback with a built-in battery*
- SD/SDHC card slot for music, photo and video playback
- AC adapter, car adapter and AV cable included

PHILIPS
sense and simplicity

Highlights

5-hour built-in battery*

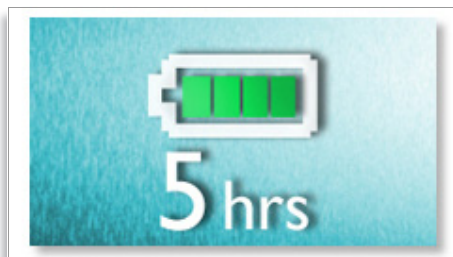

This Philips player comes with a compact built-in rechargeable battery for long-lasting power. Up to 5 hours of continuous movie, photo and music playback enjoyment can be achieved on a single charge. Just plug in the power cable to recharge the player - it's that simple.

9" swivel colour LCD panel



The screen swivels 180 degrees to give you the optimum viewing angle for watching movies

and photos. Rotate the screen or adjust it up and down to cut down on glare and get the best viewing angle possible.

Support DVB-T (free-to-air)



Support DVB-T standard for free-to-air digital TV

DivX Certified



With DivX® support, you are able to enjoy DivX® encoded videos. The DivX media

format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs.

MP3-CD, CD and CD-RW playback



MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.



Specifications

Picture/Display

- Diagonal screen size (inch): 9 inch
- Resolution: 640 (W) x 220 (H) x 3 (RGB)
- Display screen type: LCD TFT
- Brightness: 150 cd/m²
- Contrast ratio (typical): 250:1
- Effective viewing area: 198.240 (W) x 111.735 (H) mm
- LCD panel type: Anti-glare polariser
- Response time (typical): 30 ms

Sound

- Output Power: 250 mW RMS (built-in speakers)
- Output power (RMS): 5 mW RMS (earphone)
- Signal to noise ratio: >80 dB (line out), >76 dB (earphone), >62 dB (built-in speakers)

Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Reverse, Fast Forward, OSD, Repeat, Shuffle Play, Slow Reverse, Slow Forward, Zoom
- Video disc playback system: PAL, NTSC
- Compression formats: Divx, MPEG4

Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

Connectivity

- DC in: 9 V, 1.5 A
- Headphone jack: 3.5 mm Stereo Headphone x 1
- TV connection: Antenna jack

- SD/MMC card slot: SD/SDHC card slot
- AV output: Composite (CVBS) x 1

Convenience

- Battery charging indication
- Shock proof

Tuner/Reception/Transmission

- DVB: DVB Terrestrial*

Video Decoding

- Aspect Ratio: 16:9, 4:3
- Reception-Demodulation: COFDM 2K/8K, MPEG-2 DVB compliant, Network: MFN/SFN, QPSK

Accessories

- AC/DC Adapter: DC 9 V, 1.5 A, 110–240 v, 50/60 Hz
- Cables: 1 x AV Cables
- Remote control: AY5520 slim remote
- User Manual: Multi-language
- Car kit: cigarette outlet adapter, 12vDC
- Included Accessories: Aerial antenna

Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 5 hrs*

Dimensions

- Master carton dimensions: 225 x 295 x 280 mm
- Master carton quantity: 3
- Master carton weight: 5.9 kg
- Packaging dimensions (W x H x D): 272 x 285 x 70 mm
- Product dimensions (W x H x D): 238 x 32 x 175 mm
- Product weight: 1.3 kg
- Packaging type: D-box



Issue date 2009-10-14

Version: 1.2.6

12 NC: 8670 000 49634
EAN: 87 12581 46464 6

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* DivX, DivX Certified and associated logos are trademarks of DivXNetworks, Inc. and are used under licence.

* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

* Battery life varies by use and settings.

* Battery life of playtime is approximate and may vary depending on application condition. To optimise battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level and use the product at room temperature.