

Philips  
5.1 Home theater

3D Blu-ray

HTS3582



## Powerful surround sound

### With Blu-ray 3D

Bring the power of the cinema into your home! Pump up your home entertainment experience with exposed speaker drivers offering powerful 600W surround sound and immersive 3D Blu-ray Disc playback.

#### **Great listening experience**

- Dolby TrueHD and DTS-HD for high fidelity surround sound
- 600W RMS power delivers great sound for movies and music
- Exposed speaker drivers for powerful surround sound

#### **Connect and enjoy all your entertainment**

- EasyLink to control all HDMI CEC devices via a single remote
- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Audio in to enjoy music from iPod/iPhone/MP3 player
- DivX Plus HD Certified for high definition DivX playback
- Optional WiFi accessory to wirelessly connect to internet
- Access your favorite YouTube videos & Picasa photos\* easily
- Karaoke for endless singing entertainment at home

#### **Designed to enhance your cinema at home**

- Modern design to complement your home environment

# PHILIPS

# Highlights

## 600W RMS power




600W RMS power delivers great sound for movies and music

## Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## Dolby TrueHD and DTS-HD

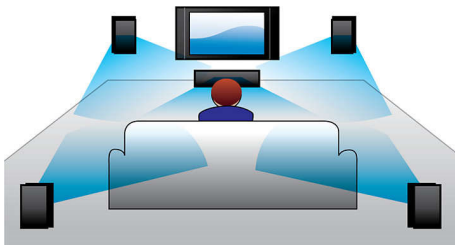

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so

you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

## Exposed speaker drivers



Exposed speaker drivers for powerful surround sound

## DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

## Access YouTube and Picasa



Get YouTube videos and Picasa photos on your TV now. Enjoy the huge collection of online videos on a larger screen, without even

having to turn on your computer. Simply ensure that your Blu-ray player or Home cinema system is connected to the Internet, either wirelessly over Wi-Fi or with a cable to the LAN connector - then sit back and enjoy the best of YouTube & Picasa.

## Optional WiFi accessory

Optional WiFi accessory to wirelessly connect to internet

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.



# Specifications

## Sound

- Sound Enhancement: Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio, DTS-HD Master Audio Essential
- Subwoofer output power: 100 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Center speaker output power: 100 W
- Tallboy speaker output power: 2 x 100 W
- Satellite speaker output power: 2 x 100 W
- Total Power RMS @ 30% THD: 600 W

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 2 x Satellite speakers, 2 x Tallboy speakers
- Center speaker drivers: 1 x 2.5" woofers
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer freq range: 20 - 150 Hz
- Center speaker impedance: 4 ohm
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Passive
- Center speaker freq range: 150 - 20k Hz
- Drivers per Satellite speaker: 1 x 2.5" woofer
- Subwoofer impedance: 4 ohm
- Drivers per Tallboy speaker: 1 x 2.5" woofer
- Tallboy speaker freq range: 150 - 20k Hz
- Tallboy speaker impedance: 4 ohm

## Connectivity

- Front Connections: Microphone In, Music iLINK, USB / Wi-Fi slot
- Rear Connections: AUX IN 1, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC)

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

## Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, Dynamic Lipsync, System standby
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type

## Power

- Power consumption: 110 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: <math>\leq 0.9\text{ W}</math>

## Accessories

- Compatible accessories: STS3001 Speaker stand, WUB1110 Wi-Fi USB Adaptor
- Included accessories: 2 x AAA Batteries, FM antenna, HDMI cable, Power cord, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet, Quick start guide

## Dimensions

- Main Unit (W x H x D): 360 x 58 x 325 mm
- Weight incl. Packaging: 11.6 kg
- Main Unit Weight: 2.4 kg
- Packaging (W x H x D): 905 x 261 x 377 mm
- Center Speaker (W x H x D): 159 x 84.5 x 80 mm
- Center Speaker Weight: 0.35 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 84.5 x 159 x 80 mm
- Subwoofer (W x H x D): 160 x 265 x 265 mm
- Front Speaker Weight: 0.35 kg
- Subwoofer Weight: 2.5 kg
- Front Speaker cable length: 3 m
- Rear Tallboy Speaker (WxHxD): 240 x 1007 x 240 mm
- Rear Speaker Weight: 1.6 kg
- Rear Speaker cable length: 7 m
- Subwoofer cable length: 3 m

## Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320kbps

## File Format

- Audio: aac, mka, mp3, wma
- Video: asf, avi, divx, mkv, mp4, mpeg, mpg, wmv
- Picture: GIF, JPEG, JPG

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Video Playback

- Compression formats: DivX Plus HD, MPEG1, MPEG2, MPEG4, RMVB



Issue date 2024-05-02

Version: 3.1.3

EAN: 87 12581 63752 1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* To upgrade for access to YouTube and Picasa, visit  
[www.philips.com/support](http://www.philips.com/support)