



Philips
Portable DVD Player

9" widescreen LCD display

PET988



Enjoy your favourite movies and photos

with a 2-position sliding screen

Play your favourite movies, photo slideshows and music on the Philips portable DVD player PET988! Complement your interior design with the interchangeable frames for the 9" colour LCD display and enjoy yourself with media from a variety of sources.

A wide variety of entertainment

- 9" TFT colour widescreen LCD display
- Play DVD, DVD+/-R and DVD+/-RW, (S)VCD, DivX® & MPEG4 movies
- Plays MP3-CD, CD and CD-RW music
- Built-in stereo speakers for quality sound

Easily display your digital photos

- Display photos and photo slideshows
- View photos directly from memory cards, USB, DVDs and CDs
- Additional frame to suit your home

Great convenience

- Handy remote control
- AV-out connector to TV
- Time and date display
- Touch sensitive keys for intuitive control
- Headphone jack for personal enjoyment

PHILIPS

sense and simplicity

Portable DVD Player
9" widescreen LCD display

PET988/12

Highlights

Play DVD, DivX and MPEG4




With DivX® support, you are able to enjoy DivX® encoded videos in the comfort of your living room. The DivX® media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, memory cards and DVD-video. DivX® CDs can be played back on selected DVD

players, DVD Recorders and Home Theatre Systems.

MP3-CD, CD and CD-RW music

MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

Additional frame

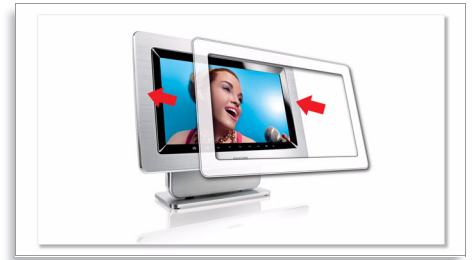

An additional frame that snaps onto your portable DVD player to fit your personal taste and complements your home or office decor.

Touch sensitive keys

With the touch sensitive keys, a light touch on the keys is all that is needed to register your input. No need to press hard on the keys on your product anymore!



Specifications

Picture/Display

- Diagonal screen size (inch): 9 inch
- Display screen type: LCD TFT
- Resolution: 640 (w) x 220 (H) x 3 (RGB)
- Brightness: 150 cd/m²
- LCD panel type: Anti-glare polariser
- Contrast ratio (typical): 250:1
- Effective viewing area: 202.56 (W) x 105.27 (H)
- Pixel pitch: 0.1055 (H) x 0.4785 (H)
- Response time (typical): 30 ms

Sound

- Output Power: 500 mW RMS (built-in speakers)
- Output power (RMS): 10 mW RMS (earphone)
- Signal to noise ratio: >80 dB (earphone), >62 dB (built-in speakers)

Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Fast Reverse, Fast Forward, OSD, Repeat, Shuffle Play, Slow Reverse, Slow Forward, Zoom
- Video disc playback system: NTSC, PAL
- Compression formats: Divx, MPEG4

Audio Playback

- Compression format: Dolby Digital, MP3

- MP3 bit rates: 32 - 320 kbps
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

Connectivity

- DC in: 9 V
- Headphone jack: 3.5 mm Stereo Headphone
- AV output: Composite (CVBS) x 1
- SD/MMC card slot: SD card reader
- USB

Accessories

- AC/DC Adapter: DC-IN 9 V, 110-240 v, 50/60 Hz
- Remote control: Slim remote
- Cables: 1 x AV Cables
- User Manual: 16 languages

Dimensions

- Master carton dimensions: 405 x 353 x 250 mm
- Master carton quantity: 3
- Master carton weight: 6.8 kg
- Packaging dimensions (W x H x D): 340 x 240 x 133 mm
- Product dimensions (W x H x D): 270 x 210 x 105 mm
- Packaging type: D-box
- Product weight: 2 kg



Issue date 2009-06-17

Version: 1.0.8

12 NC: 8670 000 39723
EAN: 87 12581 42293 6

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com