




Philips
wireless portable speaker

14W, 10hr

Long Bluetooth range
Waterproof, dustproof
Quick charge option

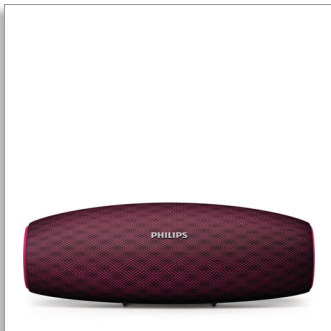

BT7900P

Music never stops

My music never stops. Everplay wireless portable speaker keeps playing all the time without interruption thanks to the strong Bluetooth connection and intuitive charging options. Its custom fabric makes it beautiful as well as super durable

Great and powerful sound

- Twin front-firing neodymium speakers for powerful sound
- Digital Sound Processing for lifelike, distortion-free music

Intuitive charging

- Quick-charge recharges speaker 3 times faster
- Battery indicator to easily view power level
- USB cable doubles as a strap

Strong Bluetooth connection

- Wireless music streaming via Bluetooth
- Strong Bluetooth connection up to 30m or 100ft
- 100-hr Bluetooth power standby time
- Built-in microphone for hands-free phone calls

Super durability

- Durable build – shockproof, dustproof and waterproof (IP57)
- High performance DuraFit fabric

PHILIPS

wireless portable speaker
14W, 10hr Long Bluetooth range, Waterproof, dustproof, Quick charge option


Highlights

Digital Sound Processing




Advanced sound processing technology enhances the reproduction of your music so that each note resonates with crystal-clear accuracy, and each pause is sealed with pristine silence. Philips' proprietary Digital Sound Processing technology optimises the performance of compact speakers, delivering sound that is clear, detailed and powerful without any distortion.

Wireless music streaming

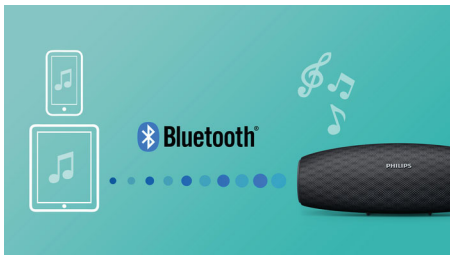

Bluetooth is a wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

30m Bluetooth range

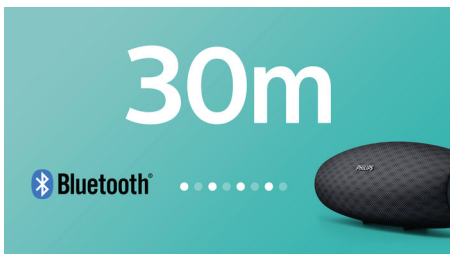

Move freely around with your smart phone, without worrying about dropping your music. EverPlay speaker offers an incredibly stable and

long-range Bluetooth connection up to 30 metres or 100 feet, three times faster than industry standards. The speakers are equipped with a sensitivity antenna and radio frequency filter to minimize background interference.

100-hr standby time




EverPlay's intelligent standby mode gives you an incredible 100 hours of standby time and the speaker can be woken from power-off mode simply by your smart device.

Quick charging



Charging the speaker takes quite some time usually. EverPlay offers a quick charge option that can recharge the speaker three times faster than normal USB adapter. By using Qualcomm Quick-Charge adapter (not included), that is commonly used in new Android phones, to charge the speaker, the charging time is much faster.

Battery indicator

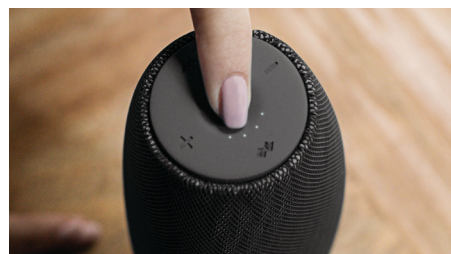

Finally, a Bluetooth speaker that provides a simple, clear way to see how much remaining

BT7900P/00

power you have! With EverPlay, simply push the power button to see how much battery is left.

Durable build



EverPlay speaker is super durable and features dust, shock and water resistance. Dust cannot interfere the operation of the speaker. And it is able to withstand immersion in water up to 1 meter for up to 30 minutes. This means that a session in the shower, getting caught in the rain, or a quick drop into a body of water will not cause damage. Under Shockproof designation, this product is tested in a "Torture Chamber" to undergo a roller swing test with simulated 5-year product life-time reliability. Everplay is truly durable built!

DuraFit Fabric



The DuraFit fabric covering the speaker provides both functional and aesthetic benefits. With upper rubber overlays covering a matching accent-colored cloth, the anti-slip, scratch resistant and washable material offers additional protection, while the unique rhombus mesh pattern also gives it a more modern, sophisticated style.

wireless portable speaker
14W, 10hr Long Bluetooth range, Waterproof, dustproof, Quick charge option

BT7900P/00

Specifications

Compatibility

- iPad: iPad 1, iPad 2, new iPad, iPad with Retina display, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3, iPad mini, iPad mini 4, iPad Pro
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus, iPhone 6S, iPhone 6S Plus, iPhone 7, iPhone 7 Plus
- iPod touch: 3rd generation or later
- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
- other Bluetooth-enabled device

Sound

- Output power (RMS): 2 x 7W
- Sound System: Stereo

Loudspeakers

- Speaker drivers: 2 x 1.5" full range driver and 2 x 2.25" passive radiator

Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 30m or 100ft
- Audio Connections: 3.5mm Line in

Convenience

- Water resistance: IPX7
- Built-in microphone: for speaker conference
- Dustproof

Power

- Battery type: Lithium-ion (built-in)
- Operating time on battery: 10 hr

Accessories

- Included accessories: USB cable for PC charging, Quick install guide

Dimensions

- Product dimensions (WxDxH): 201 x 71 x 72 mm
- Packaging dimensions (WxDxH): 216 x 97 x 94 mm
- Product weight: 0.53 kg
- Weight incl. Packaging: 0.72 kg

Design and finishing

- Color: Pink



Issue date 2022-05-11

Version: 8.2.6

12 NC: 8670 001 44226
EAN: 48 95185 62869 1

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com