# Always there to help you

Register your product and get support at www.philips.com/welcome



CEM5100





# User manual



## Contents

1	Important	4
	Safety	4
	Notice	4
2	Your car audio system	6
	Introduction	6
	What's in the box	6
	Overview of the main unit	7
	Overview of the remote control	8
3	Get started	9
	Install the car audio	9
	Install remote control battery	12
	Turn on	12
	Select country/region	12
	Set clock	13
4	Listen to radio	13
	Tune to a radio station	13
	Store radio stations in memory	14
	Tune to a preset station	14
5	Use bluetooth devices	14
	Pairing bluetooth devices	14
	Make a call	15
	Call transfer	15
	Receive call	15
	Terminate call	15
	Play audio files from bluetooth devices	15
6	Play with RDS	16
	Turn on RDS	16
	Select program type	16
	Select alternate frequencies	16
	Receive traffic announcement	17
	Set RDS clock	17

7	Play audio files	17
	Play a disc	17
	Play from USB	18
	Insert a card	18
	Play from iPod/iPhone	18
	Play options	19
	Connect external sound source	20
8	Adjust sound	21
	Adjust volume	21
	Mute	21
	Turn Dynamic Bass Boost (DBB) on/off	21
	Turn MAX sound on/off	21
	Select preset equalizer	21
	Switch music listening zone	21
	Turn on/off full sound	21
	Other sound settings	22
9	Adjust system settings	22
	Turn beep sound on/off	22
	Select blackout setting	22
	Turn demo mode on/off	22
	Dimmer	23
	Dance	23
	LCD Color	23
	Audiobook	23
	Reset	23
10	Additional information	24
	Detach the front panel	24
	Replace fuse	24
	Remove the unit	24
11	Product information	25
12	Troubleshooting	26
	About Bluetooth device	26
13	Glossary	27

# 1 Important

#### Safety

- Read and understand all instructions before you use your apparatus. If damage is caused by failure to follow instructions, the warranty does not apply.
- This apparatus is designed for negative ground (earth) 12 V DC operation only.
- To ensure safe driving, adjust the volume to a safe and comfortable level.
- Improper fuses can cause damage or fire. When you need to change the fuse, consult a professional.
- Use only the supplied mounting hardware for a safe and secure installation.
- To avoid short circuit, do not expose the apparatus, remote control or remote control batteries to rain or water.
- Never insert objects into the ventilation slots or other openings on the apparatus.
- Clean the apparatus and frame with a soft, damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the apparatus.
- Never place any objects other than discs into the apparatus.
- Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Risk of damage to the apparatus screen! Never touch, push, rub or strike the screen with any object.

#### Caution

• Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

- The apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- Risk of swallowing coin battery!
  - The device may contain a coin/button type battery, which can potentially be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
  - If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
  - When you change the batteries, always keep all new and used batteries out of reach of children. Make sure that the battery compartment is completely secure after you replace the battery.
  - If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.

#### Notice

#### Be responsible Respect copyrights

The making of unauthorized copies of copyprotected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.



"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone may affect wireless performance.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. **This apparatus includes this label:** 



#### Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

# **C€**1177

This product complies with the radio interference requirements of the European Community.

#### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment. 2014 © WOOX Innovations Limited. All rights reserved.

Specifications are subject to change without notice. WOOX reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

# 2 Your car audio system

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

#### Introduction

With the in-car audio system, you can enjoy your drive while you listen to:


- FM or AM (MW) radio
- Audio from CD or MP3 disc
- Audio from your mobile phone
- Audio from a USB drive
- Audio from a SD/SDHC card
- Audio from external devices

Besides, you can make a call, answer and hang up a call on the audio system.


#### What's in the box


Check and identify the contents of your package:

- 1 Main unit (with a sleeve)
- 2 Remote control
- 3 Front panel
- (4) Trim plate
- 5 Carrying case for front panel
- (6) ISO male connector
- 7 Rubber cushion
- 8 Screw x 1 pc
- 9 Disassembly tools x 2 pcs
- (10) User manual
- (11) Quick start guide

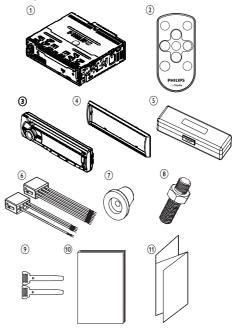

#### Overview of the main unit

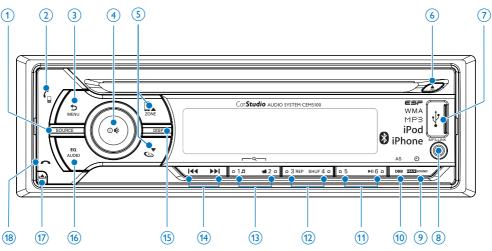

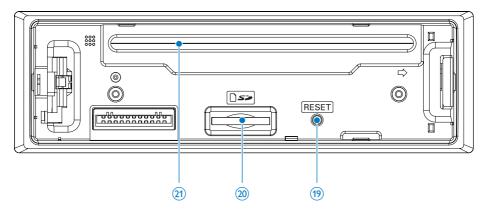

#### 1 SOURCE

- Select audio source.
- Display LCD color.

#### 2 c

- Press to answer or redial a call.
- Press and hold to transfer call.
- 3 MENU 5
  - Press and hold to access system menu.
  - Return to previous menu.
  - Access music search in iPod/iPhone mode.

#### (4) 0 / ₩

- Turn the unit on or off.
- Confirm selection.
- Mute or unmute sound.
- Rotate to adjust volume.
- (5) □ ▲ ZONE / ▼ (5)
  - Select tuner band.
  - Select MP3/WMA folder.
  - Switch music listening zone.
  - Turn on or off full sound.
  - Enter iPod/iPhone control mode.

- 6
  - Eject disc.
- 7 .
  - USB socket.
- 8 MP3 LINK
  - Connect external audio device.
- 9 MAX SOUND
  - Turn maximizing volume on or off.
  - View clock.

#### (10) DBB

- Turn Dynamic Bass Boost (DBB) sound on or off.
- Access to tuner auto store.
- (1) ► II
  - Select preset radio station No.6.
  - Start play.
  - Pause or resume play.

#### 12 REP / SHUF

- Repeat play.
- Shuffle play.
- Select preset radio station No.3/4.
- (13) 7 / 📹
  - Select preset radio station No.1/2.
  - Search for track/folder.

#### 〔14〕 |◀◀ / ▶▶|

- Tune for radio station.
- Skip/search for track.
- Fast backward/forward playback.
- (15) DISP
  - Display current status.
  - Select the dimmer high or low.
- (16) EQ / AUDIO
  - Select equalizer (EQ) setting.
  - Access audio setting menu.
- 17 🔺
  - Unlock the panel.
- (18)
  - Press to terminate call.
- (19) RESET
  - Restore default settings.
- 20 SD card slot
- 21) Disc slot

#### 1 VOL +/-

Adjust volume.

PHILIPS

CarStudio

- ② ▲/▼
  - Select tuner band.
  - Scroll up/down menu.
  - Select MP3/WMA folder.

Overview of the remote

VOL+

EQ

1

2

3

(4)

5

(6)

control

VOL

**I**<

OFF

0\$

SOURCE

- ③ |◀◀ / ▶▶|
  - Tune to a radio station
  - Skip track.
  - Fast backward/forward playback
- (4) SOURCE
  - Select audio source.
- 5 EQ
  - Select equalizer (EQ) settings.
- 6 OFF / 0 / ₩
  - Turn the unit on or off.
  - Mute or restore volume.

#### Get started 3

#### Caution

· Use the controls only as stated in this user manual.

Always follow the instructions in this chapter in seauence.

If you contact the Consumer Care, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of your apparatus. Write the numbers here:

Model No. \_\_\_\_\_

Serial No.

#### Install the car audio

These instructions are for a typical installation. However, if your car has different requirements, make the corresponding adjustment. If you have any question regarding installation kits, consult your local retailer.

#### Caution

- This unit is designed for negative ground (earth) 12 V DC operation only.
- · Always install this unit in the car dashboard. Other locations can be dangerous as the rear of the unit heats up during use.
- · To avoid short-circuit: before you connect, ensure that the ignition is off.
- · Ensure that you connect the yellow and red power supply leads after all other leads are connected.
- · Ensure that all loose leads are insulated with electrical tape.
- · Ensure that the leads do not get caught under screws orin parts that will move (e.g. seat rail).
- · Ensure that all ground (earth) leads are run to a common ground (earth) point.
- · Use only the supplied mounting hardware for a safe and secure installation.
- · Improper fuses can cause damage or fire. When you need to change the fuse, consult a professional.

#### Note on the power supply lead (yellow)

When you connect other devices to this apparatus, ensure that the rating of the car circuit is higher than the total fuse value of all the connected devices.

#### Notes on speaker connection

- Never connect speaker wires to the metal body or chassis of the car.
- Never connect speaker wires with stripes to one another

#### Connection: for cars with ISO connectors


#### Caution

Ensure that all loose leads are insulated with electrical tape.



#### Note


- Consult a professional to connect CEM5100 as instructed below.
- 1 Connect the supplied male connector to the unit.



2 Check the car's wiring carefully and connect them to the the supplied male connector.


#### Note

· Risk of danger! Please consult a professional to perform the steps below!

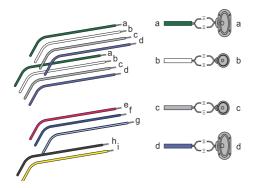

1	Green/black	Left speaker (Rear)
	strip	
2	White/black	Left speaker (Front)
	strip	
3	Gray/black	Right speaker (Front)
	strip	
4	Purple/black	Right speaker (Rear)
	strip	
е	Red	Ignition key +12V DC when
		ON/ACC
f	Blue	Motor/electric antenna relay
		control lead
g	White-edged	Amplifier relay control lead
	blue strip	
h	Black	Ground
i	Yellow	To the +12V car battery
		which is energized at all
		times

**3** Connect the antenna and amplifier as illustrated, if applicable.

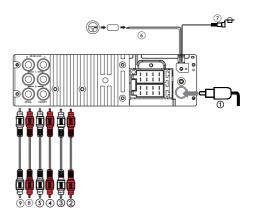


	Connector	Connect to
1	ANTENNA	Antenna
2	FRONT LINE OUT R	Front right
	(Socket)	speaker
3	FRONT LINE OUT L	Front left
	(Socket)	speaker
4	REAR LINE OUT R	Rear right
	(Socket)	speaker
5	REAR LINE OUT L	Rear left speaker
	(Socket)	
6	OE REMOTE (Purple)	OE Remote
7	SUBWOOFER (Blue)	Subwoofer
8	REAR AUX LINE OUT	Rear Aux right
	R	-
9	REAR AUX LINE	Rear Aux left
	OUT L	

#### 🔆 Тір


 The pin arrangement for the ISO connectors depends on the type of vehicle you drive. Be sure to make proper connections to prevent damage to the unit.

#### Mount into the dashboard

- 1 If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.
  - If you disconnect the car battery in a car that has an on-board drive or navigation computer, the computer may lose its memory.
  - If the car battery is not disconnected, to avoid short-circuit, ensure that the bare wires do not touch each other.
- 2 Ensure that car dashboard opening is within these measurements:

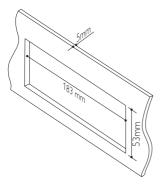


**3** Remove the mounting sleeve with the supplied disassembly tools.

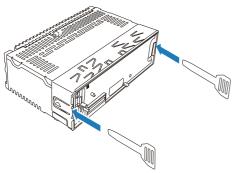


4 Install the sleeve into the dashboard and bend the tabs outward to fix the sleeve.

Note


• If the unit is not fixed by sleeve but by the supplied screws, skip this step.

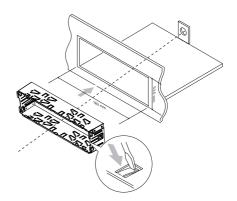

5 Place the supplied rubber cushion over the end of the mounting bolt.

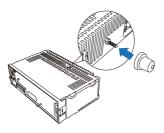


6 Slide the unit into the dashboard until you hear a click.

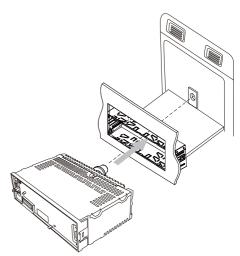

7 Reconnect the negative terminal of the car battery.

#### Attach the front panel

- 1 Attach the trim plate.
- 2 Insert the right side of the panel in the chassis until it is correctly engaged.
- **3** Press the left side of the panel until the mechanism locks it into place.

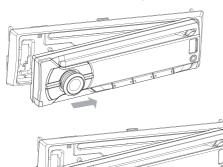

#### Install remote control battery

#### Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of decreased battery life! Never mix different brands or types of batteries.
- Risk of product damage! When the remote control is not used for long periods, remove the batteries.
- Perchlorate Material special handling may apply. See
   www.dtsc.ca.gov/hazardouswaste/perchlorate.


#### For first-time use:

Remove the protective tab to activate the remote control battery.

#### To replace the remote control battery:

- 1 Open the battery compartment.
- 2 Insert one CR2025 battery with correct polarity (+/-) as indicated.

**3** Close the battery compartment.

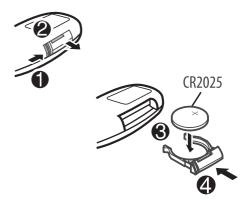

#### Turn on

To turn the unit on,

press ①.

To turn the unit off,

#### Select country/region

#### - Note

- Select correct country/region for this unit, otherwise the unit can not work properly.
- 1 Press ① to turn the unit on.
  - → [SELECT OPERATING REGION] is displayed.
- 2 Rotate <sup>①</sup> to select an option:
  - [USA] (United States)
  - [LATIN] (Latin America)
  - [EUROPE] (Western Europe)
  - [RUS] (Russia)
  - [M-EAST] (Middle East)
  - [ASIA] (Asia Pacific)
  - [JAP] (Japan)
  - [AUST] (Australia)
- **3** Press  $\oplus$  to confirm.

#### Set clock

- 1 Press MENU repeatedly until current time is flashed.
- 2 Rotate O to set hour.
- **3** Press <sup>①</sup> to confirm.
- 4 Rotate <sup>①</sup> to set minute.
- 5 Press 1 to confirm.

#### Set clock format

- 1 Press MENU.
- 2 Press ▲ or ▼ repeatedly until [CLOCK FORMAT] is displayed.
- **3** Rotate **①** to select a setting:
  - [CLOCK 12H]
  - [CLOCK 24H]

#### View clock

In any mode, press and hold **MAX SOUND** until the clock is displayed.

• Press any key to cancel the clock display.

# 4 Listen to radio

#### Tune to a radio station

- 1 Press SOURCE repeatedly to select radio mode.
- 2 Press ▲ / ▼ repeatedly to select band: [FM1], [FM2], [FM3], [AM1], or [AM2].
- 3 Press and hold I← or ▶▶I until the frequency digit is flashed.
- 4 Press I ← or ▶►I to tune to a radio station manually.
  - $\mapsto$  The radio station is broadcast.
- To search for a radio station automatically, press I<< or ▶►I.

#### Select tuner region

You can select suitable country/region of the radio.

- 1 Press **SOURCE** to select radio mode.
- 2 Press and hold MENU repeatedly until [AREA] is displayed..
- 3 Rotate ① to select:
  - [USA] (United States)
  - [LATIN] (Latin America)
  - [EUROPE] (Western Europe)
  - [M-EAST] (Middle East)
  - [ASIA] (Asia Pacific)
  - [JAP] (Japan)
  - [AUST] (Australia)
- 4 Press O to confirm.

#### Select tuner sensitivity

To receive more radio stations or only stations with strong signal, you can adjust the tuner sensitivity.

1 Press and hold MENU repeatedly until [LOCAL] is displayed.

- 2 Rotate ① to select a setting:
  - [LOCAL ON] (local on): Only stations with strong signal can be broadcast.
  - [LOCAL OFF] (local off): Stations with strong and weak signals can be broadcast.

# Store radio stations in memory

You can store up to six stations in each band.

#### Store stations automatically

- 1 In radio mode, press and hold DBB until [STORE - - -] is displayed.
- 2 Press <sup>①</sup> to confirm.
  - → The six strongest stations of the selected band are saved in the preset channel automatically.

#### Store stations manually

- 1 Tune to a station that you want to store. (see 'Tune to a radio station' on page 12)
- 2 Press a numeric button for three seconds.
  - → The station is saved in the selected channel.

#### Tune to a preset station

- 1 In radio mode, press  $\blacktriangle$  /  $\blacktriangledown$  to select band.
- 2 Press a numeric key to select a preset station.

# 5 Use bluetooth devices

With this car audio system, you can listen to audio files from a player or make a call if bluetooth connection is available on your phone or player.

#### Pairing bluetooth devices

You can pair your bluetooth device with the unit as follows:



### For pairing operation, make sure to switch on the **[BT MODE]** on the unit.

- 1 Turn on bluetooth function on your device.
- 2 Search for other bluetooth devices that can pair with your device.
- **3** Select "Philips" in the pairing list.
- 4 Enter default password "0000".
  - ► [PAIR OK] is displayed on the panel if pairing is successful.
  - → The paired device connect to the car audio system automatically.

#### To disconnect the bluetooth

- 1 Press and hold MENU.
  - → [BT DISCONN] is displayed.
- 2 Press ① / 啄 .
  - → [DISCONN OK] is displaysedif disconnection is successful.

#### To connect the bluetooth

- 1 Press and hold MENU.
  - → [BT CONNECT] is displayed.

- 2 Press ① / 🕸 .
  - → [WAITING] is displayed.
  - → [CONNECTED] is displayed if connection is successful.
  - → [FAILED] is displayed if connection is failed.

#### Make a call



 To make an outgoing call on this unit, the bluetooth connection between the unit and the phone must be active.

You can dial number through the mobile phone. To make call through the mobile phone.

- 1 Use the Mobile Phone to dial and make an outgoing call.
- 2 Once completed the dialing, [CALLING] is displayed.
- To redial number.
- 1 Press C.
  - → [REDIAL] is displayed.
- 2 Press <sup>①</sup> / <sup>I</sup> Again.
  - → [CALLING] is displayed and the unit starts dialing the number dialed last time.

### Call transfer

You can transfer voice from loudspeaker to mobile phones during call.

Press and hold  $\boldsymbol{\textit{c}}$  until [TRANSFER] is displayed.

→ Voice transfers from loudspeaker to mobile phone.

#### Receive call

- 1 If there is incoming call, the phone number is displayed.
  - if the incoming call has no phone number; **[PHONE IN]** is displayed.
- 2 Press *c* to answer/accept the call.

#### Terminate call

Press 🖍 to terminate call.

# Play audio files from bluetooth devices

You can listen to audio from a bluetooth device and control playback with the unit. Press **SOURCE**repeatedly to select **[BT AUDIO]**.

• To start play, press ① / 啄.



- Some mobile phone supports auto playback, no need to start play manually.
- Some mobile phone needs to open the Media Players for audio files wireless playback.
- To pause, press ① / 啄 again.
- To track up/down, press I◀◀ / ►►I.

# 6 Play with RDS

The RDS (Radio Data System) function operates only in areas with FM stations broadcasting RDS signals. If you tune to an RDS station, the station name are displayed.

#### Turn on RDS



• The default setting for RDS is on.

- 1 Press and hold MENU.
- Press ▲ or ▼ repeatedly until [RDS] is displayed.
- Botate 

   The RDS function is turned on.

#### Select program type

Before tuning to RDS stations, you can select program type and let the unit search only for programs of the selected category.

- 1 Press and hold MENU.
- 2 Press ▲ or ▼ repeatedly until [PTY] is displayed.
- **3** Press <sup>①</sup> to confirm.
- 4 Rotate O to select a type, then press O to confirm.

ltem	Program	Description
	type	
1	NEWS	News services
2	AFFAIRS	Politics and current
		affairs
3	INFO	Special information
		programs
4	SPORT	Sports
5	EDUCATE	Education and advanced
		training

6	DRAMA	Radio plays and
		literature
7	CULTURE	Culture, religion and
		society
8	SCIENCE	Science
9	VARIED	Entertainment programs
10	POP M	Pop music
11	ROCK M	Rock music
12	EASY M	Light music
13	LIGHT M	Light classical music
14	CLASSICS	Classical music
15	OTHER M	Special music programs
16	WEATHER	Weather
17	FINANCE	Finance
18	CHILDREN	Children's programs
19	SOCIAL	Social Affairs
20	RELIGION	Religion
21	PHONE IN	Phone In
22	TRAVEL	Travel
23	LEISURE	Leisure
24	JAZZ	Jazz Music
25	COUNTRY	Country Music
26	NATION M	National Music
27	OLDIES	Oldies Music
28	FOLK M	Folk Music
29	DOCUMENT	Documentary
30	TEST	Alarm Test
31	ALARM	Alarm

#### Select alternate frequencies

The AF (Alternate Frequency) turns on automatically when you start your car audio.

#### Set region for AF tuning

You can define AF tuning region:

[REG	Only stations in current region can
ON]	be tuned to automatically.
[REG	All stations can be tuned to
OFF]	automatically.

#### 1 Press MENU.

- Press ▲ or ▼ repeatedly until [REG] is displayed.
- **3** Rotate **①** to select a setting.

#### Receive traffic announcement

The TA (Traffic Announcement) turns on automatically when you start your car audio.



 If the current received TA signal remains weak for over 120 seconds, the unit will activate TA Seek mode automatically. The TA Seek will seek for other station with good condition of TA signal.

#### Set RDS clock

You can use time signal that is broadcast together with the RDS signal to set the clock of the unit automatically.

- 1 Press and hold **MENU**.
- Press ▲ or ▼ repeatedly until [CT] is displayed.
- **3** Rotate ① to select a setting:
  - **[CT ON]**: turn the RDS clock on. Time shown on the unit synchronizes with that on the RDS station.
  - [CT OFF]: turn the RDS clock off.
- 🔆 Тір

• The accuracy of the transmitted time depends on the RDS station that transmits the time signal.

# 7 Play audio files



Ensure that the disc or device contains playable files.

#### Play a disc



#### . ....

 You cannot play CDs encoded with copyright protection technologies.

You can play commercially available audio CDs and these discs:

- CD-Recordables (CD-R)
- CD-Re-writables (CD-RW)
- MP3 CDs
- WMA CDs

#### - Note

• Ensure that the disc contains playable content.

Insert a CD with the printed side facing up. → Play starts automatically.

- To pause CD play, press ► II.
- To resume CD play, press ► II again.
- To skip to the previous/next track, press
   I◄ or ►►.
- To search backward/forward rapidly within the current track, press I ◄ or ▶►I for 3 seconds.

#### Remove the CD

To take out the CD, press  $\blacktriangle$  on the front panel.

#### 🔆 Tip

 If the disc is blocked in the disc compartment, press and hold ▲ until the disc comes out.

#### Play from USB



• Ensure that the USB device contains playable music.

#### Insert the USB device

- Slide the USB socket cover marked ← to the left.
- 2 Insert the USB device into the USB socket.
  - → The unit starts playing from the USB device automatically.



#### Remove the USB device


- 1 Press ① to turn the unit off.
- 2 Remove the USB device.

#### Insert a card



• This unit supports SD and SDHC cards.

- 1 Press 🔺 to release the panel.
- 2 Insert the card into the card slot.
- 3 Close the front panel.
  - → The unit starts playing from the card automatically.

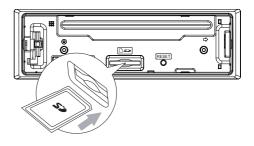

#### Remove the card

- 1 Press ① to turn the unit off.
- 2 Press the card until you hear a click.→ The card is now disengaged.
- **3** Remove the card.

#### Play from iPod/iPhone

You can enjoy audio from iPod/iPhone through this unit.

#### Compatible iPod/iPhone

Apple iPod and iPhone models with a 30-pin dock connector:

Made for.


- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic
- iPod with video
- iPod nano (6th generation)
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPod nano (1st generation)

Works with.

- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

#### Connect iPod/iPhone

- 2 Insert USB adaptor on one end of iPod/ iPhone cable to the USB socket on the main unit.
- 3 Insert the other end of the iPod/iPhone cable to the iPod/iPhone socket.
  - → The unit starts playing from the USB device automatically.

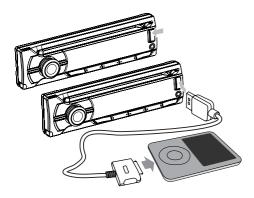

#### Control music playback on iPod/ iPhone

- 1 Ensure that the iPod/iPhone is connected correctly.
- 2 Press **SOURCE** to select iPod USB mode.
- **3** Press D repeatedly to toggle between the two control modes:
  - iPod control mode: Use the buttons/ touch screen on iPod/iPhone to control the music.
  - Audio control mode: Use the control buttons on car audio to control the music.

### To control playback under audio control mode:

- To pause/resume play, press ①.
- To skip to a track, press I<< / ▶▶I.</li>

- To search during play, press and hold
   I◄
   I◄
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   I
   <li
- To navigate the menu, press 五, rotate

   ① to select, then press ① to confirm.

#### Search for a track

- 1 Press SOURCE repeatedly to select iPod mode.
- 2 Press 🛥 to browse iPod/iPhone menu.
- **3** Rotate  $\Phi$  to select the Artist search mode, and press  $\Phi$  to confirm.
- 4 Press **DISP** to search alphabetically.
- 5 Rotate O to select desired artist, then press O to confirm.
- 6 Rotate O to select desired song in current album.
- 7 Press ① to start play.

#### - Note

 User cannot control the music via iPod/iPhone under audio control mode.

#### Play options

#### Search for an MP3/WMA track

#### Search within the current folder

- 1 Press  $\varPi$ .
  - → The name of the current track is displayed.
- 2 Rotate 1 to select anther track in current folder.
- **3** Press O to confirm.

#### Search in other folder

- 1 Press 🛋.
  - → The name of the current folder is displayed.
- 2 Rotate O to navigate through all folders.

- - → The unit starts playing the first song from the selected folder automatically.

# Tip To go back to upper level of a folder; press

#### View play information

During playing, press **DISP** repeatedly to view:

- Track number and elapsed play time
- Folder
- File
- Album
- Artist
- Title

#### Repeat play

- During play, press REP.
   → [REPEAT] is displayed.
- 2 Rotate ① to select a setting.
- [REPEAT TRK] (repeat one track): play current track repeatedly.
- [REPEAT FLD] (repeat a folder): play all tracks in the current folder repeatedly.
- [REPEAT ALL] (repeat all tracks): play all tracks repeatedly.

#### Shuffle play

You can play the tracks in random order:

- 1 During play, press SHUF. → [SHUFFLE] is displayed.
- 2 Rotate O to select a setting:
  - [SHUFFLE FLD]: start random play for all tracks in the current folder.
  - [SHUFFLE ALL]: start random play for all tracks.
  - [SHUFFLE OFF] : cancel shuffle play.

# Connect external sound source

- 1 Connect the external sound source to MP3 LINK socket with a 3.5 mm cable.
- 2 Press SOURCE repeatedly until [MP3 LINK] is displayed.
- **3** Operate the external component (refer to the instructions supplied with the external component).

# 8 Adjust sound

#### Adjust volume

Turn  $\ensuremath{\mathbbmmod}$  clockwise/counterclockwise to increase/ decrease volume.

#### Mute

You can turn off the sound of your audio. During play, press  $\mathbb{O}$ .

• To resume sound, press ① again.

#### Turn Dynamic Bass Boost (DBB) on/off

- 1 Press DBB and the current setting is displayed:
  - ► [DBB ON] : the Dynamic Bass Boost (DBB) function is on.
  - → [DBB OFF] : the DBB function is off.
- 2 Press DBB again to change the DBB setting.

#### Turn MAX sound on/off

- 1 Press MAX 50000.
  - → The current setting displays
  - [MAX ON]: the maximum sound (MAX sound) function is on.
  - [MAX OFF]: the maximum sound function is off.
- 2 Press again to select an option.

#### Select preset equalizer

- Press EQ / AUDIO.
   → Current Equalizer setting is displayed.
- 2 Press EQ / AUDIO again to select a preset EQ setting:
  - [OPTIMAL] (optimal)
  - [FLAT] (flat)
  - [POP] (pop)
  - [USER] (user)
  - [TECHNO] (techno)
  - [ROCK] (rock)
  - [CLASSIC] (classic)
  - [JAZZ] (jazz)

#### Switch music listening zone

Philips' innovative Zone technology enables driver or passengers to enjoy music with the best speaker balance and experience more vivid spacial effects as the artist is intended to create. You can switch the music listening zone from driver to passengers for the best speaker sound settings in car.

- 1 Press and hold ZONE.
  - $\hookrightarrow$  The current setting is displayed.
- 2 Press  $\blacktriangle$  /  $\blacktriangledown$  to select a setting:
  - [ALL]
  - [FRONT LEFT] (Front left)
  - [FRONT RIGHT] (Front right)
  - [FRONT]

#### Turn on/off full sound

- 1 Press and hold S.
  - $\mapsto$  The current setting displays:
  - [FULL ON] : the full sound function is on.
  - [FULL OFF] : the full sound function is off.
- 2 Press 👁 again to select an option.

#### Other sound settings

You can also adjust the preset **EQ** / **AUDIO** settings.

- 1 Press EQ / AUDIO for 3 seconds.
- 2 Press ▲ or ▼ repeatedly to select the item to be adjusted:
  - [SUBWOOFER ON/OFF] : Rotate ① to turn on or off the subwoofer.
  - [SUBWOOFER] range: 0 to 12.
  - [SUBWOOFER LPF] (Subwoofer low pass filter) range: 80, 120, 160.
  - **[BALANCE]** range: 12L to 12R. (L=left speaker; R=right speaker)
  - [FADER] range: 12R to 12F. (R=rear speaker; F=front speaker)
  - [BASS] range: -7 to +7.
  - [BASS CFQ] (bass center frequency) range: 60, 80, 100, 200.
  - [MIDDLE] range: -7 to +7.
  - [MIDDLE CFQ] (middle center frequency) range: 0.5k, 1.0k, 1.5k, 2.5k.
  - [TREBLE] range: -7 to +7.
  - [TREBLE CFQ] (treble center frequency) range: 10.0k, 12.5k, 15.0k, 17.5k.
  - **[RESUME]** : Resume the preset EQ value to factory default value.
- **3** Rotate **D** to select a value.

### 9 Adjust system settings

#### Turn beep sound on/off

Each time you press a button, the unit beeps. You can turn the beep sound on/off.

- 1 Press and hold MENU.
- 2 Press ▲ or ▼ repeatedly until [BEEP] is displayed.
- **3** Rotate **①** to select a setting:
  - [BEEP ON]: turn on the beep sound.
  - [BEEP OFF]: turn off the beep sound.

#### Select blackout setting

You can set the screen to turn off automatically, after the unit is idle for 10 or 20 seconds.

- 1 Press and hold MENU.
- 2 Press ▲ or ▼ repeatedly until [BLACK OUT] is displayed.
- **3** Rotate **①** to select a setting:
  - [BLK OUT 10 S] : turn off the screen automatically 10 seconds after last operation.
  - [BLK OUT 20 S] : turn off the screen automatically 20 seconds after last operation.
  - [BLK OUT OFF] : never turn off the screen.

#### Turn demo mode on/off

- 1 Press and hold MENU.
- 2 Press ▲ or ▼ repeatedly until [DEMO] is displayed.
  - → The screen shows current demo mode setting.

- **3** Rotate **①** to select a setting:
  - [DEMO ON] : turn on the demo mode. When the unit is idle for more than 120 seconds, all functions are displayed.
  - [DEMO OFF] : turn off the demo mode.

#### Dimmer

- 1 Press and hold MENU.
- 2 Press ▲ or ▼ repeatedly until [DIMMER] is displayed.
- **3** Rotate **①** to select a setting:
  - [DIMM HIGH] (dimmer high)
  - [DIMM LOW] (dimmer low)

#### Dance

You can turn on or off the spectrum on the LCD display.

- 1 Press and hold MENU.
- 2 Press ▲ or ▼ repeatedly until [DANCE] is displayed.
- **3** Rotate  $\Phi$  to select a setting:
  - [DANCE ON] : turn the spectrum on.
  - [DANCE OFF] : turn the spectrum off.

### LCD Color

You can select your desired LCD color on this car audio.

- 1 Press and hold MENU.
- 2 Press ▲ or ▼ repeatedly until [LCD COLOR] is displayed.
- 3 Press ①.
- 4 Rotate ① to select a setting:
  - [DEFAULT] (default setting)
  - [COLOR SCAN] (color scan)
  - [WHITE] (white)
  - [GREEN 1] (green 1)
  - [GREEN 2] (green 2)
  - [GREEN 3] (green 3)

- [AMBER] (amber)
- [PINK 1] (pink 1)
- [PINK 2] (pink 2)
- [PURPLE 1] (purple 1)
- [PURPLE 2] (purple 2)
- [BLUE 1] (blue 1)
- [BLUE 2] (blue 2)
- [USER COLOR] (user color)

#### Audiobook


In iPod/iPhone mode, you can set the audiobook playback speed on this car audio.

- 1 Press and hold MENU.
- 2 Press ▲ or ▼ repeatedly until [AUDIOBOOK] is displayed.
- **3** Rotate **①** to select a setting:
  - [FAST]
  - [SLOW]
  - [NORMAL]

#### Reset

You can reset the unit to its default setting.

- 1 Detach the front panel. (see 'Detach the front panel' on page 25)
- 2 Press the reset button by using a ball-point pen or a similar tool.
  - Preset adjustments such as preset channels and sound adjustments are erased.

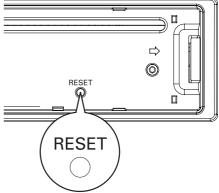


# 10 Additional information

#### Detach the front panel

You can detach the front panel to deter theft.

- 1 Press 📥 to release the panel.
- 2 Push the left side of the panel rightward.

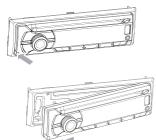


- **3** Pull the panel towards you to disengage it from the chassis.
- 4 Store the panel in the supplied carrying case to protect it from dirt or damage.

#### Replace fuse

If the fuse is damaged,

- 1 Check the electric connection.
- 2 Buy a fuse that matches the voltage of the damaged fuse.
- **3** Replace the fuse.

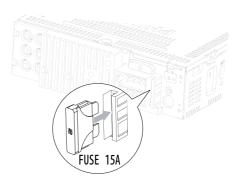




• If the new fuse gets damaged again, there may be an internal malfunction. Consult your dealer:

#### Remove the unit

You can remove the unit from the dashboard.

- 1 Detach the front panel.
- 2 Pull out the unit by using the disassembly tools.

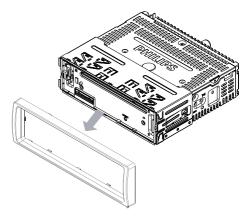

# 11 Product information

#### - Note

• Product information is subject to change without prior notice.

Power supply	12 V DC (11 V - 16 V),
	negative ground
Fuse	15 A
Suitable speaker	4 - 8 Ω
impedance	
Maximum power	50 W x 4 channels
output	
Continuous power	24 W $ imes$ 4 RMS (4 $\Omega$
output	10% T.H.D.)
Pre-Amp output	2.5V
voltage	
Aux-in level	500 mV
Dimensions	
$(W \times H \times D)$	181.5 x 52 x 191.4 mm
Weight	1.32 kg

#### Radio

Frequency range - FM	87.5 - 108.0 MHz (100kHz per step in auto search and 50kHz per step in manual search)
Frequency range - AM(MW)	522 - 1620 KHz (9 kHz)
Usable sensitivity - FM	8 μV
Usable sensitivity - AM(MW) (S/N = 20 dB)	30 µV

#### Bluetooth

Output power	0 dBm (Class 2)
Frequency band	2.4000 GHz - 2.4835 GHz
	ISM Band
Range	3 meters(free space)
Standard	Bluetooth 2.0 specification

#### Compatible USB devices:

- USB flash memory (USB 2.0 or USB1.1)
- USB flash players (USB 2.0 or USB1.1)
- memory cards (SD / SDHC)

#### Supported formats:

- USB or memory file format: FAT16, FAT32
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA V4, V7, V8, V9 (L1, L2)
- ISO9660, Joliet
- Supported sampling frequencies: 2 kHz, 44.1 kHz, 48 kHz
- Supported Bit-rates: 2~256 (kbps), variable bit rates
- Directory nesting up to a maximum of 8 levels
- Number of albums/folders: CD maximum 99, USB or memory maximum 99
- Number of tracks/titles/files: CD maximum 999 (depending on number of album), USB or memory maximum 999
- ID3 tag v2.0 or later

#### Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/ WMA files, and is not be shown in the display.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, PCM audio files
- DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
- WMA files in Lossless format

# 12 Troubleshooting

#### Caution

• Never remove the casing of this apparatus

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www. philips.com/support). When you contact the Consumer Care, make sure that the product is nearby and the model number and serial number are available.

#### No power or no sound.

- Car engine is not on. Turn the car engine on.
- Cable is not correctly connected. Check connections.
- Fuse is burnt. Replace fuse.
- Volume is too low. Adjust volume.
- If the above solutions cannot help, press the RESET button.
- Ensure that the track played is of a compatible format.

#### Noise in broadcasts.

- Signals are too weak. Select other stations with stronger signals.
- Check the connection of the car antenna.

• Change broadcast from Stereo to mono.

#### Cannot play disc

- Ensure that the disc label is inserted with the printed side facing up.
- Wipe the disc with fibre cleaning cloth from the centre to the edge in a straight line.
- This disc may be defective. Play another disc.
- Ensure that the CD is a finalised CD/ CD-R/CD-RW.
- Ensure that the CD is not encoded with copyright protection technologies.

#### The CD skips tracks

- Ensure that the CD is not damaged or dirty.
- Ensure that random mode is deactivated.

#### Disc cannot be ejected

Press and hold ▲.

#### Preset stations lost.

 Battery cable is not correctly connected. Connect the battery cable to the terminal that is always live.

#### Display show ERR-12

• USB data error. Check the USB device.

#### About Bluetooth device

### Cannot pair the Bluetooth enabled device with the car audio system.

- The device does not support the profiles required for the system.
- The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.

### The audio quality is poor after connection with a Bluetooth-enabled device.

- The microphone is not correctly positioned. Adjust the position of the microphone. For example, stick the microphone onto the dashboard where close to the driver.
- The Bluetooth reception is poor. Move the device closer to the car audio system or remove any obstacle between the device and the system.

### Music playback is unavailable on the system even after successful Bluetooth connection.

The device cannot be used with the system to play music.

### The paired mobile phone connects and disconnects constantly.

- The Bluetooth reception is poor. Move the mobile phone closer to the car audio system or remove any obstacle between the mobile phone and the system.
- Some mobile phones may connect and disconnect constantly when you make or end calls. This does not indicate any malfunction of the system.

 For some mobile phones, the Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of the system.

## 13 Glossary

#### Μ

#### MP3

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

#### S

#### SD

Secure Digital. A type of memory card with a flash memory.

#### SDHC

Secure Digital High Capacity (SDHC) is a type of flash memory card based on the SDA 2.00 specification. The SDA 2.00 specification enables SD cards to reach higher capacities from 4GB to 32GB, and growing.

#### W

#### WMA (Windows Media Audio)

An audio format owned by Microsoft, is a part of Microsoft Windows Media technology. Includes Microsoft Digital Rights Management tools, Windows Media Video encoding technology, and Windows Media Audio encoding technology.



2014 © WOOX Innovations Limited.All rights reserved. Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V.

CEM5100\_12\_UM\_V4.0

