

Philips
Blu-ray component Hi-Fi
system



MBD3000



Obsessed with sound

Enjoy high fidelity music and movies

Get full HD 1080p imagery, dome tweeters, Dolby TrueHD high fidelity sound and more with the Philips Blu-ray component hi-fi system. Finished with premium quality materials, Blu-ray DVDs, CDs and more never looked or sounded so good.

Enrich your sound experience

- Dome tweeter for detailed and natural sound
- Dolby TrueHD for high fidelity surround sound
- 100 W RMS total output power
- Treble and Bass Control for easy high and low tone settings

Enrich your movie experience

- Blu-ray Disc playback for sharp images in full HD 1080p
- DivX Ultra Certified for enhanced DivX video playback
- 1080p at 24 fps for cinema-like images
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- EasyLink controls all HDMI-connected devices via HDMI CEC
- Hi-Speed USB 2.0 Link plays video/music from USB flash drives


Premium finishing with noble materials

- Wooden speakers for great natural sound
- Aluminium cabinet

PHILIPS
sense and simplicity

Highlights

Blu-ray Disc playback

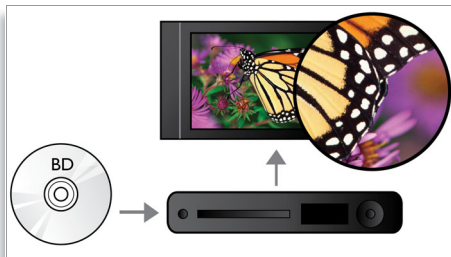

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound — so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allows a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features such as pop-up menus bring a whole new dimension to home entertainment.

DivX Ultra Certified



With DivX support, you can enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, from the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips device. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Dome tweeter

Dome tweeters reproduce clear high and mid-range frequencies that enhance the overall sound clarity coming from the speakers. Delivering a harmonious blend of undistorted and uncoloured wide-ranging sound, they offer detailed vocal clarity and instrument tone purity, thereby balancing the overall sound when paired with a combination of woofers.

1080p at 24 fps




Bring a true cinema experience into your living room, with 24 frames-per-second video. Original films are all recorded at this frame rate, providing an ambience and image texture that is so unique. Philips Blu-ray Disc players are equipped to bring you 24fps directly from Blu-ray Discs — giving you sensational cinema-like high definition images that will astound you.

BD-Live (Profile 2.0)



BD-Live opens up your world of high definition even further. Receive up-to-date content just by connecting your Blu-ray Disc player to the Internet. Exciting new things like exclusive downloadable content, live events, live chats, gaming and on-line shopping all await you. Ride the high definition wave with Blu-ray Disc playback and BD-Live

Dolby TrueHD

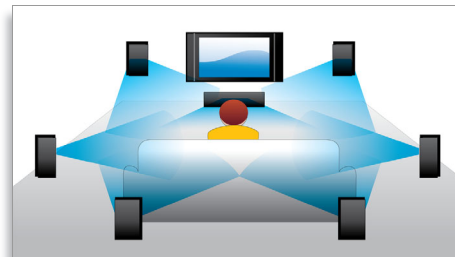


Dolby TrueHD delivers the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD completes your high definition entertainment experience.

EasyLink

You do not want to use several remote controls to control all your products in your home entertainment ecosystem. With EasyLink via HDMI-CEC, you will be able to use the STB remote control to control (e.g. switch on/off the system at one time) the other HDMI-CEC compliant devices. EasyLink uses the standard HDMI cable to transfer system commands. When you press a button on the STB remote control, it will automatically send relevant signals to the TV or other HDMI-CEC compliant devices.

Hi-Speed USB 2.0 Link

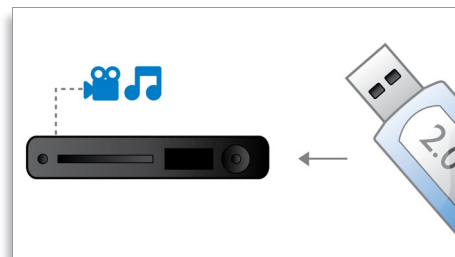

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps of original USB devices. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Specifications

Picture/Display

- Picture Enhancement: video upscaling, high def (720p, 1080i, 1080p), progressive scan
- Aspect ratio: 16:9, 21:9, 4:3

Video Playback

- Playback media: BD video, BD-R/RE 2.0, BD-ROM, DVD, DVD-Video, DVD+R/+RW, DVD-R/-RW, CD, video CD, CD-R/CD-RW, USB flash drive, DivX Ultra
- Disc playback modes: standard play, pause, search forward/reverse, slow forward, resume playback from stop, skip, disc menu, repeat, A-B Repeat, Zoom, angle
- BD Region Code: B
- DVD region code: 2
- Compatible formats: AVCHD, DivX Ultra, H.264, MPEG2, VC-1, WMV

Sound

- Output power: 2 x 50 W RMS
- Sound enhancement: class "D" digital amplifier, loudness, treble and bass control, Dolby Digital, Dolby Digital Plus, Dolby True HD, DTS

Loudspeakers

- Speaker drivers: 5" woofer, cone dome tweeter
- Loudspeaker enhancement: 2-way, speaker grilles detachable

Audio playback

- Compatible formats: MP3, PCM, WMA
- Playback media: CD, CD-R/RW, MP3-CD, MP3-DVD, WMA-CD, USB flash drive

Digital photo playback

- Playback media: CD-R/RW, DVD+R/+RW, DVD-R/-RW, USB flash drive
- Picture Compression Format: JPEG
- Picture Enhancement: high definition resolution, rotate, Zoom, slideshow with MP3 playback

Tuner/Reception/Transmission

- Tuner bands: FM stereo
- Station presets: 20
- RDS: RDS clock set, station name, programme

type

- Tuner enhancement: auto digital tuning, auto scan

Connectivity

- Audio/Video output: component video out, composite video (CVBS) output, digital coaxial out, digital optical out, HDMI out, Headphone (3.5 mm)
- Aux in: 2 x RCA (Audio)
- Others: Ethernet
- USB: full speed USB 2.0

Convenience

- Clock: on main display, sleep timer
- Alarms: CD alarm, radio alarm, USB alarm
- BD-Live (Internal 1 GB memory)
- EasyLink (HDMI-CEC): one-touch play
- Child protection: parental control
- On-Screen display languages: English, French, German, Italian, Spanish, Dutch, Swedish, Portuguese, Danish, Finnish, Polish, Turkish, Norwegian

Accessories

- Cables/Connection: audio/video cable, power cord
- User Manual: multi-lingual
- Remote control: 50-key with 2 x AAA batteries
- Others: FM antenna, Quick start guide
- Warranty: Worldwide Guarantee booklet

Power

- Power supply: 50/60 Hz
- Power supply: 220 - 240 V

Dimensions

- Main speaker dimensions (W x D): 160 x 231 mm
- Main speaker height: 255 mm
- Main unit depth: 247 mm
- Packaging width: 410 mm
- Main unit height: 98 mm
- Packaging height: 430 mm
- Main unit width: 277 mm
- Packaging depth: 325 mm

Green

- Standby power consumption: < 0.25 W



Issue date 2012-07-17

Version: 1.2.5

12 NC: 8670 000 56441
EAN: 87 12581 50542 4

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com