




Philips  
HD Media player

**Net TV**  
Built-in WiFi  
USB 2.0

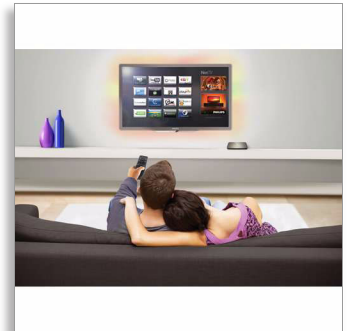

**HMP7001**

## Make Your TV a Smart TV

Explore a vast universe of multimedia content effortlessly with the Philips HD media player. Enjoy superb quality videos, music and photos from the Internet or your PC library directly on your TV - no file conversions required.

### See more

- Smart TV to enjoy online services & access multimedia on TV
- Net TV for popular online services on your TV
- DivX Plus HD Certified for high definition DivX playback
- Play video in multiple formats
- View photos in various formats

### Hear more

- Listen to music from different media files
- Dolby Digital DTS2.0 for ultimate movie experience

### Engage more

- USB 2.0 connector and SD memory card slot
- Playback media content from hard disk
- Built-in Wi-Fi to enjoy your connected media wirelessly
- DLNA PC Media Link to browse PC and home network content
- With SimplyShare, enjoy photos, music and movies on your TV

# PHILIPS

# Highlights

## DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

## Video in multiple formats

Play and enjoy a comprehensive range of video formats - from high definition formats like MPEG 1/2/4 (MPEG 4 Part 2), H.264, VC-1, H.263, VP6 (640 x 480), DivX Plus HD, DivX 3/4/5/6, Xvid, RMVB 8/9/10, RM, WMV (V9), AVI, TS, M2TS, TP, TRP, ISO, VOB, DAT, MP4, MPEG, MPG, MOV(MPEG 4, H.264), ASF, FLV (640 x 480), MKV, M4V - without the hassle of converting files. Just press Play to start watching any videos or movies in superb cinematic quality, delivered in vivid surrounding sound.

## Media content from hard disk

Relax and enjoy your media content from your hard disk without worrying about file format compatibility. Simply playback your content

knowing that your Philips player supports most popular HDD formats like FAT32, FAT, etc.

## Photo in various formats



View and enjoy your photos in a wide range of formats, including JPEG, JPG, M-JPEG, PNG, TIF, TIFF, GIF, BMP and HD JPEG – directly on your wide-screen TV! Turn your living room into a photo gallery and share wonderful memories with your friends and family.

## Music in different media files

Listen to your favorite music - whatever the audio format - and enjoy it in crystal clear sound. The Philips player allows easy access to a wide range of audio formats from Dolby Digital, AAC, RA, OGG, MKA, MP3, WAV, APE, FLAC, DTS, LPCM, PCM, WMA (V9), IMP/MS ADPCM and WMA Pro.

## Dolby Digital DTS2.0

Dolby Digital DTS2.0 for ultimate movie experience

## DLNA PC Media Link

The DLNA PC Media Link provides easy access to videos, photos and music content on your PC or home network. By connecting your media player to your home network, you will be able to access content from all DLNA certified devices seamlessly. Browse your PC

collection of multimedia from your player at a push of a button.

## SimplyShare TV



Share photos, music and movies through SimplyShare from your smart phone, tablet or computer and enjoy them on the big screen.

## Smart TV

Smart TV offers an easy & wireless TV experience on 4 pillars. Net TV lets you enjoy a wealth of online apps on your TV: rent movies, watch catch-up TV and enjoy social media. Stay in Control: change channels or enter text with your smartphone or tablet. Use SimplyShare to stream photos, music and videos from your computer, phone & tablet to your TV.

## Net TV (HD media player)

Experience a rich selection of online services with Net TV. Enjoy movies, pictures, infotainment and other online contents directly on your TV via the Philips HD media player whenever you like. Simply connect the player directly to your home network through a wired or wireless connection, then navigate and select what you want to watch with the remote control. The Philips menu gives you access to popular Net TV services fitted for your TV screen.



# Specifications

## Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Video upsampling, Smart Picture, High Def (720p, 1080i, 1080p), Video upscaling

## Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 90
- Distortion and Noise (1kHz): 65 dB
- Crosstalk (1kHz): 70 dB
- Dynamic Range (1kHz): 80 dB
- Sound System: Dolby Digital, DTS 2.0 + Digital out

## Video Playback

- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Plus™ HD, H.264, MKV, VC-1, WMV, XviD
- Video disc playback system: PAL, NTSC

## Audio Playback

- Compression format: PCM, MP3, Dolby Digital, DTS, WMA
- MP3 bit rates: 32 - 320 kbps
- Playback Media: SD Card, USB flash drive

## Still Picture Playback

- Picture Compression Format: JPEG, BMP, GIF, PNG, TIFF
- Picture Enhancement: Flip photos, Rotate, Zoom, Slideshow with MP3 playback

## Connectivity

- Front / Side connections: USB, SD/SDHC Card
- Rear Connections: CVBS & analog audio L/R output, Digital optical out, HDMI output, eSATA
- Network connections: 802.11 b/g/n, RJ45

## Convenience

- On-Screen Display languages: English, Polish, Russian, Czech, Danish, Finnish, French, German, Greek, Hungarian, Italian, Portuguese, Romanian, Slovak, Spanish, Swedish, Turkish, Ukraine
- EasyLink (HDMI-CEC): One touch play, One touch standby
- Firmware upgradeable: Firmware upgradeable via USB

## Power

- Power supply: 230V, 50Hz
- Power consumption: < 10 W
- Standby power consumption: < 1 W

## Accessories

- Included accessories: Audio/Video cable, World Wide Warranty leaflet, Remote Control, 2 x AAA Batteries, User Manual, Power cord

## Dimensions

- Set dimensions (W x H x D): 91 x 54 x 160 mm
- Packaging dimensions (W x H x D): 250 x 163 x 82 mm

## Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: DivX, JPEG Still pictures, MP3, AVI (DivX, DIV5, DX50, DXMF), DivX 3.11, DivX 5, DivX Ultra, H.264, MPEG1, MPEG2, MPEG-4 (DivX-4 DivX-5 DivX-6), RealMedia Audio, RealMedia Video, WMA, WMV9/VC1, XviD

## Digital Photo Playback

- Picture Compression Format: BMP, GIF, JPEG, PNG, TIFF
- Picture Enhancement: Zoom
- Playback Media: SD card, USB flash drive



Issue date 2014-08-01

Version: 1.0.1

12 NC: 8670 000 94743  
EAN: 87 12581 65873 1

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Net TV, service offering is dependent on country and subject to terms of use.

\* The BBC iPlayer service is available in the UK only