



Philips  
CD Soundmachine

Bluetooth  
USB



PX5112T

## Enjoy your music wherever you go

with USB direct

Want to enjoy the music collections stored at portable music player without using headphone? Plug the USB Direct socket to the Philips CD soundmachine and enjoy your favorite digital music through the powerful speakers - anytime, anywhere.

### Enjoy your music from different sources

- Stream music wirelessly via Bluetooth™ from your smartphone
- USB Direct for MP3 music playback
- Play MP3-CD, CD and CD-R/RW
- FM/MW (AM) stereo tuner
- Audio-in for easy portable music playback

### Easy to use

- CD Shuffle/Repeat for personalized music enjoyment
- 20-track CD programmable
- 20 preset tuning stations

### Powerful sound you can hear and feel

- Dynamic Bass Boost for deep and dramatic sound
- 15W maximum output power

# PHILIPS

# Highlights

## USB Direct for MP3 music


USB Direct for MP3 music playback

## Play MP3-CD, CD and CD-R/RW



MP3 stands for "MPEG 1 Audio layer-7.6 cm (3)". MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. MP3 has become the standard audio compression format used on the world wide web, allowing quick and easy audio file transfer.

## CD Shuffle/Repeat

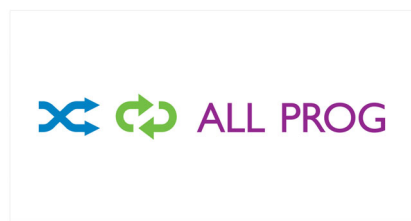

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.



## 20-track CD programmable

The CD programmable playback feature allows you to enjoy your favorite tracks in the sequence you want.

## Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## Stream music via Bluetooth™



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

# Specifications

## Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD
- Disc playback modes: fast forward/backward, next/previous album search, next/previous track search, repeat/shuffle/program
- Bluetooth
- USB playback mode: fast forward/backward, next/previous track search, play/pause, repeat/shuffle/program

## Tuner/Reception/Transmission

- Tuner bands: FM, MW (AM)
- Antenna: FM antenna

## Sound

- Sound system: stereo
- Volume control: rotary (digital)
- Output Power: Total 15W

## Loudspeakers

- No. of built-in speakers: 2

## Connectivity

- USB: USB host
- Audio in (3.5mm)
- Bluetooth profiles: A2DP, AVRCP

## Power

- Power supply: AC or battery input
- Mains power: AC 110V-127V and 220-240V selectable
- Battery type: D size (LR20)
- Battery voltage: 1.5 V
- Number of batteries: 6

## Convenience

- Display type: LCD display
- Loader type: top

## Accessories

- Cables/Connection: power cord, \*Flat pin adaptor
- Warranty: Warranty leaflet
- Others: User Manual

## Dimensions

- Product dimensions (WxDxH): 390 x 258 x 162 mm
- Packaging dimensions (WxDxH): 446 x 309 x 198 mm
- Product weight: 3 kg
- Weight incl. Packaging: 4 kg



Issue date 2015-11-12

Version: 1.0.2

12 NC: 8670 001 32106  
EAN: 48 95185 61847 0

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)