



Philips  
Cordless phone

1.8" display/white backlight  
Handset speakerphone

D2501W



## Enjoy the view

The Philips D250 Cordless Phone packs HQ Sound and a large, clear display into a sleek, ergonomic design. Enjoy smart privacy modes, great comfort and sound—all in an easy, handsfree style.

### Nice and simple

- Easy to read 4.6 cm (1.8") display with white backlight
- Freestanding handset with a speaker for easy hands-free calls
- Textured back cover for non-slip grip
- Programmable hot keys for quick dial
- Up to 16 hours of talk time on a single charge
- Privacy settings: call block and call barring
- Caller ID – so you always know who is calling\*

### Crystal clear sound

- Advanced sound testing and tuning for superb voice quality
- Optimised antenna layout for great reception in any room
- The Parametric Equaliser delivers pure and clear sound

### Eco-conscious product

- Zero power emission when ECO+ mode is activated

**PHILIPS**

# Highlights

## 4.6 cm (1.8") display

Easy to read 4.6 cm (1.8") display with white backlight

## Caller ID\*



Sometimes it's good to know who's calling before you answer. And our Caller ID lets you keep track of who's on the other end of the line.

## Handset speakerphone



Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

## Non-slip grip



The rear of the handset is treated with a special texture for added comfort and better grip.

## Programmable hot keys



Now calling the people you care about most is easier than ever. With simple one-touch dialling, you will never have to search for their number again. You can programme up to 2 keys for instant calling.

## Up to 16 hours talk time




Up to 16 hours of talk time on a single charge

## Advanced sound testing

We test the sound quality of our DECT phones the same way as high-end headphone manufacturers do. Using an advanced ear simulator, we can accurately re-create the way people actually hear. This helps our acoustic engineers to measure and fine-tune things like frequency response, distortion and overall hearing perception, to create perfect voice reproduction.

## Optimised antenna layout

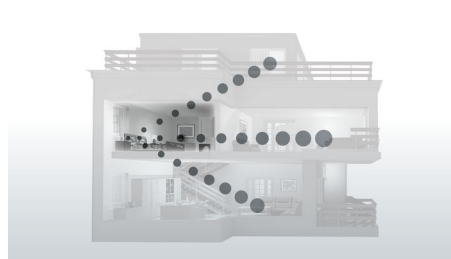

Our optimised antenna layout ensures strong and stable reception, even in areas of the house where cordless transmission is difficult.

Now you can take a call wherever you are in the house, and enjoy a long, uninterrupted conversation even as you walk around.

## Parametric Equaliser



Our telephones use parametric equalisation in the digital sound processing to fine tune the sound response back to the intended linear frequency response curve, delivering sound that is pure and clear, for each conversation.

## Multiple privacy settings

Value your privacy and quiet time at home? Black List restricts specific numbers or those starting with certain digits, protecting you from receiving unwanted calls. You can choose to block up to 4 sets of numbers. Each set can consist of 1 to 24 digits. If the number of an incoming call starts with any of these number sets or are the exact numbers that you choose to block, your phone will not ring. With Call Barring, you can avoid the surprise of expensive phone bills by blocking calls from specific numbers starting with certain digits (for example, pay per call numbers).

## Eco-conscious product



Philips phones are energy efficient and designed to be respectful to the environment. The level of radiation emitted is reduced by up to 95% when the phone is charging. With ECO+ mode activation the radiation drops to zero.

# Specifications

## Convenience

- Menu structure in the handset: List Menu
- Speakerphone — talk hands-free
- Call barring: Restrict the phone from ringing on specific incoming numbers
- Signal strength indicator: 3 bar indicator
- Battery level indicator: 3 bar battery icon
- Date/Time display
- Programmable hot keys: Key 1 and 2
- Call Management: Call Waiting\*, Caller ID\*, Microphone mute, Missed Calls, Received Calls, Dialed calls
- Keypad lock
- Key tone on/off
- Auto hang up
- Number of keys: 20
- Base Station keys: Paging key
- Up to 16 hrs talk time
- Charge time: 8 hours
- Line cord length: 1.8 m
- Power cord length: 1.8 m
- Range: Open field <300 m; indoor <50 m
- Block callers/Blacklist\*: Restrict the phone from ringing on specific incoming numbers
- Non-slip grip: Uniform texture
- Up to 200 hrs standby time

## Sound

- Volume control on handset
- Ringtones on handset: 10 standard
- HQ-Sound

## Picture/Display

- Display size: 4.6 cm/1.8"
- Display type: 1-line dot matrix + 1-line numeric + icons

- Backlight: Yes
- Backlight colour: White

## Memory Capacity

- Phonebook: 50 names and numbers
- Redial List Capacity: Last 10 numbers
- Call log entries: 20 entries
- Phonebook store in the base

## Power

- Battery Capacity: 500 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240 V ~50/60 Hz
- Power Consumption: < 0.7 W

## Security

- Transmission encryption: Yes

## Network Features

- Compatible: GAP

## SAR Value

- Philips handsets: <0.1 W/kg

## Eco Design

- Eco+

## Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 18.4 x 13.5 x 5.9 cm
- Gross weight: 0.345 kg
- Net weight: 0.255 kg
- Tare weight: 0.09 kg
- EAN: 48 95229 10120 3



Issue date 2022-07-20

Version: 4.0.1

12 NC: 8670 001 61676  
EAN: 48 95229 10120 3

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* \*\*This feature requires additional subscription to Caller ID service.  
Please check with your local network operator for details.