

Philips
DVD home theatre system



HTS3568DW



Powerful surround, high definition video

with wireless rear speakers

Enjoy an incredible home theatre experience with this powerful system. Wireless rear speakers eliminate cable clutter and deliver high quality surround sound. Also enjoy sharp pictures with HDMI 1080p upscaling and convenient iPod docking.

Connect and enjoy multiple sources

- Dock included for iPod
- Hi-Speed USB 2.0 Link plays media from USB flash drives

Brings audio and video to life

- HDMI 1080p upscales to high definition for sharper pictures
- DoubleBASS for an extended, deep bass experience
- DTS, Dolby Digital and Pro Logic II surround sound
- Karaoke scoring for fun and exciting song contests at home

Plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays WMV, DivX, WMA, MP3 and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL


Easy to set up and use

- Wireless rear speakers for fewer wires across your room
- EasyLink for easy control of connected devices via HDMI CEC

PHILIPS
sense and simplicity


Highlights

Wireless rear speakers

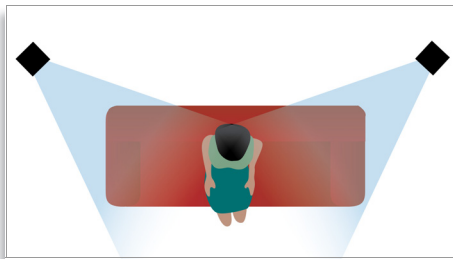

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections.

Hi-Speed USB 2.0 Link

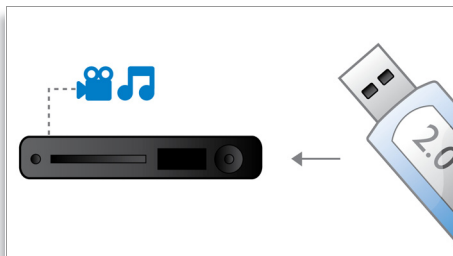

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the


line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

EasyLink



EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

DTS, DolbyDigital, ProLogic II

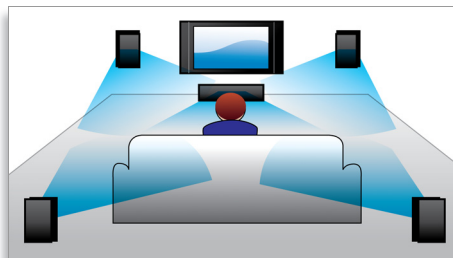

A built-in DTS and Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

DivX Ultra Certified




With DivX support, you can enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files such as movies, trailers and music videos on media, e.g. CD-R/RW and DVD recordable discs. DivX Ultra combines DivX playback with great features including integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Karaoke scoring



Add a dash of fun to your Karaoke sessions with Karaoke Scoring. Allow your performance to be judged for further improvement, or for friendly competitions. Karaoke Scoring automatically rates your singing and gives you a humorous picture that is tied to how well you did. The fun never ends.

Plays it all

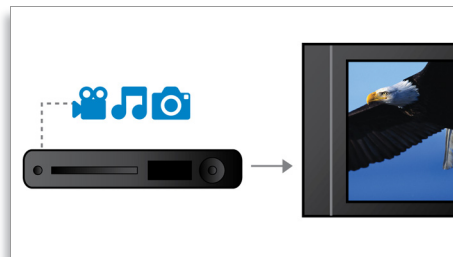

Play virtually any media format you want - whether they are WMV, DivX, MP3s or JPEGs.



Specifications

Product dimensions

- Cable length: 0 cm
- Product dimensions (W x H x D): 0 x 0 x 0 cm
- Weight: 0 kg

Packaging dimensions

- Packaging dimensions (W x H x D):
76.5 x 62 x 41 cm
- Net weight: 25.73 kg
- Gross weight: 29.53 kg
- Tare weight: 3.8 kg

Outer Box

- Outer carton (L x W x H): 76.5 x 41 x 62 cm
- Net weight: 25.73 kg
- Gross weight: 29.53 kg
- Tare weight: 3.8 kg

Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive Scan

Sound

- Output power (RMS): 4 x 125 W, 2 x 250 W
- Total Output Power: 1000 W
- D/A converter: 24-bit, 192 kHz
- Frequency response: 180-14000 Hz
- Signal to noise ratio: >65 dB
- Sound System: DTS, Dolby Digital, Dolby Prologic II, Stereo
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- Equalizer settings: Rock, Action, Classic, Concert, Drama, Lounge, Gaming, Sports

Video Playback

- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2, WMV
- Playback Media: DVD-Video, CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD
- Video disc playback system: NTSC, PAL

Audio Playback

- Compression format: MP3, WMA
- Playback Media: DVD+R/+RW, Audio CD, CD-R/-RW, DVD-R/-RW
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Picture compression format: JPEG
- Playback Media: DVD+R/+RW, CD-R/RW, DVD-R/-RW, USB flash drive
- Picture enhancement: Rotate, Zoom, Slideshow with music playback

Tuner/Reception/Transmission

- No. of pre-set Audio Channels: 40
- Tuner Bands: FM

Connectivity

- Front/Side connections: Microphone input 3.5 mm jack, Hi-Speed USB, MP3 Line-in
- Rear Connections: HDMI output, Component Video output, S-Video out, Composite video (CVBS) output, Digital coaxial in, AUX in, Wireless Ready Connector, FM Antenna, Easy-Fit speaker connectors

Power

- Power supply: 120/230 VAC, 50/60 Hz
- Standby power consumption: < 1 W
- Power consumption: 180 W

Loudspeakers

- Satellite Speaker: 4 Floor standing pillars, Wireless rear speakers
- Satellite speaker drivers: 3" full-range woofer
- Satellite speaker impedance: 6 ohm
- Satellite speaker freq range: 150-20,000 Hz
- Centre Speaker: Magnetically shielded, 3-way
- Centre speaker drivers: 1 x 2" tweeter, 2 x 2.5" woofers
- Centre freq range: 150-20,000 Hz
- Centre speaker impedance: 3 ohm
- Subwoofer driver: 8" high-efficiency woofer
- Subwoofer freq range: 40-150 Hz
- Subwoofer impedance: 8 ohm
- Subwoofer type: Passive

Accessories

- Included Accessories: Dock for iPod, Wireless transmitter, Wireless receiver, Remote Control, 2 x AAA Batteries, CVBS video cable, FM antenna, Power cord, Quick start guide, User Manual, World Wide Warranty leaflet

Dimensions

- Set dimensions (W x H x D): 435 x 58 x 360 mm
- Set weight: 4.04 kg
- Transmitter dimensions (W x H x D):
48.5 x 88.3 x 49 mm
- Receiver dimensions (W x H x D):
126 x 131.5 x 126 mm
- Surround Speaker dimensions (W x H x D):
262 x 1199 x 264 mm
- Surround Speaker Weight: 3.53 kg
- Center speaker dimensions (W x H x D):
440 x 105 x 75 mm
- Centre Speaker Weight: 1.39 kg
- Subwoofer dimensions (W x H x D):
163 x 363 x 369 mm
- Subwoofer Weight: 5.08 kg
- Packaging dimensions (W x H x D):
765 x 620 x 410 mm
- Weight incl. Packaging: 28 kg



Issue date 2009-04-21

Version: 2.0.7

12 NC: 8670 000 36338
EAN: 87 12581 38945 1

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com