

Philips BeNear
Cordless phone

30 min answering machine

1.6" display/ blue backlight
Speakerphone
2 handsets

CD3952W



Bringing people closer

Talk handsfree

Great sound reproduction, without having to hold the phone to your ear – so you can talk completely handsfree. With simple installation, a user-friendly menu and an inbuilt answering machine, a great chat has never been easier.

Crystal clear sound

- Handset speakerphone allows you to talk handsfree
- Parametric Equalizer delivers pure and clear sound
- Acoustic echo cancellation keeps your conversation echo-free
- Optimized antenna layout for great reception in any room
- Advanced sound testing & tuning for superb voice quality

Nice and simple

- Ultimate convenience through easy setup
- Easy to read, 4.1cm (1.6") dot-matrix display
- Save up to 100 favorite contacts in your phonebook
- Up to 17 hours of talk time
- Up to 30 min. message on your answering machine

Eco-conscious product

- Up to 95% reduction of emitted radiation in charging mode
- Low power consumption: < 0.65 W in stand-by mode


PHILIPS

Cordless phone

30 min answering machine 1.6" display/ blue backlight, Speakerphone, 2 handsets

Highlights

Easy setup

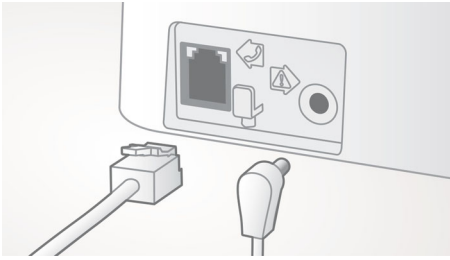

Ultimate convenience through easy set up. Simplified installation - Plug & Play product

Handset speakerphone



Handsfree mode uses a built-in loud speaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

Advanced sound testing



We test the sound quality of our DECT phones the same way as high-end headphone manufacturers do. Using an advanced ear simulator, we can accurately re-create the way people actually hear. This helps our acoustic engineers to measure and fine-tune things like frequency response, distortion and overall hearing perception, to create perfect voice reproduction for both handset and handsfree modes.

Acoustic echo cancellation


No more of those annoying echoes when you are talking on the phone. With our acoustic echo cancellation, you always get a clear, undisturbed connection.

Parametric Equalizer



Our telephones use parametric equalization in the digital sound processing to fine-tune the sound response back to the intended linear frequency response curve, delivering sound that is pure and clear, for each conversation.

4.1cm(1.6") dot-matrix display

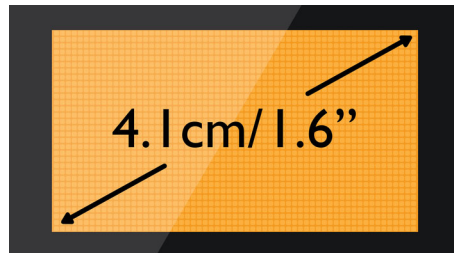

Easy to read, 4.1cm (1.6") dot-matrix display

100-name phone book



Always have the phone numbers of your loved ones available: Save up to 100 names in your phonebook.

CD3952W/DE

Up to 30 min. recording



With up to 30 minutes recording time, you'll never miss an important message.

Optimized antenna layout



Our optimized antenna layout ensures strong and stable reception – even in areas of the house where cordless transmission is difficult. Now you can take a call wherever you are in the house, and enjoy a long, uninterrupted conversation even as you walk around.

Less radiation while charging



Up to 95% reduction of emitted radiation in charging mode

Specifications

Sound

- Volume control on handset
- Ringtones on handset: 10 polyphonic
- Speakerphone

Picture/Display

- Display size: 4.1cm / 1.6"
- Backlight: Yes
- Backlight color: Blue
- Display type: 1-line dot matrix + 2 line icons

Answering Machine

- Recording time capacity: up to 30 minutes
- Pre-recorded OGM
- Loud speaker on base
- Answering Machine control: from base and handset

Convenience

- Menu structure in the handset: List Menu
- Signal strength indicator: 3- bar indicator
- Battery level indicator: 3- bar battery icon
- Date / Time display
- Base Station keys: Paging key
- Battery charge indication
- Charge time: 8 hours
- Signal strength indication
- Programmable hot keys: Key 1 and 2
- Call Management: Call Waiting*, Caller ID*, Microphone mute, Missed Calls, Received Calls
- Key tone on/off
- Auto hang up
- Multi base capability: 1
- Multi handset capability: Up to 4
- Speakerphone - talk handsfree
- Range: Open field <300m; in door <50m
- Intercom - multiple handsets
- Up to 17 hrs talk time
- Up to 250 hrs standby time
- Line cord length: 1.8m
- Power cord length: 1.8m

Memory Capacity

- Phonebook: 100 names and numbers
- Redial List Capacity: 10 entries
- Call log entries: 20 entries
- Phonebook store in the base

Power

- Battery Capacity: 650 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240V ~50/60Hz

Security

- Transmission encryption : Yes

Network Features

- Compatible: GAP

SAR Value

- Philips handsets: <0.1 W/kg

Eco Design

- EcoMode: automatic

Packaging dimensions

- Packaging dimensions (W x H x D): 18.5 x 13.6 x 10.4 cm
- Packaging dimensions (W x H x D): 7.3 x 5.4 x 4.1 inch
- EAN: 87 12581 67792 3
- Gross weight: 0.718 kg
- Gross weight: 1.583 lb
- Nett weight: 1.290 lb
- Nett weight: 0.585 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.133 kg
- Tare weight: 0.293 lb
- Type of shelf placement: Laying



Issue date 2019-05-30

Version: 2.0.4

12 NC: 8670 001 00302
EAN: 87 12581 67792 3

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com