


Philips BeNear
Cordless phone

4000-series

1.8" display/ white backlight
Speakerphone
2 handsets

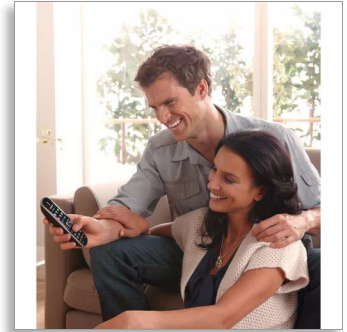

CD4912B

Bringing people closer

Bright display, exciting sound

Outstanding sound quality of HQ-Sound meets beautiful design. The large, full-color display makes navigating easy and improves readability – not to mention making a stylish statement in your home.

Exceptional sound

- HQ-Sound: high quality acoustic engineering for superb sound
- MySound profiles to match your sound preference
- Full-duplex echo cancellation ensures a smooth conversation
- Optimized antenna layout for great reception in any room
- Handset speakerphone allows you to talk handsfree

As simple as ever

- High contrast, 4.6 cm (1.8") TFT color display
- Icon-based menu for easy navigation
- Save up to 200 favorite contacts in your phonebook
- Up to 20 hours of talk time

Eco-conscious product

- 60% reduction of radiation when ECO mode is activated
- Low power consumption: < 0.50 W in stand-by mode

PHILIPS

Cordless phone
4000-series 1.8" display/ white backlight, Speakerphone, 2 handsets

Highlights

HQ-Sound




Philips cordless phones with HQ-Sound: build upon decades of experience and breakthrough innovations in developing Hi-Fi audio products and high-end headphones to deliver excellent voice clarity on our DECT phones. When it comes to improving sound quality, our acoustics engineers and architects have thought of everything – high quality components, digital signal processing, precise acoustic design, advanced testing and fine-tuning. The result is sound that is crisp, clear and authentic. Sound so good and natural, it is almost like being there in person.

Full-duplex echo cancellation



Natural conversation does not involve taking turns – there is always some natural overlap. Now thanks to our full-duplex echo cancellation, you can hear perfectly, even if you are both talking at the same time.

MySound profiles

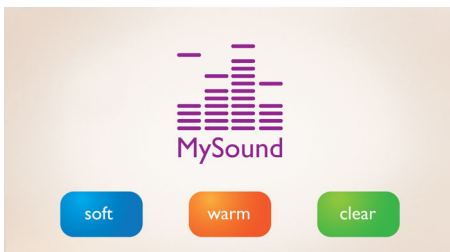

Sound perception is subjective, and everyone has their own listening preference. MySound

brings personality back to every conversation by allowing you to choose the audio profile that best matches your sound preferences: Clear – to make voices sound crisper and clearer; Soft – for friendly, softer tones; Warm – to make voices sound welcoming and warm.

Handset speakerphone




Handsfree mode uses a built-in loud speaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

200-name phone book



Always have the phone numbers of your loved ones available: Save up to 200 names in your phonebook.

4.6cm (1.8") TFT color display

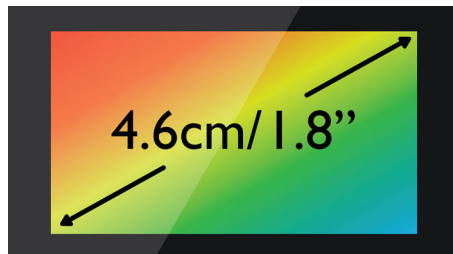

High contrast, 4.6 cm (1.8") TFT color display

CD4912B/51

Icon menu



With an easy-to-use, modern icon menu, you can find everything you need at a glance.

Optimized antenna layout



Our optimized antenna layout ensures strong and stable reception – even in areas of the house where cordless transmission is difficult. Now you can take a call wherever you are in the house, and enjoy a long, uninterrupted conversation even as you walk around.

Low power consumption: < 0.50 W



Philips phones are energy efficient and are designed to be respectful to the environment. Now the power consumed in stand-by mode is less than < 0.50 W.

Specifications

Sound

- HQ-Sound
- Sound Profile: MySound
- Volume control on handset
- Ringtones on handset: 10 polyphonic

Picture/Display

- Display size: 4.6cm / 1.8"
- Display type: TFT color 256K
- Backlight: Yes
- Backlight color: White

Convenience

- Menu structure in the handset: Icon Menu
- Speakerphone - talk handsfree
- Personalization: Silence mode and Night mode
- Call barring: Restrict the phone from making specific outgoing calls
- Signal strength indicator: 3- bar indicator
- Battery level indicator: 5- bar battery icon
- Intercom - multiple handsets
- Room monitoring
- Date / Time display
- Alarm Clock
- Event light on the handset
- Programmable hot keys: Key 1 and 2
- Call Management: Call Waiting*, AOH/ Caller ID, Microphone mute, Missed Calls, Received Calls
- Key tone on/off
- Auto Registration
- Auto hang up
- Multi base capability: 1
- Multi handset capability: Up to 5
- Number of keys: 22
- Backlit keypad: White
- Enlarge dialing digit
- Base Station keys: Paging key
- Up to 20 hrs talk time

- Up to 300 hrs standby time
- Charge time: 8 hours
- Line cord length: 1.8m
- Power cord length: 1.8m
- Range: Open field <300m; in door <50m

Memory Capacity

- VIP Caller Identification
- Phonebook: 200 names and numbers
- Redial List Capacity: 20 entries
- Call log entries: 50 entries
- Phonebook store in the base

Power

- Battery capacity: 600 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240V ~50/60Hz

Network Features

- Compatible: GAP

SAR Value

- Philips handsets: <0.1 W/kg

Eco Design

- EcoMode: automatic & manual

Packaging dimensions

- Packaging dimensions (W x H x D):
18.5 x 13.6 x 10.7 cm
- EAN: 87 12581 64378 2
- Gross weight: 0.7021 kg
- Nett weight: 0.5836 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.1185 kg
- Type of shelf placement: Laying



Issue date 2015-02-25

Version: 4.1.4

12 NC: 8670 000 89993
EAN: 87 12581 64378 2

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com