

Philips
Open-ear wireless sports
headphones

Open-ear fit

Bone conduction
Lightweight and rugged
IP67 dust/water protection



TAA6606BK

Run safe, ride free

Press play on a new way to listen while you train! These bone-conducting wireless sports headphones leave you free to talk to fellow athletes-and retain complete awareness of your surroundings. Your runs and rides just got an upgrade.

Hear differently

- Total awareness. Open-ear design
- Bone conduction. Sounds without earphones
- IP67 dustproof and waterproof
- Be seen. LED running lights

Sound without earphones. From run to ride

- Lightweight. Tough. Comfortable
- Ready to go. Carry pouch included
- Custom sound control and more. Philips Headphones app

From training days to race day

- Train all day. 9 hours play time
- Charge for 15 minutes, train an extra hour
- Integrated controls. Clear calls. Easy pairing
- Built-in mics remove environmental sound on a call

PHILIPS

Open-ear wireless sports headphones

Open-ear fit Bone conduction, Lightweight and rugged, IP67 dust/water protection

TAA6606BK/00

Highlights

9 hours play time

With 9 hours play time from a single charge, these bone-conducting open-ear headphones are with you for the length of the race. A full charge takes 2 hours via USB-C. Need an extra boost? Just 15 minutes charging gives you an extra hour of play time.

Bone conduction



Bone conduction technology transmits sound through the bones of your skull, leaving your ears completely open to your environment. You can enjoy your music and podcasts, and still hear your feet hitting the trail. Or a car getting too close to your rear wheel.

Built-in mics

Built-in mics remove environmental sound on a call

Carry pouch included

Ready to go. Carry pouch included

Charge for 15 minutes

Charge for 15 minutes, train an extra hour


Easy control and pairing

Buttons on the frame let you pause your playlist, take calls, control volume, and more. The headphones are ready to pair the instant you switch on Bluetooth. Built-in mics remove environmental sound, so your voice is clearly heard when you call someone.

IP67 dust/water protection


Ride your favorite trail. Run in a rainstorm. An IP67 rating ensures nothing can hold back the adventure! However hard you sweat, and wherever you go, your headphones will keep up. When you're done, and the headphones are dry, store them in the soft carry pouch.

Lightweight and comfortable

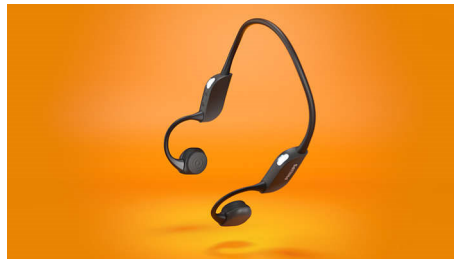

Experience a new kind of comfort. The securely fitting, lightweight frame is engineered from titanium-and wrapped in rubber to keep it flexible. With nothing in or on your ears, you're free to train without distraction.

Open-ear design

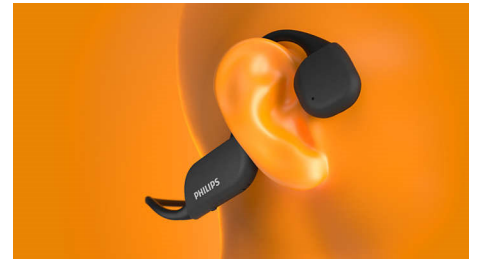

Need total awareness of your surroundings while you run or ride? The unique open-ear design of these bone-conducting headphones means they're perfect for race day. With nothing in your ears at all, you'll hear everything you need to-and your music too.

Philips Headphones app

The Philips Headphones app lets you control the LED running lights and puts you in charge of the music you're listening to. Enhance the bass. Tone down the treble. You can adjust sound levels yourself or choose from preset listening styles.

Safe LED

Run with confidence-whether it's a night race or evening training. LED running lights on the rear of the frame keep you visible in dim environments. You can control the LEDs via the Philips Headphones app.

Specifications

Sound

- Frequency range: 130 - 16 000 Hz
- Speaker diameter: 15 mm
- Impedance: 4 Ohm
- Maximum power input: 300 mW
- Sensitivity: 87 dB (1K Hz)
- Driver type: Dynamic

Connectivity

- Bluetooth version: 5.2
- Wireless
- Bluetooth profiles: A2DP, AVRCP, HFP
- Maximum range: Up to 10 m
- Supported codec: SBC
- Type of wireless transmission: Bluetooth

Outer Carton

- Length: 40.2 cm
- Number of consumer packagings: 24
- Width: 37.5 cm
- Gross weight: 9.305 kg
- Height: 47 cm
- GTIN: 1 48 95229 11818 5
- Nett weight: 1.776 kg
- Tare weight: 7.529 kg

Convenience

- Volume control
- Water resistance: IP67
- Philips Headphones app support
- Firmware updates possible
- Type of controls: Button

Inner Carton

- Length: 19.2 cm
- Number of consumer packagings: 3
- Width: 18 cm
- Height: 21.8 cm
- Nett weight: 0.222 kg
- Gross weight: 1.024 kg
- Tare weight: 0.802 kg
- GTIN: 2 48 95229 11818 2

Power

- Rechargeable
- Number of batteries: 1 pcs
- Music play time: 9 hour(s)
- Talk time: 8 hr

- Charging time: 2 hour(s)
- Fast charging time: 15mins for 1 hr
- Battery weight (Total): 3.2 g
- Battery capacity(Headphones): 155 mAh
- Battery life standby time: 80 hr
- Battery type(Headphones): Lithium Polymer (built-in)

Packaging dimensions

- Height: 22.5 cm
- Packaging type: Box
- Type of shelf placement: Hanging
- Width: 17 cm
- Depth: 6 cm
- Number of products included: 1
- EAN: 48 95229 11818 8
- Gross weight: 0.282 kg
- Nett weight: 0.074 kg
- Tare weight: 0.208 kg

Product dimensions

- Height: 4.7 cm
- Width: 13.5 cm
- Depth: 9.7 cm
- Weight: 0.035 kg

Accessories

- Others: 1 pcs soft pouch
- Quick Start Guide
- Charging cable: USB-C cable, 500 mm

Design

- Color: Black
- Ear fitting: Bone-conducting
- In-ear fitting type: Open fit

Telecommunication

- Microphone for call: 2 mics
- ENC microphone

UPC

- UPC: 8 40063 20212 2

Voice assistant

- Voice assistant compatible
- Voice assistant activation: Manual
- Voice assistant support



Issue date 2024-03-08

Version: 9.0.2

EAN: 48 95229 11818 8

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Battery life of playtime is approximate and may vary depending on application condition.