



wireless portable speaker

- Bluetooth®
- Rechargeable battery
- 2W

BT50B/00

Big sound that fits in a fist

Live life with music streamed wirelessly from one compact, round and easy to carry speaker. Bright colors help you pick one that fits your style and a built-in rechargeable battery keeps music pumping wherever and whenever you take it.

Benefits

Impressive sound

- Anti-clipping function for loud, distortion free music
- Advanced audio performance with a compact design

Simplicity in use

- Wireless music streaming via Bluetooth


- Audio-in for easy connection to almost any electronic device

Designed for grab and go

- Built-in rechargeable battery for music playback anywhere

Features

Wireless music streaming

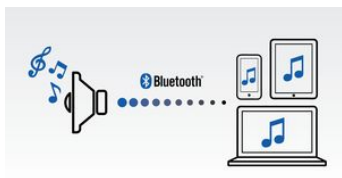


or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets

PHILIPS

Anti-clipping function

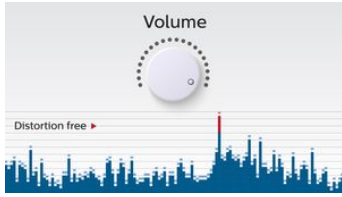

Anti-Clipping lets you play music louder and keeps it high quality, even when the battery is low. It accepts a range of input signals, from 300mV to 1000mV and keeps your speakers safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping

without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, yet anti-clipping reduces peaks caused by low battery, keeping music distortion free.

Audio-in



Specifications

[field not found 'disclaimer_text']

Compatibility

iPad	iPad 1 iPad 2 new iPad iPad mini iPad with Retina display
iPhone	iPhone 3 iPhone 3GS iPhone 4 iPhone 4S iPhone 5 iPhone 5C iPhone 5S
iPod touch	3rd generation or later
Android tablets & smartphones work with other Bluetooth-enabled device	with Android 2.1 and Bluetooth 2.1 or above Bluetooth 4.0 or below Yes

Design and finishing

Color	Black
-------	-------

Connectivity

Bluetooth profiles	A2DP AVRCP HFP
Bluetooth range	Line of sight, 10M or 30FT
Audio in (3.5mm)	Yes
USB charging	Yes

Sound

Output power (RMS)	2W
Sound System	Mono

Loudspeakers

Speaker driver	1 x 1.5"
----------------	----------

Power

Operating time on battery	6 hr
Battery type	lithium polymer (built-in)

Accessories

Included accessories	USB cable for PC charging World Wide Warranty leaflet Quick install guide
----------------------	---

Dimensions

Product dimensions (WxDxH)	6.1 x 6.1 x 7.6 cm
Packaging dimensions (WxDxH)	8.1 x 9.5 x 14 cm
Product weight	0.09 kg
Weight incl. Packaging	0.2 kg



data subject to change
2020, July 8

Version: 2.0.9
EAN: 4895185606101

© 2020 Koninklijke Philips N.V.
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com