



Philips  
Car audio video system

8.9 cm (3.5") touch screen

Bluetooth  
DVD

**CED370**



## Seamless music and video enjoyment on the road

Philips CED370 features a 8.9 cm/3.5" wide (16:9) LCD display for video & photo playback for ultimate entertainment in your car. Also enjoy movies & music from multiple sources and never miss a call due to its built-in Bluetooth® receiver.

### Enrich your AV entertainment experience

- Play DVD, DVD+/-R, DVD+/-RW, (S)VCD, DivX® and MPEG4 movies
- USB Direct and SDHC card slots for music and video playback
- MP3 Link for portable music playback
- AV-IN for portable video and music playback

### Superb performance with full features

- 3-band parametric equalizer with 8 presets
- Built-in 50W x 4 amplifiers for excellent sound quality
- Dynamic Bass Boost electronically enhances the low tones
- Super anti-shock protection for smooth music enjoyment
- Built-in Bluetooth receiver for call and music streaming
- Rear-view camera mode for backing up safety
- Dual video outputs for entertainment in rear seats

### Design that blends into your car

- Detachable flip-down front panel for anti-theft security

# PHILIPS

Car audio video system  
8.9 cm (3.5") touch screen Bluetooth, DVD

CED370/00

# Highlights

## DBB Dynamic Bass Boost



Activate the Dynamic Bass Boost (DBB), and the low-end bass frequencies are electronically enhanced to achieve consistent sound reproduction, especially when the speaker volume is set at a low level. You hear impressive bass at all times.

## Detachable front panel



Detachable flip-down front panel for anti-theft security

## MP3 Link




The MP3 link connectivity allows direct playback of MP3 content from portable media

players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

## Super anti-shock protection

Super anti-shock protection for smooth music enjoyment

## USB Direct and SDHC card slots

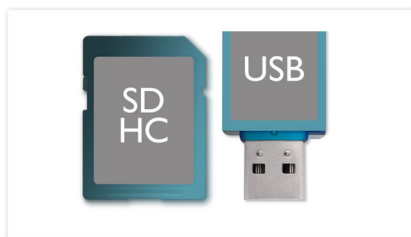

Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more music, videos and photos via the built-in USB Direct and SDHC card slots.

## Built-in Bluetooth receiver



The Bluetooth hands-free feature lets you use your mobile phone safely while driving and you don't have to miss any important calls. With the built-in Bluetooth® receiver, you can also

conveniently stream your music files from your phone to your car entertainment system.

## Perfect-fit 1.0 DIN chassis



Perfect-fit 1.0 DIN chassis design

## Rear-view camera mode



Rear-view camera mode for backing up safety

## Dual video outputs

Dual video outputs for entertainment in rear seats



# Specifications

## Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size: 3.5"
- Resolution: 320(W) x 240(H) x 3(RGB)
- Aspect ratio: Widescreen
- Brightness: 350 cd/m<sup>2</sup>
- Contrast ratio (typical): 500 (typical)
- Effective viewing area: 76.84 x 43.20 mm
- Pixel pitch: 0.08(W) x 0.180(H)
- Key illumination: Blue/Red

## Video Playback

- Playback Media: DVD, DVD-R/-RW, DVD+R/+RW, DVD+RW, Video CD, SVCD, Picture CD, USB flash drive
- Disc Playback Modes: A-B Repeat, Angle, Chapter repeat, Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Resume Playback from Stop, Search forward/reverse, Still Picture, Zoom
- Video disc playback system: NTSC, PAL

## Audio Playback

- Playback Media: Audio CD, CD, CD-R, CD-RW, MP3-CD, WMA, WMA-CD, USB flash drive, SD Card
- Compression format: Dolby Digital, MP3, WMA
- Disc Playback Modes: Fast Forward/Backward, Introsan, Next/Previous Album Search, Next/Previous Track Search
- ID3 Tag support: Song title, artist, album
- MP3 bit rates: 32-320kbps and variable bit rate
- USB Direct / SD Modes: Play/Pause, Fast Backward/Fast Forward, Previous/Next, Repeat, Shuffle

## Tuner/Reception/Transmission

- Tuner Bands: AM, FM Stereo
- Auto digital tuning
- Tuner Enhancements: Auto search and store
- No. of preset stations: 18(FM), 12(AM)
- RDS: Station Name, Station Information, Radio Text, Program Type, News & Traffic, RDS Clock Set

## Sound

- Equalizer: 3-bands
- Equalizer settings: Classic, Jazz, Pop, Rock, Flat, Optimal, Techno, User defined
- Sound Enhancement: Dynamic Bass Boost
- Output power (MAX): 50Wx4 channels
- Output power (RMS): 22Wx4 channels (4 ohms, 10% T.H.D.)

## Connectivity

- USB: USB 2.0 Host
- Memory card: SD, SDHC
- MP3-Link: For portable MP3 music playback
- Video Output - Analog: Composite video out
- Preamp output: 2 pairs RCA(L/R)
- Sub-woofer preamp output: x1 (With gain control)
- AV input: Composite (CVBS) x1
- Bluetooth profiles: A2DP, AVRCP, Handsfree
- Bluetooth version: 2.0
- Navigation ready: Yes (Navigation box sold separately)
- Parking camera input: Yes (Switched on automatically in car reverse)

## Security/Anti-theft

- Front panel: Detachable & flip-down
- Display blackout: 10/20 sec selectable

## Accessories

- Remote control: Slim remote with battery
- User Manual: English, Spanish, Traditional Chinese
- Quick start guide: English, Spanish, Traditional Chinese

## Power

- Power supply: 12V DC

## Dimensions

- Product dimensions (W x H x D):  
188 x 58 x 193 mm
- Chassis: 1 Din



Issue date 2014-02-12

Version: 2.0.1

12 NC: 8670 000 65146  
EAN: 69 23410 70285 9

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)