



In-ear wireless sports headphones

- Flexible two-way design
- 20 hours play time
- Clear calls. Mono mode
- IPX7 waterproof and sweatproof

TAA5205BK/00

Always the fit you want

From your morning runs to afternoons in the office. These true wireless earbuds boast a detachable ear-hook design so you can go with the fit you want. You get up to 20 hours play time with the charging case, and they're IPX7 waterproof.

Benefits

Ready for you

- Built for your workouts. Ready for your day
- IPX7 waterproof and sweat-proof
- Detachable ear-hook design. For the style you want
- Choice of 3 colorways

Sounds good. Feels good.

- Clear calls. Mono mode
- 3 sizes of interchangeable silicone ear-tip cover

- 6 mm neodymium drivers. Clear sound with powerful bass


Easy to use

- Rock-solid connectivity. Integrated earbud controls
- Charging case. Get up to 20 hours of play time
- 5 hours play time from one charge
- Charge for 15 minutes to get 1 extra hour

PHILIPS

Features

Built for your workouts

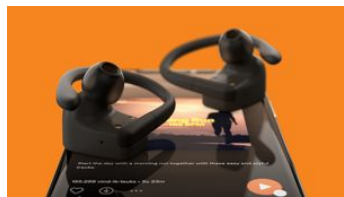


6 mm drivers deliver crisp, clear sound with powerful bass. From your favorite playlists to podcasts and more-move through your day with the sounds that keep you going.

IPX7 waterproof



These true wireless sports headphones are IPX7-rated-which means they can withstand total immersion in water up to 1 m deep for up to 30 minutes. They'll stay in place-no matter how hard you sweat or what shape your ears are.

Detachable ear-hook design

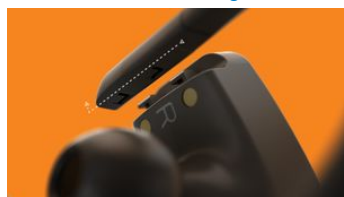

Whether it's a run in the park or an epic HIIT session, the ear-hook design keeps these headphones snug and secure. You get a choice of three different size silicone ear-tip covers, and the ear hooks can be removed when you're not working out.

Specifications

[field not found 'disclaimer_text']

Sound

Impedance	16 Ohm
Speaker diameter	6 mm
Sensitivity	111 dB (1K Hz)
Frequency range	20 - 20 000 Hz
Maximum power input	5 mW
Driver type	Dynamic

Connectivity

Bluetooth version	5.0
Supported codec	AAC SBC
Maximum range	Up to 10 m
Bluetooth profiles	A2DP AVRCP HFP
Type of wireless transmission	Bluetooth
Wireless	Yes
Microphone	Built-in microphone

Convenience

Mono mode for TWS	Yes
Water resistance	IPX7

Clear calls. Mono mode

Wear them both, or wear just one. Mono mode lets you use a single earbud to talk, and you can swap between earbuds without missing a word. Ideal if you're on a long call.

Rock-solid connectivity

The Bluetooth connection is stable, and your headphones are ready to pair the instant you take them out of the charging case. Controls on each earbud make it easy to control music and calls.

Charging case.

A fully charged case gives you an extra 15 hours play time. You get 5 hours play time from a single charge, and a speedy 15-minute charge gives you an extra hour. The case takes 2 hours to charge fully via the included USB-C cable.

Type of controls	Touch
Design	
Color	Black
Wearing style	Ear-hook
Ear coupling material	Silicone
Ear fitting	In-ear
In-ear fitting type	Earhook Silicone ear tip
Power	
Music play time	5 +15 hr
Talk time	5 hr
Battery type(Earbud)	Lithium-ion (built-in)
Battery capacity(Earbud)	50 mAh
Battery type(Charging case)	Lithium-ion (built-in)
Battery capacity(Case)	450 mAh
Battery life standby time	200 hr
Charging time	2 hr
Fast charging time	15 mins for 1 hr
Number of batteries	3 pcs

Battery weight (Total)	13 g
Rechargeable	Yes

Voice assistant

Voice assistant support	Yes
Voice assistant activation	Voice controlled
Voice assistant compatible	Apple Siri Google Assistant

Accessories

Charging cable	USB-C cable, 500 mm
Charging case	Yes
Detachable earhook	3 pairs
Eartips	3 pairs (S/M/L)
Quick Start Guide	Yes
Others	A pair of lock cover

Inner Carton

Number of consumer packagings	3
Length	14.4 cm
Width	10 cm
Height	16 cm
Gross weight	0.654 kg
Nett weight	0.3666 kg
Tare weight	0.2874 kg
GTIN	2 48 95229 11188 6

Outer Carton

Number of consumer packagings	24
-------------------------------	----

Length	31 cm
Width	22 cm
Height	36 cm
Gross weight	5.6 kg
Nett weight	2.9328 kg
Tare weight	2.6672 kg
GTIN	1 48 95229 11188 9

Product dimensions

Height	3.5 cm
Width	8.7 cm
Depth	6 cm
Cable length	0 cm
Weight	0.087 kg

Packaging dimensions

Number of products included	1
Height	17.5 cm
Width	9.5 cm
Depth	4.5 cm
Gross weight	0.195 kg
Nett weight	0.1222 kg
Tare weight	0.0728 kg
EAN	48 95229 11188 2
Packaging type	Box
Type of shelf placement	Hanging

UPC

UPC	8 40063 20162 0
-----	-----------------



data subject to change
2023, June 20

Version: 8.0.2
EAN: 4895229111882

© 2023 Koninklijke Philips N.V.
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com